

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com


 
FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE								WORKHORSE (UNV)			LONGHORSE				
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
TWIN																
1 X 5W	3	2				2								2	2	
2 X 5W			1			1		9						1	1	
3 X 5W								8								
4 X 5W					7			7								7
1 X 7W	3	2												2		
2 X 7W		1				1		9						1	1	
3 X 7W								8								
4 X 7W								7								
1 X 9W	3	2												2		
2 X 9W		1				1								1	1	
3 X 9W								8								
4 X 9W								7								
1 X 11W	3															
2 X 11W		1				1								1	1	
3 X 11W								8								
4 X 11W								7								
1 X 13W		3	2	2		2		14			3	14"		3	2	
2 X 13W			1	1	9			11				9				9
3 X 13W					8		8									8
4 X 13W					7		7									7
1 X 18W		3	2	2	14	2		14			3	14"		3	2	
2 X 18W			1	1	9			9				11				9
3 X 18W					8		8									8
4 X 18W							7									7
1 X 24W		3	2	2	14	3		14						3	3	14
2 X 24W				1	9			9	11							9
3 X 24W								8								8
1 X 27W		3	2	2	14	3		14						3	3	14
2 X 27W					9			9	11							9
1 X 24/27W											3	14"	14"			
2 X 24/27W												11				
3 X 24/27W																
1 X 28W PA				3	14			10								14
2 X 28W PA					11											11
1 X 36/39W			2	2	14	3		10			3	10			3	14
2 X 36/39W							9	11		22		11	11			9
3 X 36/39W									8	25						
4 X 36/39W									7	27						
5 X 36/39W										28						
6 X 36/39W										29						
1 X 40W				2	14	2		14			3		14		2	
2 X 40W							9	11				11				9
3 X 40W							8		8	25						8
4 X 40W									7	27						
5 X 40W										28						
1 X 50W				3	14	3	14	10			3	10			3	14

* Power Corrected at 277V

4 PIN ONLY
TWIN

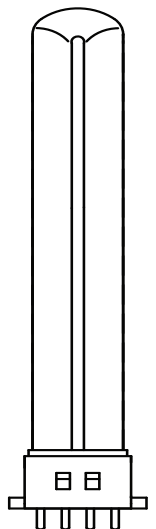

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower


Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE								WORKHORSE (UNV)			LONGHORSE				
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
2 X 50W							11	11		22		11	11			9
3 X 50W										8	25					
4 X 50W										7	27					
1 X 55W				3	10		10	12		16		12	10			10
2 X 55W								11		9						11
3 X 55W										8	26					
1 X 55W PA					10			13								12
2 X 55W PA											23					
3 X 55W PA											26					
1 X 96W											17					12
2 X 96W											24					
FLAT QUAD																
1 X 18W		3	2	2	14	3		14						3	3	14
2 X 18W					9		9	11								9
3 X 18W							8									8
1 X 24W		3	2	2	14	3		14						3	3	
2 X 24W				1	9		9	11								9
3 X 24W							8									8
1 X 28 PA				3	10											10
1 X 36W				2	14	3	14	10							3	14
2 X 36W					9		9	11								9
3 X 36W										25						
1 X 55 PA					10			13								12
1 X 96 PA																12
QUAD																
1 X 10W	3					2								2	2	
2 X 10W						1		9						1	1	
3 X 10W								8								
4 X 10W					7			7								
1 X 13W	3	2									2			2		
2 X 13W		1				1					1			1	1	
3 X 13W								8			8					
4 X 13W								7			7	7				
1 X 18W	3	2				2					2			2	2	
2 X 18W				1		1		9			9	9			1	
3 X 18W					8		8	8			8	8				8
4 X 18W							7				7					7
1 X 26W		3	2	2	14	3		14			3	14*	14*	3	3	
2 X 26W					9		9	11			11					9
3 X 26W							8									8
4 X 26W							7									7
1 X 27W PA					10			13								10
TRIPLE																
1 X 13W	3	2									2			2		
2 X 13W		1				1					1			1	1	
3 X 13W								8			8					


* Power Corrected at 277V

4 PIN ONLY

FLAT QUAD

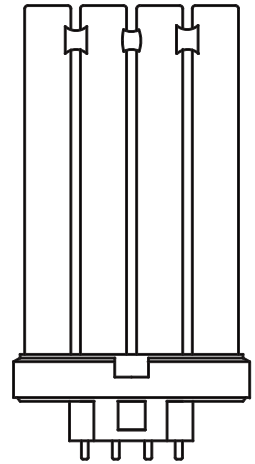

QUAD

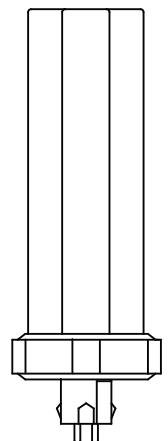

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower


Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE (UNV)													LONGHORSE			
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5	
4 X 13W								7					7	7			
1 X 18W	3	2				2						2			2	2	
2 X 18W				1									9	9			
3 X 18W					8								8	8			
4 X 18W								7						7		7	
1 X 26W		3	2	2	14	3						3	14*	14*	3	3	
2 X 26W					9			9	11					11			9
3 X 26W								8									8
4 X 26W								7									7
1 X 32W		3	2	2	14	3						3		14*	3	3	14
2 X 32W					9			9	11					11			9
3 X 32W								8									8
1 X 42W												3		14			
2 X 42W													11				
2-D																	
1 X 10W	3	2													2		
2 X 10W		1				1			9						1	1	
3 X 10W									8								
4 X 10W									7								
1 X 16W	3	2				2									2	2	
2 X 16W		1	1						9								
3 X 16W									8								
4 X 16W					7			7	7								7
1 X 21W		2				2									2	2	
2 X 21W				1					9								
3 X 21W					8			8	8								8
4 X 21W								7									7
1 X 28W		3	2	2		2			14						3	2	
2 X 28W				1	9			9	11								9
3 X 28W								8									8
4 X 28W								7									7
1 X 38W				2	14	3		14	14						3		14
2 X 38W								9	11								9
4 X 38W									7								
1 X 55W					12			12	14								12
T9 CIRCLINE																	
1 X 20W		3	2	2	14	3			14			3		14*	3	3	14
2 X 20W					9			9	11								9
4 X 20W									7								
1 X 22W		3	2	2	14	3			14			3		14*	3	3	14
2 X 22W					9			9	11								9
4 X 22W									7								
1 X 32W			3	3	14				10				10				14
2 X 32W					11			9									11
3 X 32W									8								
4 X 32W									7								


* Power Corrected at 277V

4 PIN ONLY


TRIPLE

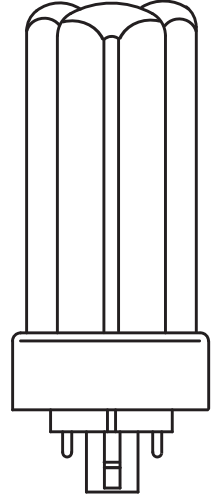

2-D

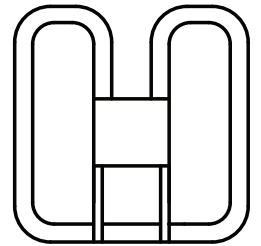

T9 CIRCLINE

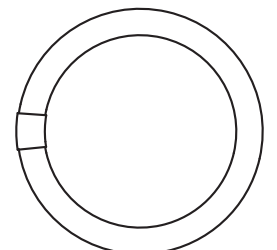

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com


FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE (UNV)													LONGHORSE		
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
1 X 40W				2	14	3	14	10			3				3	14
2 X 40W							9	11								9
3 X 40W									8							
4 X 40W									7							
1 X 22+32				1			9	11				11	11			9
1 X 32+40							11					11	11			11
T5 CIRCLINE																
1 X 22W		3	2	2	14	3		14			3	14"	14"	3	3	
2 X 22W					9		9	11								9
3 X 22W					8		8									8
1 X 40W				2	14	3		14			3	10	14		3	14
2 X 40W							9	11								9
1 X 55W OS				3	10			12				12	12			
2 X 55W OS							11	9								11
1 X 22+40							9	11								9
T2 LINEAR																
1 X F6	2															
2 X F6	1															
1 X F8	2															
2 X F8	1															
1 X F11	2															
2 X F11	1															
1 X F13	2															
2 X F13	1															
T5 LINEAR																
1 X F4	3										2"			2		
2 X F4		1				1					1"			1	1	
3 X F4								8			8"					
4 X F4								7			7"	7"				
1 X F6	3										2"			2		
2 X F6		1				1					1			1	1	
3 X F6								8			8"					
4 X F6								7			7"	7"				
1 X F8	2													2		
2 X F8		1				1					1			1	1	
4 X F8								7				7				
1 X F13	3	2									2			2		
2 X F13		1				1					1	9"		1	1	
3 X F13								8			8					
4 X F13								7			7	7				
1 X F14	3	2									2			2		
2 X F14		1				1					1	9		1	1	
3 X F14								8			8					
4 X F14								7			7	7				
1 X F21	3	2									2			2		
2 X F21		1				1					1	9		1	1	

* Power Corrected at 277V

T5 CIRCLINE

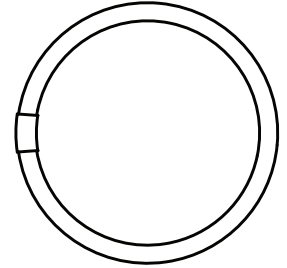

T2 LINEAR



1/4" DIAMETER

T5 LINEAR



5/8" DIAMETER

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE								WORKHORSE (UNV)			LONGHORSE				
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
3 X F21									8			8	8			
4 X F21									7			7	7			
1 X F28	3	2									2			2		
2 X F28						1					1	9		1	1	
3 X F28									8			8	8			
4 X F28									7							
1 X F35														2		
2 X F35						1									1	
3 X F35									8							
4 X F35									7							
T5 HO LINEAR																
1 X F24 HO		3	2	2	14	3		14			3	14*	14*	3	3	
2 X F24 HO				1	9			9	11			11	11			9
3 X F24 HO								8								8
4 X F24 HO								7								7
5 X F24 HO																28
6 X F24 HO																29
1 X F39 HO				2	14	3		14			3		14		3	14
2 X F39 HO								9	11			11	11			9
3 X F39 HO								8								8
4 X F39 HO										7						27
5 X F39 HO																28
1 X F54 HO				3	14			14	12			10	10			14
2 X F54 HO								11								11
3 X F54 HO										8						
4 X F54 HO										7						
1 X F80 HO										12						10
2 X F80 HO										9						
T5 UV LINEAR																
1 X 90W										12						
1 X 110W										12						
T6 UV LINEAR																
1 X 38W										12						
2 X 50W										12						
3 X 55W										12						
4 X 90W														10		
1 X 120W														10		
2 X 150W														10		
T6 SLIMLINE																
1 X F42	3	2				2					2	14*		2	2	
2 X F42				1		1		9				9	9		1	
3 X F42								8				8	8			
4 X F42								7				7	7			
1 X F64						2									2	
2 X F64						1		9							1	
3 X F64								8								

* Power Corrected at 277V

T5 LINEAR



 
5/8" DIAMETER

T5 HO




5/8" DIAMETER

T5 UV LINEAR



5/8" DIAMETER

 T6 UV LINEAR



3/4" DIAMETER

T6 SLIMLINE



3/4" DIAMETER

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE								WORKHORSE (UNV)			LONGHORSE				
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
T8 LINEAR																
1 X F13		3	2	2	14	3		14			3	14*	14*	3	3	
2 X F13				1	9			11				11*				9
3 X F13					8		8									8
4 X F13							7		7	27						
5 X F13										28						
6 X F13										29						
1 X F14		3	2	2	14	3		14						3	3	14
2 X F14					9			11								9
3 X F14							8			25						8
4 X F14							7		7	27						
5 X F14										28						
6 X F14										29						
1 X F15		3	2	2		3		14			3	14*	14*	3	3	
2 X F15			1	1	9			11				11*	9*			9
3 X F15					8		8									8
4 X F15					7		7									7
5 X F15										28						
6 X F15										29						
1 X F17		3		2		2					2	14*		3	2	
2 X F17			1	1					9		1	9*	9			
3 X F17					8		8					8	8			8
4 X F17					7		7					7	7			7
6 X F17										29						
1 X F18		3	2	2	14	3		14			3	14*	14*	3	3	
2 X F18					9		9	11				11				9
3 X F18							8			25						8
4 X F18							7			27						
5 X F18										28						
6 X F18										29						
1 X F25		3		2		2					2	14*		3	2	
2 X F25				1					9		1	9	9			
3 X F25							8					8	8			8
4 X F25							7					7	7			7
6 X F25										29						
1 X F30		3	2	2	14	3		14			3	14*	14*	3	3	
2 X F30					9		9	11			1	11				9
3 X F30							8			25						8
4 X F30							7		7	27						
5 X F30										28						
6 X F30										29						
1 X F32		3		2		2					2	14		3	2	
2 X F32				1					9			9	9			
3 X F32							8					8	8			8
4 X F32							7					7	7			7
6 X F32										29						

T8 LINEAR



1" DIAMETER

* Power Corrected at 277V

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE (UNV)													LONGHORSE		
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
1 X F25/32											2	14				
2 X F25/32											1	9	9			
3 X F25/32												8	8			
4 X F25/32												7	7			
1 X F28/32											2	14				
2 X F28/32											1	9	9			
3 X F28/32												8	8			
4 X F28/32												7	7			
1 X F30/32											2	14				
2 X F30/32											1	9	9			
3 X F30/32												8	8			
4 X F30/32												7	7			
1 X F40				2		2					2	14			2	
2 X F40								9				9	9			
3 X F40												8	8			8
1 X F58									10							
2 X F58									11		22					11
3 X F58										8						
1 X F70									10							
2 X F70										22						11
T8 SLIMLINE																
1 X F72						2					2	14			2	
2 X F72						1		9				9	9		1	
3 X F72									8							
4 X F72									7							
T8 U-LAMP																
1 X FB016											2	14"				
2 X FB016											1	9"	9			
3 X FB016												8	8			
4 X FB016												7	7			
1 X FB024											2	14"				
2 X FB024											1	9	9			
3 X FB024												8	8			
4 X FB024												7	7			
1 X FB031											2	14"				
2 X FB031											1	9	9			
3 X FB031												8	8			
4 X FB031												7	7			
T8 HO																
1 X F48 HO				3	14		14	10				10				14
2 X F48 HO										22			11			11
3 X F48 HO									8	25						
4 X F48 HO										27						
1 X F60 HO				3	14		14	10				10				14
2 X F60 HO										22			11			11
3 X F60 HO									8	25						

T8 LINEAR




1" DIAMETER

T8 SLIMLINE




1" DIAMETER

T8 U-LAMP

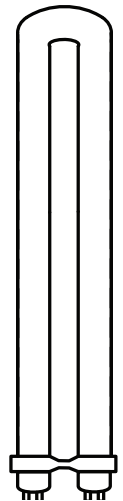

T8 HO

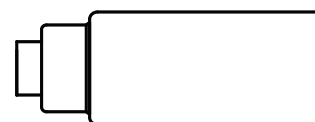

1" DIAMETER

* Power Corrected at 277V

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com


FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE											WORKHORSE (UNV)			LONGHORSE		
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5	
4 X F60 HO										27							
1 X F72 HO				3	14		14	10				10				14	
2 X F72 HO										22							
3 X F72 HO									8	25							
T10 LINEAR																	
1 X F40				3	14	3	10				3	10			3	14	
2 X F40							11			22		11	11			11	
3 X F40										25							
4 X F40										27							
5 X F40										28							
T10 VHO																	
1 X F48 HO									12	19							
1 X F60 HO									12	19							
1 X F72 HO									12	19							
1 X F96 HO										19							
T12 LINEAR																	
1 X F14		3	2	2	14	3	14	10			3		14*	3	3	14	
2 X F14					9		9	11				11*				9	
3 X F14										25							
4 X F14									7	27							
5 X F14										28							
6 X F14										29							
1 X F15		3	2	2		3		14			3	14*	14*	3	3		
2 X F15				1	9		9	11					9*			9	
3 X F15					8		8									8	
4 X F15							7			27						7	
5 X F15										28							
6 X F15										29							
1 X F20		3	2	2	14	3		14			3	14*	14*	3	3	14	
2 X F20					9		9	11				11				9	
3 X F20							8			25							
4 X F20							7	7		27							
5 X F20										28							
6 X F20										29							
1 X F25			3	3	14		14	10			3	10*				14	
2 X F25					11		9			22		11	11			11	
3 X F25									8	25							
4 X F25									7	27							
1 X F30			3	3	14	3	14	10			3	10	14*		3	14	
2 X F30					11		9	11		22		11	11			11	
3 X F30									8	25							
4 X F30									7	27							
5 X F30										28							
1 X F40				3	14	3	14	10			3	10	14*		3	14	
2 X F40							9	11		22		11	11			11	
3 X F40									8	25							


* Power Corrected at 277V

T10 LINEAR

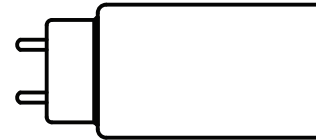


1 1/4" DIAMETER

T10 VHO

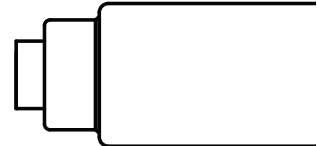

1 1/4" DIAMETER

T12 LINEAR

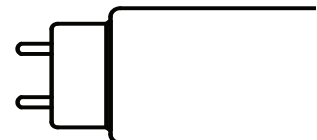

1 1/2" DIAMETER

LAMP CHART

BALLAST DIMENSIONS PG. 10

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key* to ensure correct sizing.
- <https://www.fulham.com/wiring>

REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower

Fulham reserves the right to alter these compatibility charts without notice, please refer to www.fulham.com for latest information.

LAMPS	WORKHORSE (UNV)													LONGHORSE		
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
4 X F40									7	27						
5 X F40										28						
T12 SLIMLINE																
1 X F24			3		14	3	14	10			3	10*	14*		3	14
2 X F24					11		9	11		22		11	11			11
3 X F24									8	25						
4 X F24									7	27						
5 X F24										28						
1 X F36				3	14	3	14	10			3	10*	14*		3	14
2 X F36					11		9	11		22		11	11			11
3 X F36									8	25						
4 X F36									7	27						
5 X F36										28						
1 X F42				3	14	3		10			3	10	14*		3	14
2 X F42								11		22		11	11			11
3 X F42									8	25						
4 X F42									7	27						
5 X F42										28						
1 X F48				3	14	3	14	10			3	10	14*		3	14
2 X F48							9	11		22		11	11			11
3 X F48									8	25						
4 X F48									7	27						
5 X F48										28						
1 X F60				2	14	3	14	10			3	10	14		3	14
2 X F60							9	11		22		11	11			11
3 X F60									8	25						
4 X F60									7	27						
1 X F64				2	14	3	14	10			3	10	14		3	14
2 X F64							9	11		22		11	11			11
3 X F64									8	25						
4 X F64									7	27						
1 X F72				2	14	3	14	10			3	10	14		3	14
2 X F72							9	11		22						11
3 X F72									8	25						
4 X F72										27		10	14			
1 X F84				2			14	10							3	14
2 X F84							9	11		22						11
3 X F84										25		10	14			
1 X F96							14	10				10	14			14
2 X F96							9	11		22						9
3 X F96									8							
T12 HO																
1 X F18 HO					12		12	13	14			13*	12*			12
2 X F18 HO									11	23						
3 X F18 HO										26						
1 X F24 HO					12		12	13	14			13*	12*			12


* Power Corrected at 277V

T12 SLIMLINE



1 1/2" DIAMETER

T12 HO

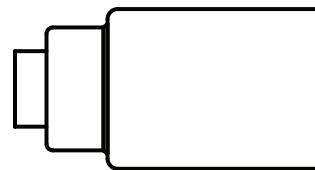

1 1/2" DIAMETER

1. Find your lamp type.
 2. On left, find the quantity and wattage of your lamps.
 3. Look across the grid to find your ballast.
 4. Find the corresponding wiring diagram on pages 11-12.
 5. Check ballast dimension key to ensure correct sizing.
- <https://www.fulham.com/wiring>



REVISED NOV 2021
See website for latest.

Fulham Co., Inc.
12705 South Van Ness Avenue, Hawthorne, CA 90250
Tel (323) 779-2980 Fax (323) 754-9060
order@fulham.com www.fulham.com

FULHAM
Harness the Horsepower

LAMPS	WORKHORSE (UNV)												LONGHORSE			
	WH 1	WH 2	WH 22	WH 3	WH 33	WH 4	WH 5	WH 6	WH 7	WH 8	WH 41	WH 43	WH 44	LH 2	LH 4	LH 5
2 X F24 HO									11	23						
3 X F24 HO										26						
1 X F30 HO					12		12	13	14			13	12			12
2 X F30 HO									11	23						
3 X F30 HO										26						
1 X F36 HO					12		12	13	14			13	12			12
2 X F36 HO									11	23						
3 X F36 HO										26						
1 X F42 HO					12		12	13	14			13	12			12
2 X F42 HO									11	23						
3 X F42 HO										26						
1 X F48 HO					12		12	13	14			13	12			12
2 X F48 HO									11	23						
3 X F48 HO										26						
1 X F60 HO							12	13	14			13	12			12
2 X F60 HO									11	23						
3 X F60 HO										26						
1 X F64 HO							12	13	14			13	12			12
2 X F64 HO									11	23						
1 X F72 HO							12	13	14			13	12			12
2 X F72 HO									11	23						
1 X F84 HO							12	13	14			13	12			12
2 X F84 HO									11	23						
1 X F96 HO							12	13	14				12			12
2 X F96 HO									11	23						
T12 VHO																
1 X F48 VHO									12	19						
1 X F60 VHO									12	19						
1 X F72 VHO									12	19						
1 X F96 VHO									12	19						

* Power Corrected at 277V

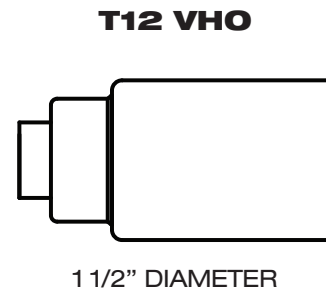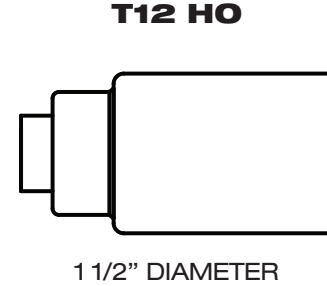

BALLAST DIMENSIONS (LxWxH) (in)

MODEL NUMBER	Dimensions (Inches)
WH1-120-L	6 x 1 x 0.75
WH2-120-C	3.3 x 1.75 x 1
WH2-120-L	5.5 x 1 x 1
WH22-120-C	3.3 x 1.75 x 1
WH22-120-L	5.5 x 1 x 1
WH3-120-C	3.8 x 2.5 x 1
WH3-120-L	6.5 x 1.5 x 1
WH33-120-C	3.8 x 3.1 x 1
WH33-120-L	6.5 x 1.5 x 1


MODEL NUMBER	Dimensions (Inches)
WH4-120-L	6.5 x 1.5 x 1
WH5-120-L	8.5 x 1.7 x 1
WH6-120-L	8.5 x 1.7 x 1
WH7-120-H	11.75 x 3.25 x 1.25
WH7-120-L	19.25 x 1.7 x 1
WH8-120-L	19.25 x 1.7 x 1
LH2-120-L	9.5 x 1.72 x 1
LH4-120-L	9.5 x 1.72 x 1
LH5-120-L	13.3 x 1.72 x 1



WH (UNV)	
WH41-UNV-L	9.48 x 1.41 x 1.02
WH43-UNV-L	9.48 x 1.41 x 1.02
WH44-UNV-L	9.48 x 1.41 x 1.02

Fulham reserves the right to alter these compatibility charts without notice; please refer to www.fulham.com for latest information.

1. Connect both pin sets of the socket before connecting "RED" & "YELLOW" wires.
2. Ground case in accordance with the "National Electric Code."
3. With Linear lamp use a starting aid.
4. Ballast case temperature can not exceed 70°C.
5. Remote mounting distance varies with lamp type. Contact customer service.
6. Ballast can not be used with dimmer switch but can be used with occupancy sensor. (Note: Sensor will shorten lamp life.)

7. Cap and insulate any unused red power wire. → = Cap
8. When connecting two red power wires, they must be joined to make one wire before attaching to the socket.
9. BLS (Back Leads with Studs) Dimensions:
Stud Length: 5/8", Stud Size: 8/32, Center to Center: 2"
10. Running lamps in series will reduce the turn-on cycles of both lamps.
(Configuration diagrams 4, 5, 6)

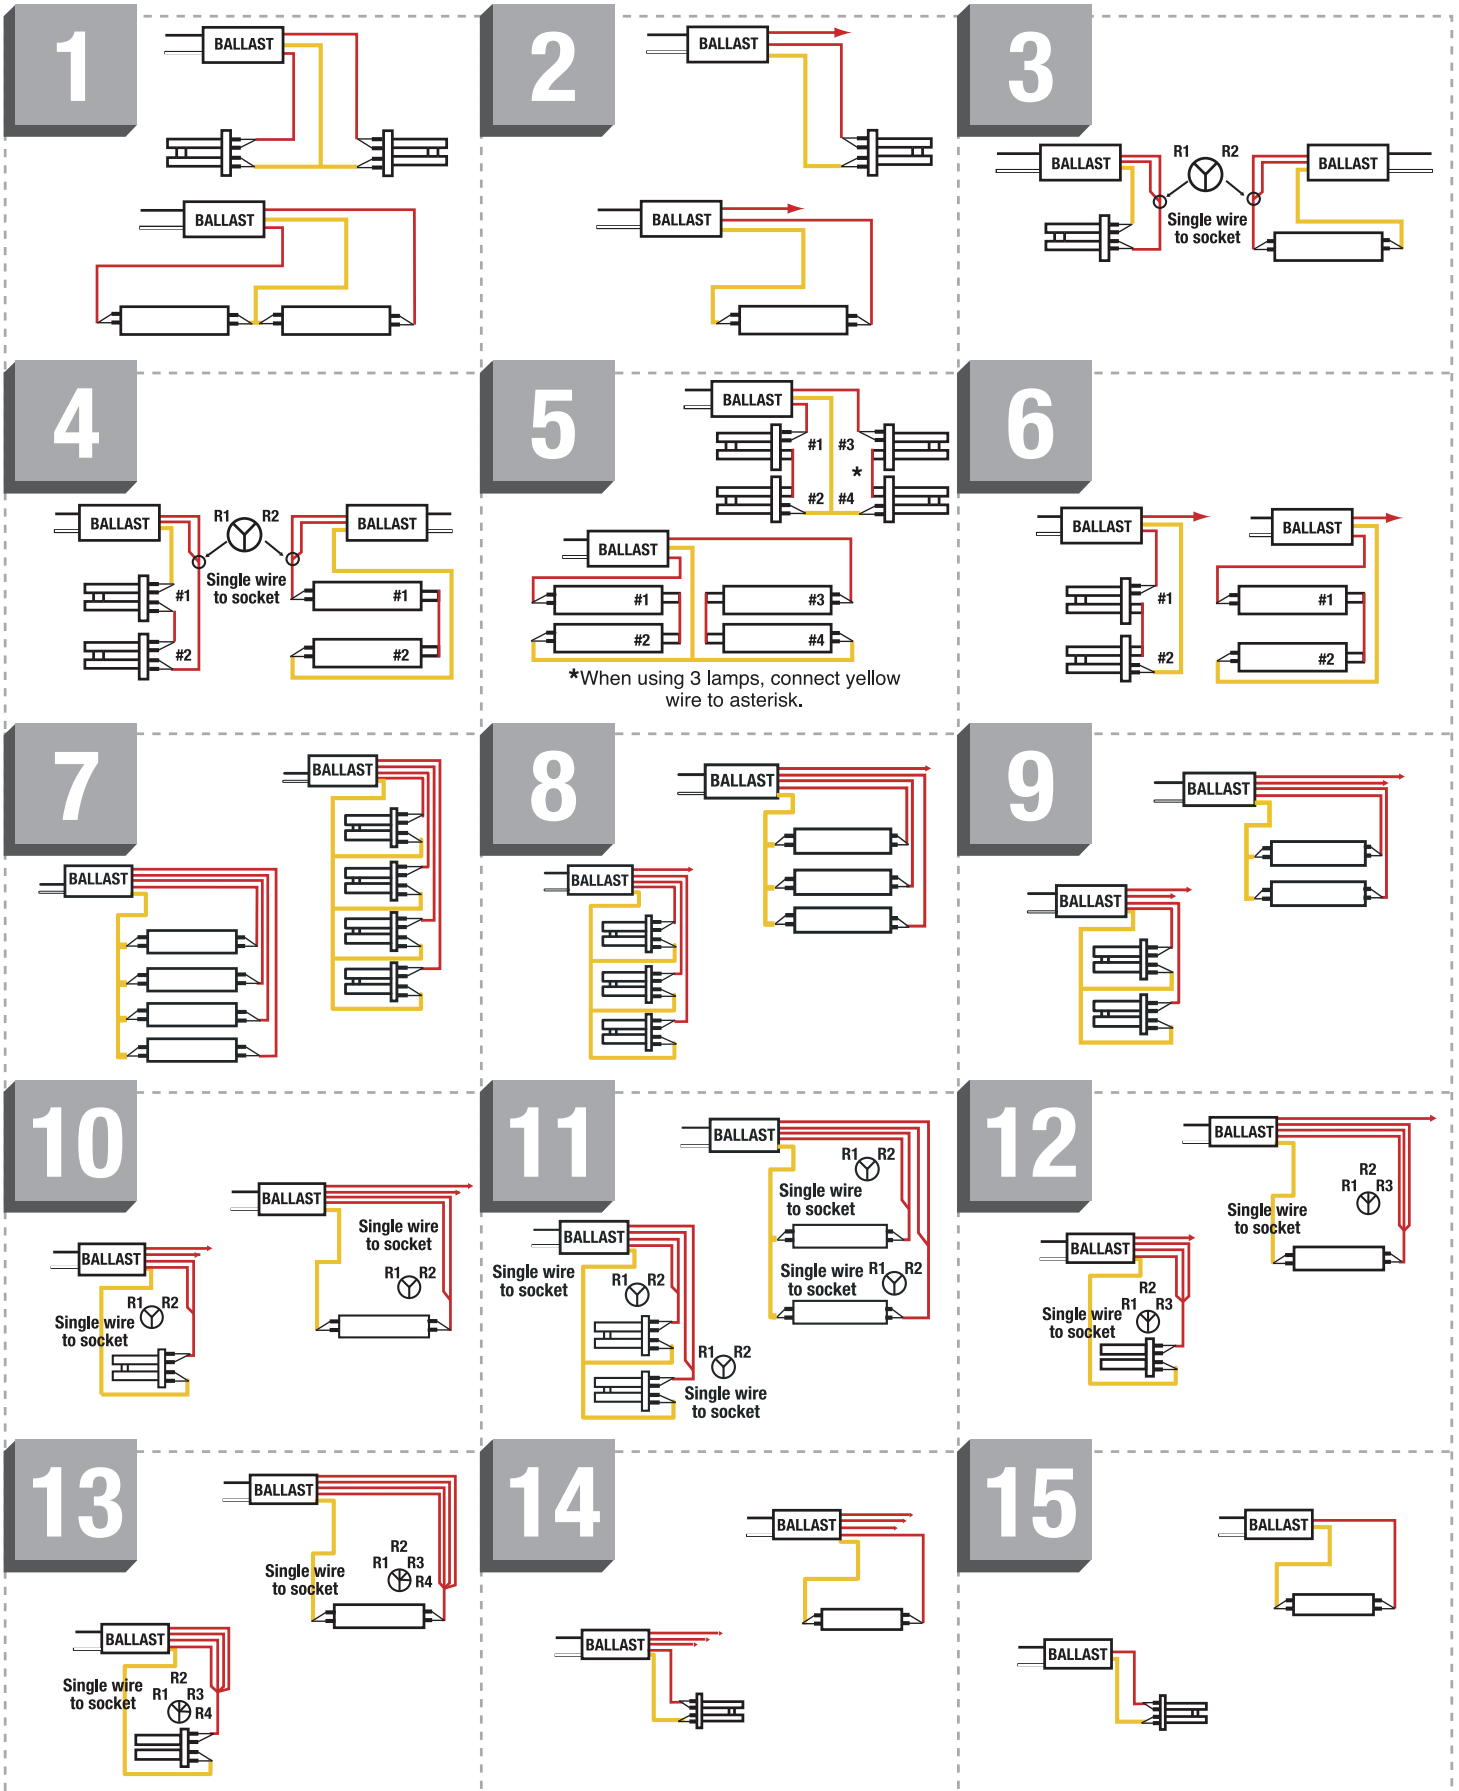

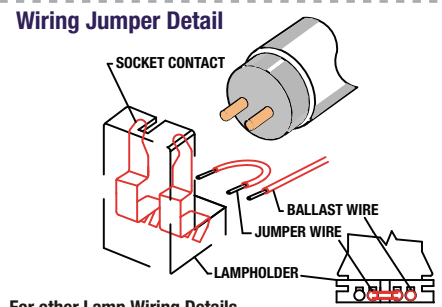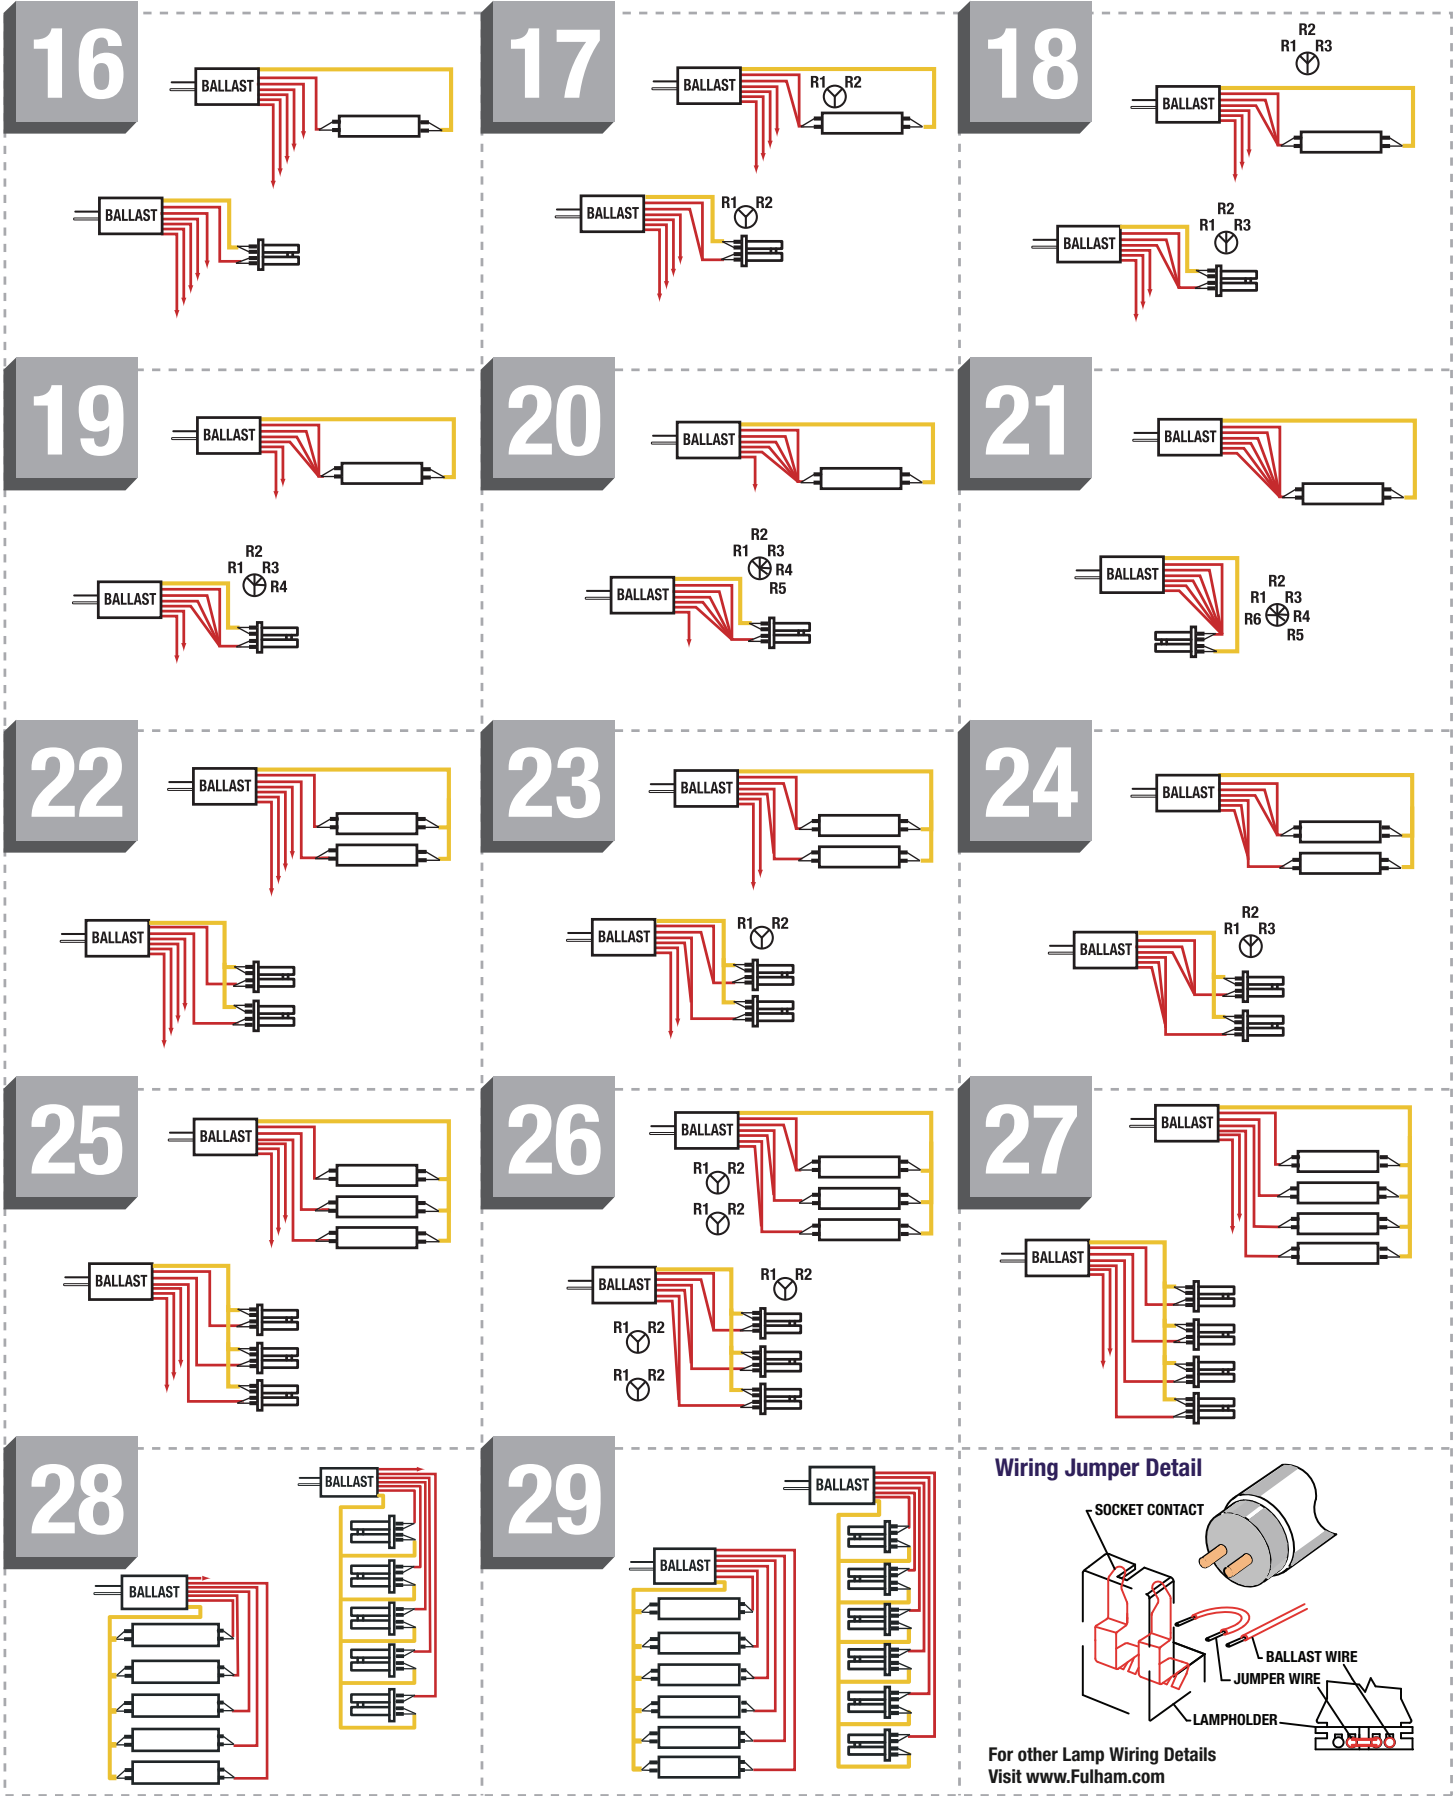

For other Lamp Wiring Details
 Visit www.Fulham.com