

## SPECIFICATION SHEET : HSM-UNV-114-LT5




Description: Programmed Start Electronic Ballast

Lamps Operated:

±\_\_\_\_\_\_

1x F35T5, F28T5, F21T5, F14T5

## **ELECTRICAL DATA**

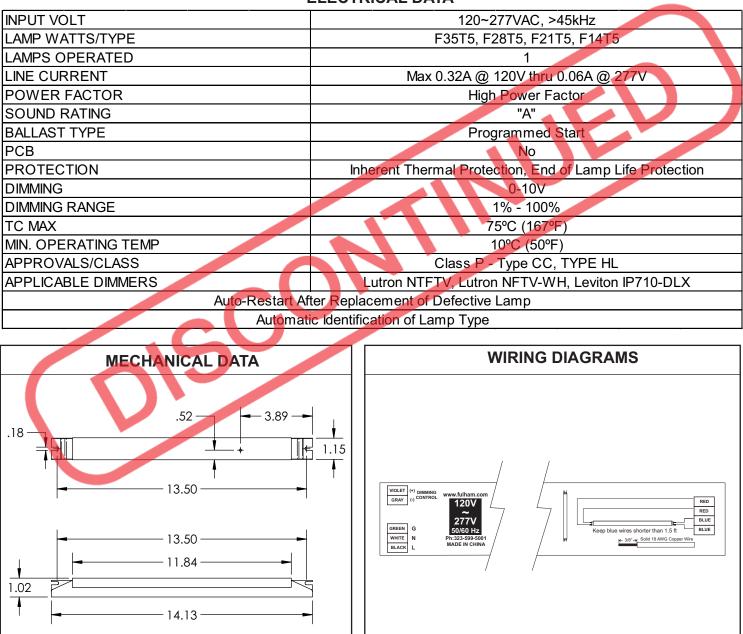

Where : L = Length, W = Width, H = Height

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of <u>5 years</u> from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham product catalog (www.fulham.com) **Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described.** 

Ballast must be properly grounded. Operate new lamp for 100 hours at full output prior to the first dimming