



FHSCP-UNV-10P-S-SD



Programmable Emergency LED Driver

Programmable Output –3W - 10W

15-55VDC - Output Voltage

Emergency Battery Disengage

Optional: Brushed Steel Plenum Rated Bi-Color Wet Location Test Switch

Self-diagnostic Standard

General Specifications

Input Voltage / Frequency	120-277V~, 50/60Hz
Input Current	0.1A Max
Input Power	5W Max
Standby Input Power	<0.85W
Input Power Pass-Through Rating (AC Driver Line)	5A
Max Output Rating (LED+ LED- Terminal)	3A, 55V Max
Output Type	LED Class 2, Class 2
Output Power	3W-10W
Voltage Range	15-55V $\overline{=}$
Current Rated	55-666mA
Number of Output Channels	1 Channel
Input Surge Protection	Line - Neutral 1kV, Line & Neutral - Ground 2kV and 3kV or 6kV Ring Wave
Protections	Output Open Protection Output Overload Protection Output Short Circuit Protection
Emergency Mode	90 Minutes Min
RFI/EMI	FCC Part15A
Ambient Operating Temperature Rang	0°C To 55°C (32°F To 131°F) Note: Effective on date codes after July 2025
Tc	64°C(147.2 °F)
Sound Rating	A
Battery Type	Lithium-ion
Battery Voltage	10.95V
Pack Capacity	2600mAh
Battery Rating	28.47Wh
Battery Count	3 Cells
Battery Recharge Time	24 Hours
Battery Discharge Time	Min 1.5 Hours
Test Switch Remote Mounting Distance	20' (6m) Max.
Service Life	50,000 hours
Warranty	5 years
Compliance standards	UL 924, CSA C22.2 No.141, UL 1310, CSA C22.2 No.223 CEC



RoHS
COMPLIANT



GENERAL INSTALLATION GUIDELINES FOR LED EMERGENCY DRIVER Appareil d'éclairage de secours

IMPORTANT SAFE PRACTICES

When using electrical equipment and this lighting device basic safety precaution should be followed at all times including but not limited to the following:

PLEASE READ CAREFULLY AND FOLLOW ALL INSTRUCTIONS FOR YOUR OWN SAFETY

PLEASE READ AND FOLLOW THESE INSTRUCTIONS

The manual shall include instructions for installation, operation, and maintenance recommended by the manufacturer. The instructions shall warn the user that all servicing should be performed by qualified personnel.

The instructions for inverter/charger packs limited to specific ballasts / LED Drivers shall clearly state the type and wattage of loads and ballasts or LED Drivers to which the unit is intended to be connected, unless this information is clearly marked on the product.

IMPORTANT: Do not connect battery until fixture is installed.

IMPORTANT: An un-switched AC power source of 120VAC to 277VAC is required.

This device is designed for use in fixtures listed for **dry and damp locations**.

ATTENTION: Convient Aux Emplacements Mouillés.

CAUTION: Make sure all electrical connections conform to the National Electrical Code and all applicable local regulations.

CAUTION: This device has not been investigated for use in an air-handling fixture, it is not suitable in a heated air outlet.

CAUTION: Do not mount near gas or electric heaters.

CAUTION: Do not use outdoors.

CAUTION: Battery is rechargeable Lithium-ion battery type and must be recycled or disposed of properly. Do not use this emergency driver with accessory equipment other than recommended by manufacturer; failure to follow this may cause an unsafe condition. Servicing should only be performed by qualified service personnel. Do not use this emergency driver for other than intended use.

CAUTION: Enclosure must be grounded.

CAUTION: This equipment provides reduced current levels when higher voltage loads are connected. The derangement signal requires calibration to ensure proper operation". See www.fulham.com/install for installation, operation, and maintenance instructions.

SAVE THESE INSTRUCTIONS



FHSCP-UNV-10P-S-SD



RoHS
COMPLIANT



GENERAL INSTALLATION GUIDELINES FOR LED EMERGENCY DRIVER Appareil d'éclairage de secours

IMPORTANT SAFE PRACTICES

When using electrical equipment and this lighting device basic safety precaution should be followed at all times including but not limited to the following:

CAUTION: Service by Qualified Personnel Only. De-energize before opening.

CAUTION: See instructions for derangement signal calibration.

CAUTION: Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.

CAUTION: For use with a metal enclosed wiring system.

CAUTION: RISK OF SHOCK - DISCONNECT EMERGENCY AND NORMAL INPUT POWER SOURCES BEFORE SERVICING.

ATTENTION: RISQUE DE CHOC - COUPER L'ALIMENTATION NORMALE ET DE SECOURS AVANT DE PROCÉDER À L'ENTRETIEN.

IMPORTANT: The output EM power will be the maximum of connected battery unless programmed to a lesser value. EM output power will not exceed the battery rating.

IMPORTANT: Indicator (LED light) illuminated indicates battery in charge mode when AC power is applied.

It is recommended and required by applicable code to test emergency function to ensure proper operation of the system; push the test switch for sixty (60) seconds every 30 days to ensure the emergency driver is functioning as LED light source illuminated. Conduct a ninety minute (90) discharge test one time (1) per year; LED light source should be illuminated for a minimum of ninety minutes (90).

ASSEMBLY and FIELD INSTALLATION WIRING: **WARNING:** AC power must be off before proceeding with assembly or installation of emergency driver.

TESTING SYSTEM: The emergency battery requires a charge minimum of one (1) hour before testing the circuit. A full charge requires or twenty four (24) hours.

IMPORTANT: In order to maintain proper operation and warranty coverage, the battery must be recharged once per year prior to installation.

Fulham Head Quarters:
Fulham Co., Inc
12705 South Van Ness Ave.
Hawthorne, CA 90250

SAVE THESE INSTRUCTIONS




RoHS
COMPLIANT



Mechanical Data

inch
[mm]

Overall Dimensions	
Length	16.7" (424.2mm)
Width	1.181" (30mm)
Height	1.0" (25.4mm)

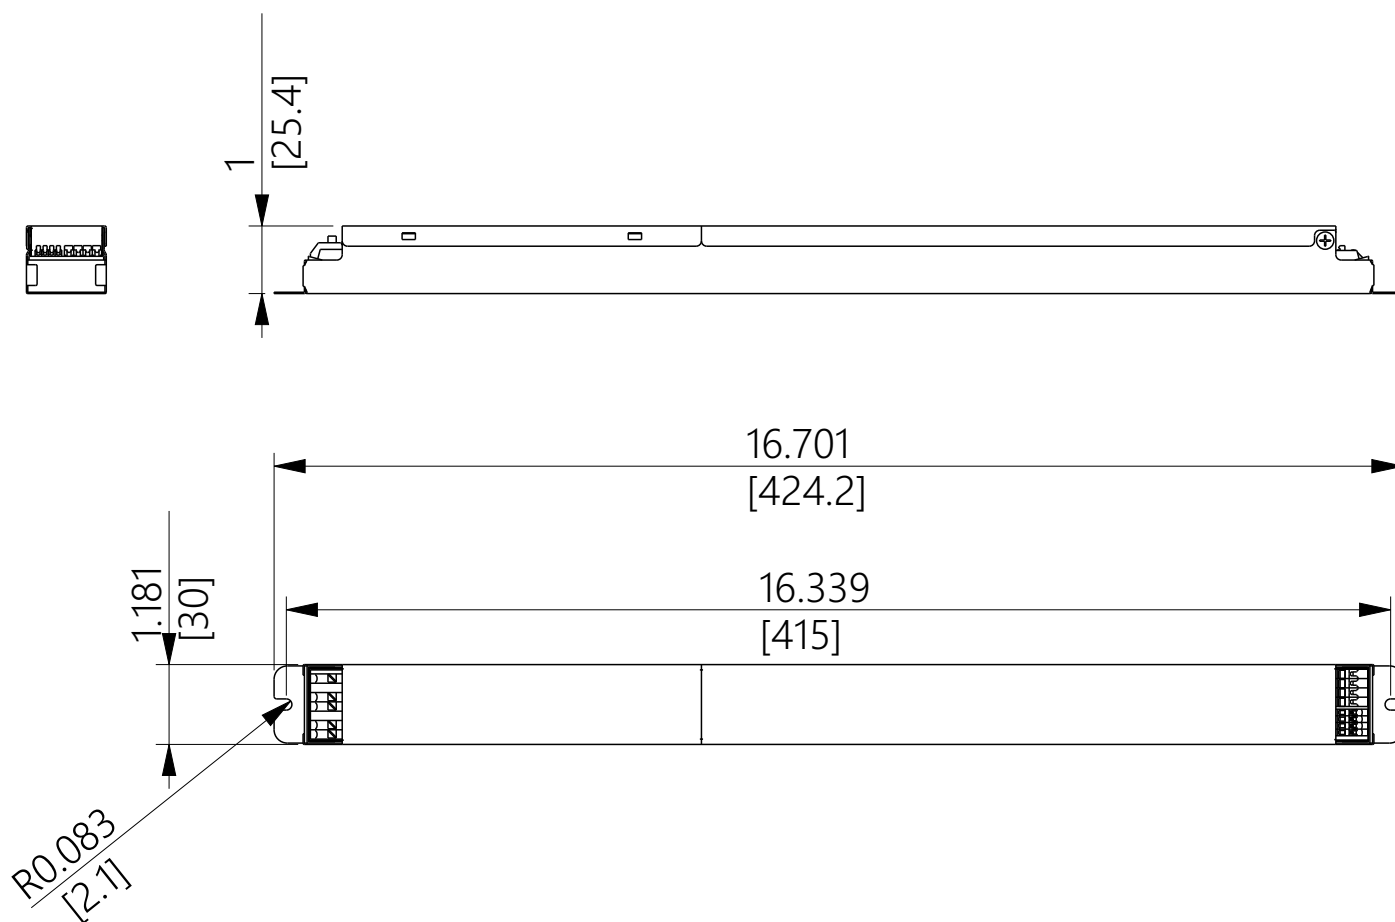




RoHS
COMPLIANT



Wiring Diagram

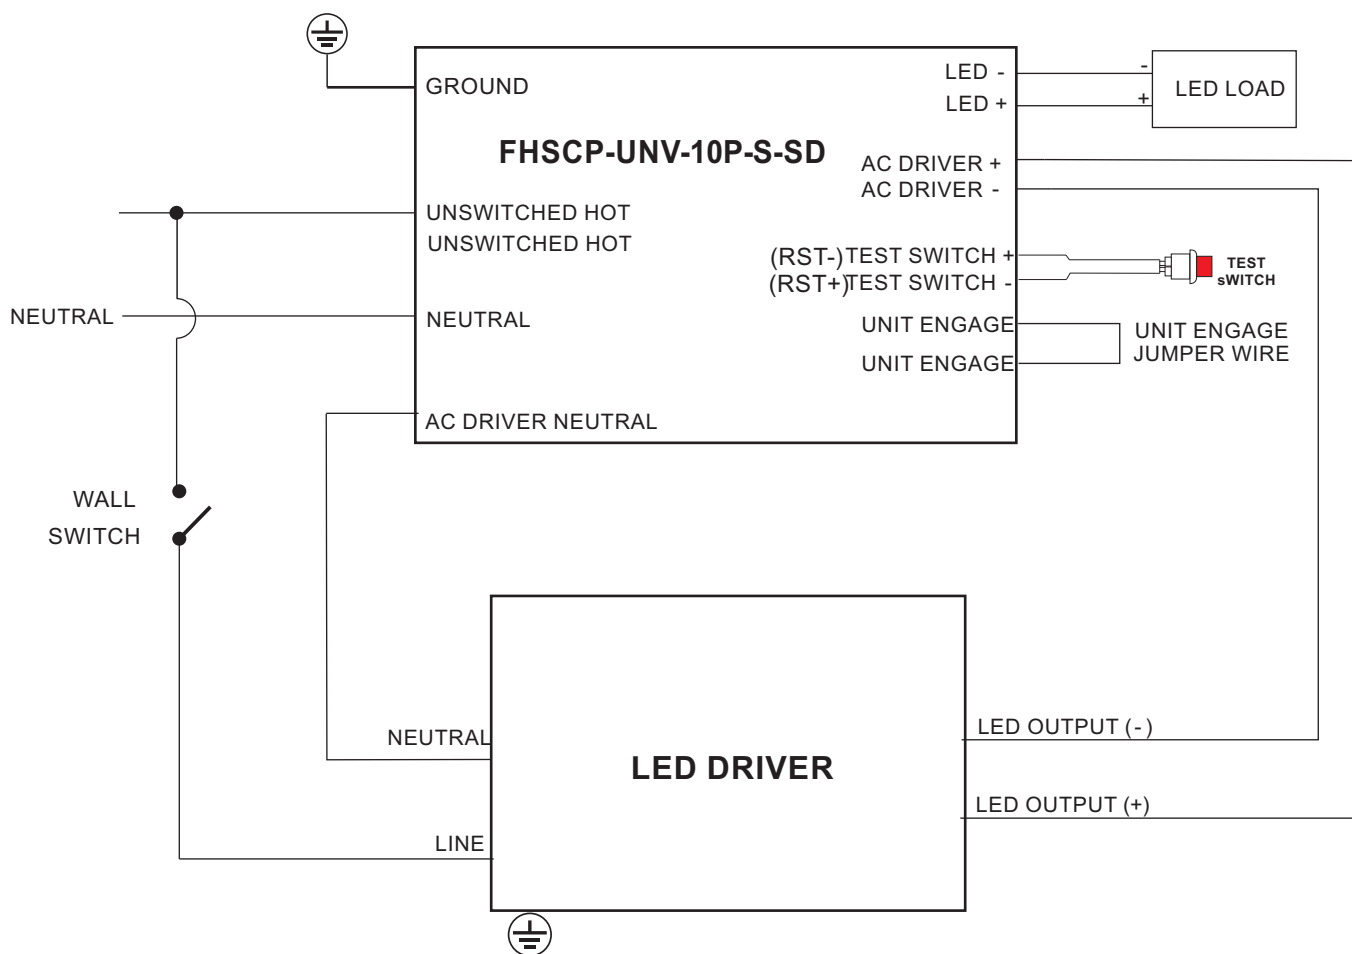




RoHS
COMPLIANT



Wiring Diagram

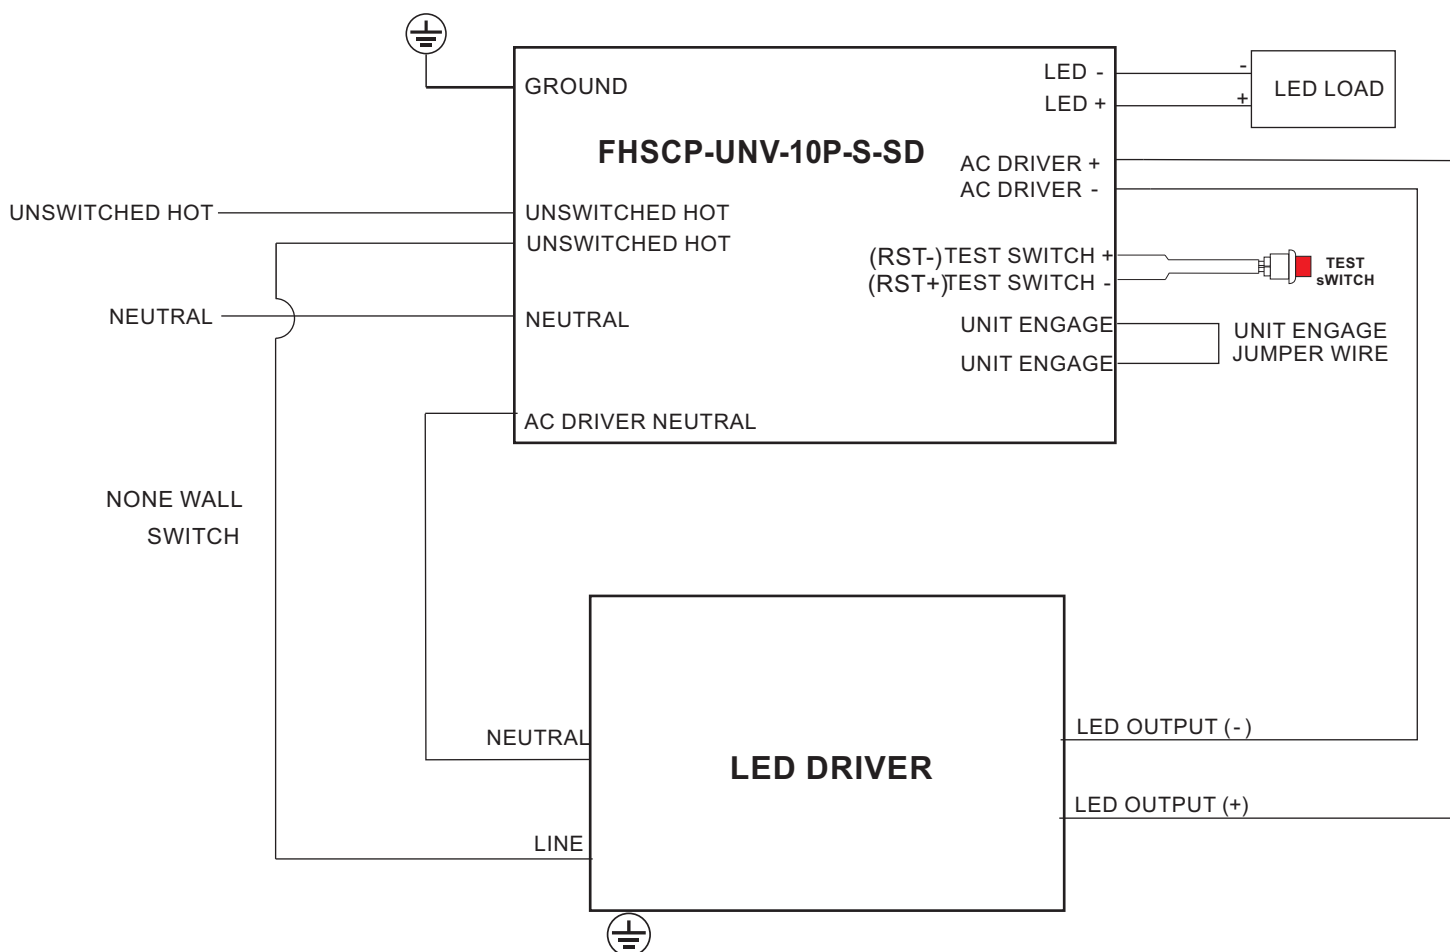

Guideline on calculating emergency illumination level

The purpose of this guideline is to identify the illumination level of the LED luminaire when used with Fulham's FHSCP-UNV-10P-S-SD LED emergency driver. The path of egress illumination level during emergency operation is determined by types of luminaires, Luminaire Efficacy, Luminaire Mounting Height, Emergency Power and some other effects in real application.

Step 1: Select an LED Luminaire, and make sure the LED light source is electrically compatible with Fulham's LED emergency driver. Get the Light Distribution data (usually an .ies file) and Rated Efficacy data (lumen per watt) from luminaire supplier.

If the luminaire is Design Lights Consortium TM (DLC) compliant, you can also get the efficacy information from DLC website.

- Open DLC Qualified Product List(QPL) database search page: <https://www.designlights.org/search/>
- Searching keywords by model, brand name or manufacturer for the luminaire used.
- Find the "Efficacy" data listed on website or calculated by dividing "Light output" by "Wattage", the efficacy value should be shown in lumen per watt (lm/W).

If the luminaire is ENERGY STAR compliant, you can also get the luminaire efficacy information from ENERGY STAR website.

- Open ENERGY STAR certified Light Fixtures database search page: <https://www.energystar.gov/productfinder/product/certified-light-fixtures/results>
- Searching keywords by model, brand name or manufacturer for the luminaire used.
- Find the "Energy Efficiency" data listed on website. If it is showed as "Measured at the Source", please contact with luminaire supplier for additional light loss for this light source inside the fixture. The value should be shown in lumen per watt (lm/W).

Step 2: Determine the Emergency Power and calculate the Emergency Light Output.

FHSCP-UNV-10P-S-SD is programmable output; setting a proper Emergency Power is vital to achieve desired illumination.

Emergency Light Output is equal to the Emergency Power multiply by luminaire efficacy. For example, if the luminaire is 120lm/W and in 10W emergency operation, the total Emergency Light Output is 120lm/W X10W = 1200lm.

Step 3: Use industry lighting design software to calculate the illumination level according to the luminaire layout in room, luminaire mounting height, the original .ies file and Emergency Light Output calculated above. If the illumination level cannot meet life safety codes, go back to Step 2 to use a higher Emergency Power or go back to Step1 to select a higher efficacy luminaire or use more luminaires in the room.

Fulham's FHSCP-UNV-10P-S-SD LED emergency driver is compliant with UL924 standard, according to UL test data, Table 1 below give basic indication to determine the min. Emergency Power and Luminaire Max. Mounting Height for 1 foot-candle illumination based on a single luminaire with typical Lambertian distribution. It is the light designer / construction contractor's responsibility to validate the real illumination level on site, to assure the emergency light illumination level is in accordance with the requirement of Federal, state and local municipal codes. It may differ from the theoretical calculations or simulations on a computer.

Table 1. Min. EM Power for 1fc @10ft vs. Luminaire Efficacy

Luminaire Efficacy (lm/W)	Min. EM Power to achieve 1fc@10ft Mounting Height
80	20W
100	16W
120	13.2W
140	11.2W
160	10W
180	8.8W

Table 2. Max. Mounting Height vs. Luminaire Efficacy

Luminaire Efficacy (lm/W)	Max. Mounting Height for 1fc							
	EM 3W	EM 4W	EM 5W	EM 6W	EM 7W	EM 8W	EM 9W	EM 10W
80	9.9ft	11.3ft	12.8ft	13.9ft	14.8ft	15.8ft	16.8ft	17.6ft
100	11.1ft	12.6ft	14.3ft	15.6ft	16.6ft	17.7ft	18.7ft	19.7ft
120	12.1ft	13.9ft	15.7ft	17.1ft	18.2ft	19.4ft	20.5ft	21.6ft
140	13.1ft	15.0ft	16.9ft	18.4ft	19.6ft	21.0ft	22.2ft	23.3ft
160	14.0ft	16.0ft	18.1ft	19.7ft	21.0ft	22.4ft	23.7ft	24.9ft
180	14.8ft	17.0ft	19.2ft	20.9ft	22.3ft	23.8ft	25.1ft	26.4ft





RoHS
COMPLIANT



BATTERY REPLACEMENT/SERVICING INSTRUCTIONS

Warning: Disconnect power when servicing fixture.

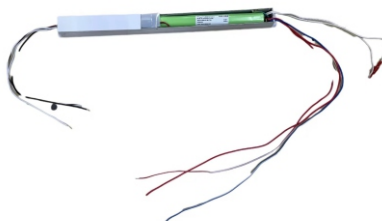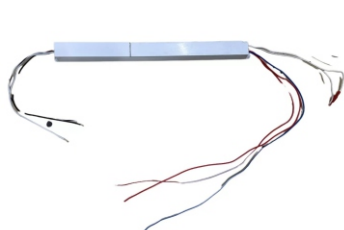


Remove battery cover and pull out wiring


Disconnect the connector



Take out a new battery

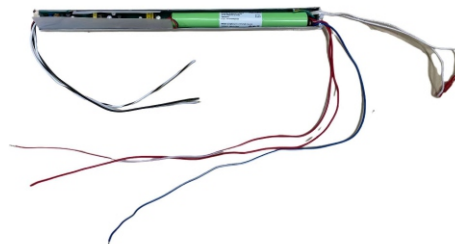

Re-connect the battery connector and place all wires back into the battery cover

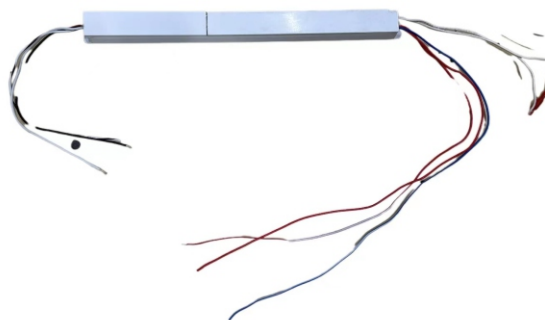

Completed Assembly

SAVE THESE INSTRUCTIONS



RoHS
COMPLIANT



SELF-DIAGNOSTIC INSTRUCTIONS / OPERATION:

If the self-diagnostic feature is enabled:

The emergency LED driver will conduct a self-check for sixty(60) seconds every thirty(30) days; and a ninety(90) minutes self-check every 12 months. After every self-check the LED indicator light will indicate a status signal. Check indicator status chart above to diagnose the status signal.

If the self-diagnostic feature is disabled:

User must conduct a manual test every thirty (30) days to ensure the emergency LED light source illuminates as intended. A full discharge test shall be conducted once a year; the LED light source shall illuminate for a minimum of ninety (90) minutes.

***Self-Diagnostic feature is factory enabled**

TEST SWITCH INDICATOR STATUS:

LED Indicators Status	EM Driver Status / Mode
● Solid Green	System OK / AC OK (Self-Diagnostic Enabled or Disabled)
● Flashing Red, 4s on / 1s off	Battery PACK not found. (Including Self-test/self-diagnostic)
● Flashing Red, 1s on / 1s off	Battery PACK fault. (Including Self-test/self-diagnostic)
● Flashing Green, 1s on / 1s off	Self-Diagnostic test underway
● Flashing Green, 0.1s on / 3s off	Normal working in EM mode. (Including Self-test/self-diagnostic)
● Flashing Red, 4s on / 4s off	No load or output over voltage protection. (Including Self-test/self-diagnostic)
● Solid Red	Over current protection. (Including Self-test/self-diagnostic)
● Flashing Red, 0.5s on / 3s off	Self-diagnose process current fault or Battery voltage <87.5%.
● Flashing Green, 2s on / 0.5s off	Self-Diagnostic Enabled
● Flashing Green, 0.5s on / 2s off	Self-Diagnostic Disabled

TEST SWITCH OPERATIONS

EM Test:

Press and hold the test button (>1s) to enter EM mode in normal AC powered.

Manual Self-Diagnostic:

After charging twelve (12) hours or battery fully charged, quickly press the test button three(3) times within two (2) seconds to force the controller to enter Self-Diagnostic cycle.

Enable/Disable Self-Diagnostic Status:

Fast click 2 times within 2s to query the Self-Diagnostic Enabled/Disabled status. The indicator would blink for current status for 3 cycles. 2s ON/0.5s OFF stands for Enabled. 0.5s ON/2s OFF stands for Disabled.

Turn Off EM Output:

Press and hold the test switch for 10 seconds during EM output condition to turn off EM output. This is useful for production environment to turn off the EM output once a luminaire has completed functionality testing.




RoHS
COMPLIANT




Programming:

The FHSCP-UNV-10P-S-SD is programmed through the Indicator Port on the emergency driver with the TPSB-100 programmer. Unless otherwise programmed the output will self-program to the maximum rating of the battery. Customer must use the Indicator Port programming harness and programming block that comes with the TPSB-100.

Programming Wire Diagram 1

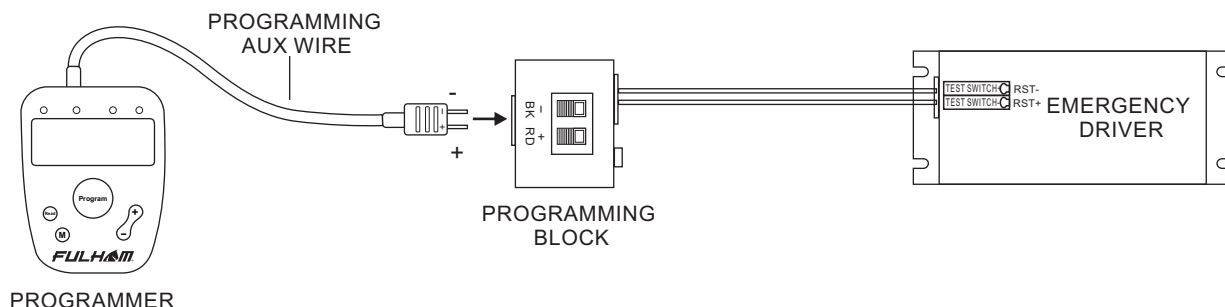

Programming Wire Diagram 2

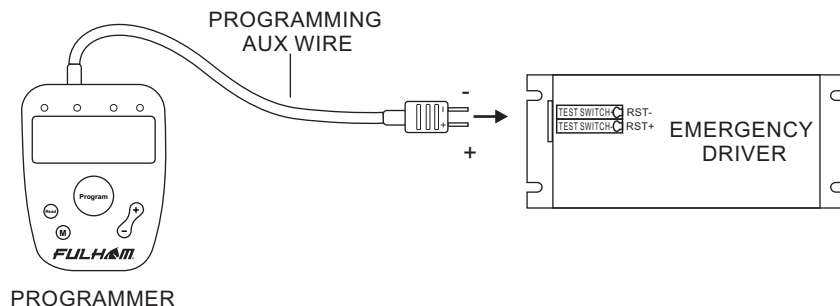

Programming Features

- Output EM Power - 3W to 10W
- * Enable / Disable Self-Diagnostic



SmartSet Software



TPSB-100 SmartSet
Controller