



LED MODULE BASE NUMBER  
**TM06SQ40xx-X01**

**COMPATIBLE DRIVERS**

**Compatible Fulham LED Drivers**

Fulham Part Number	Driver Description	# of Modules/Driver	Wiring Diagram
T1(M1)UNV0700-28C	700 mA, 28W CC Driver, Universal Input (0-10V Dimmable)	1	A
T1M13470700-28C	700 mA, 28W CC Driver, 347V Input, 0-10V Dimmable	1	A
T1UNV0700-36C	700 mA, 33W CC Driver, Universal Input	1	A
T1(M1)UNV0700-40C	700 mA, 40W CC Driver, Universal Input (0-10V Dimmable)	1	A
T1M13470700-40C	700 mA, 40W CC Driver, 347V Input, 0-10V Dimmable	1	A
T1M2UNV0700-49L	700 mA, 49W CC Driver, Universal Input, 2 output channels, 0-10V Dimmable	2	E
T1M1UNV1400-60L	700 mA, 60W CC Driver, Universal Input, 0-10V Dimmable	2	C
T1M4UNV0700-100L/C	700 mA, 100W CC Driver, Universal Input, 4 output channels, 0-10V Dimmable	4 (1/Ch)	E
T1A4UNV700-100L/C	700 mA, 100W CC Driver, Universal Input, 4 output channels, DALI, 1 control channel	4 (1/Ch)	E
T2A4UNV0700-100L/C	700 mA, 100W CC Driver, Universal Input, 4 output channels, DALI, 2 control channels	4 (1/Ch)	E
T4N4UNV0700-100K/B	700 mA, 100W CC Driver, Universal Input, 4 output channels, DMX/DALI, 4 control channels	4 (1/Ch)	E
FHS2-UNV-36L	HotSpot2 at 350 - 700 mA output.		

**NOTE:**

1. Subject to rated loading conditions.
2. Modules are polarity sensitive.  
Ensure that "positive" from LED Driver is connected to "positive" of LED modules and that "negative" from LED Driver is connected to "negative" of LED modules.  
Polarities of modules are marked with "+" for positive and "-" for negative.
3. List is subject to change without notice.
4. Reference Fulham's ThoroLED light engine wiring diagrams sheet.

Reference spec sheet of respective driver for warranty information.