

**EliteControl**

**FULHAM**

# Fulham EliteBlue Commissioning User manual

Date: May 27, 2021  
SN-200 Rev. 1.9

All of the contents are protected from copying under the provisions of copyright laws. The copyrights belong to Fulham. Any unauthorized copying, alteration, distribution, transmission, performance, display or other use of this material is prohibited<sup>1</sup>.

# Table of Contents

Table of Contents	2
1. Introduction	6
2. Creating a commissioning plan	7
Log in & sign up	7
Create a project	10
Upload and edit the area	13
Replace a plan	15
Zones	16
Create a zone	17
Edit a zone	18
Duplicate zone	19
Profiles	19
Customize a profile	23
Scenario parameters for customization	25
Create a new scenario	38
Remove a zone	40
Zone linking	42
Zone linking recommendations	45
Remove an area	48
Remove a project	49
Invite & manage project collaborators	50
User roles in the project	52

Revoke access to the project	58
Supporting previous versions	59
Updating project to latest version	59
Title bar navigation	61
Sign out	62
Notifications	63
Help center	64
3. Commissioning on-site	66
Log in & Sign up	66
Select a project and area	72
Select zone	73
Adding devices	74
Configure all devices in a zone	79
Repair device	81
Full Configuration	83
Update devices (Over-the-air update)	85
Identifying faulty luminaires in a zone	86
Zone profile customization	86
Scenario customization parameters:	89
Color temperature	91
Daylight harvesting calibration	94
Photocell calibration	99
Scenes A&B setup	102
Test your zone (TEST tab)	105
Check the devices list	107
Identifying devices added to a zone	107
Rename a device	109

Device mesh network settings	110
Device diagnostics	113
Monitoring	114
Remove device	116
Hidden devices	118
Restoring hidden devices	120
Removing devices without access to mesh	121
EnOcean switch commissioning	122
Using the EnOcean switch	125
Example behavior of EnOcean switch in various scenarios	126
EnOcean switch support for Multiple Scenes	129
Resetting EnOcean switch	132
4. Commissioning with the mobile app	133
Create a project	133
Edit a project	135
Remove a project	137
Invite & manage project collaborators	139
Change or transfer user role	143
Revoke access to the project	146
Create an area	149
Edit an area	151
Remove an area	153
Create a zone	156
Edit or remove zones	158
5. Gateway commissioning	159
6. Microgateway commissioning	159
Commissioning	160

7. Commissioning status & troubleshooting	164
Check commissioning status	164
Commissioning alerts: errors and warnings	167
Send diagnostic report	173
Commissioning report	175
Downloading the commissioning report	179
<b>8. Document Revisions</b>	180

# 1. Introduction

Fulham Commissioning is a set of software tools that allows commissioning agents, contractors, installers and facility managers to configure, control and manage commercial lighting infrastructures based on qualified Bluetooth mesh.

Fulham Commissioning consists of two elements:

- [The Fulham web app](#)<sup>1</sup>, which is used **off site** to manage lighting installation projects and plan commissioning, including mapping zones within a building, setting up profiles for zones and managing users collaborating on the project. **To start with Fulham Commissioning, please create an account in our [web app](#).**
- **The Fulham mobile app**<sup>2</sup>, which is used [on site](#) to commission the devices with the commissioning plan set up earlier in the web app. It also has the basic features for managing a project, so it can also be used to perform fine-tuning of a large project or the commissioning of small projects. The app is available only for iOS devices. The app supports English, French and German (customizable in app settings on your mobile device). It is available only for iOS devices.
  - The eliteBlue mobile app allows for [ad hoc commissioning](#), which lets the user to create a commissioning project without using the web app. This way of commissioning is done only with the mobile app, but it has more limited settings than creating a commissioning plan in the web app

This document describes how to use Fulham's web and mobile apps for commissioning, i.e.:

- Create an account and sign in
- Create a commissioning plan with the Fulham web app
- Commission the installed system with the Fulham mobile app

---


<sup>1</sup> The Fulham web app requires the Chrome browser v. 70 and an internet connection.

<sup>2</sup> The Fulham mobile app requires iOS (Fulham supports the **latest two versions** of Apple iOS and iPadOS) and Bluetooth enabled as well as an internet connection - minimum 3G (WiFi or cellular).

## 2. Creating a commissioning plan

### Log in & sign up

[eliteblue.fulham.com](https://eliteblue.fulham.com)

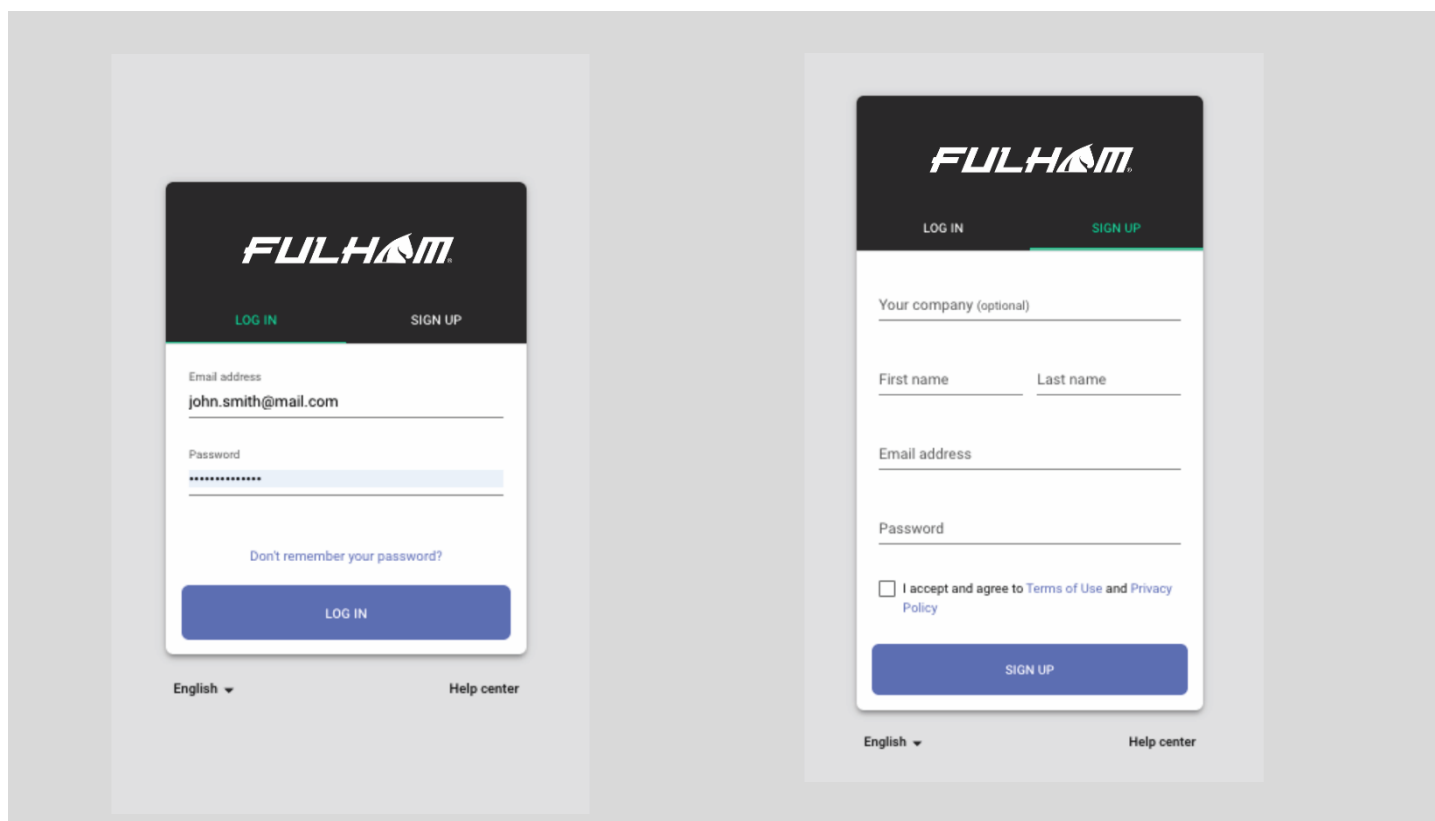


The image displays two side-by-side screenshots of the Fulham eliteBlue web application interface. The left screenshot shows the 'LOG IN' screen, featuring the Fulham logo at the top, a 'LOG IN' button, and a 'SIGN UP' button. Below the buttons are input fields for 'Email address' (with the example 'john.smith@mail.com') and 'Password' (masked with asterisks). A link for 'Don't remember your password?' is located below the password field. At the bottom, there are links for 'English' and 'Help center'. The right screenshot shows the 'SIGN UP' screen, also with the Fulham logo. It has a 'LOG IN' button and a 'SIGN UP' button. The 'SIGN UP' button is highlighted with a green underline. Below the buttons are input fields for 'Your company (optional)', 'First name', 'Last name', 'Email address', and 'Password'. A checkbox for 'I accept and agree to Terms of Use and Privacy Policy' is present. At the bottom, there are links for 'English' and 'Help center'.


**For new users:** visit Fulham's web app [eliteblue.fulham.com](https://eliteblue.fulham.com) and create a new account. To do it, open "SIGN UP" tab and enter your details. Accept the terms of use and privacy policy and click "SIGN UP".


**If you are an existing user,** go to the Fulham's web app at [eliteblue.fulham.com](https://eliteblue.fulham.com), open the "LOG IN" tab, enter your registration email address and password and press the "LOG IN" button.



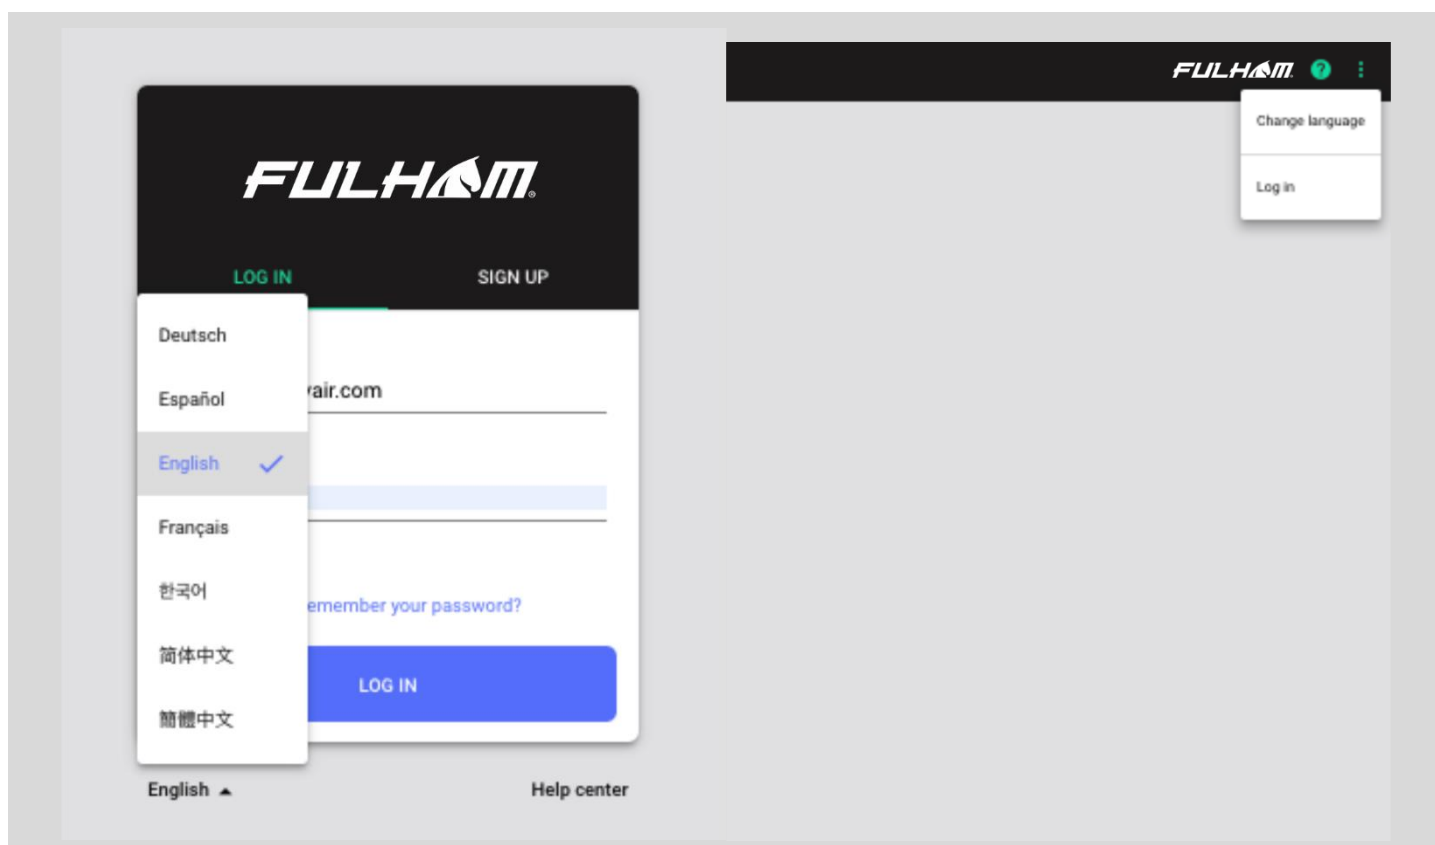


The web app supports 7 languages: English, German, French, Spanish, Korean, traditional Chinese and simplified Chinese. You can change it anytime:

- by pressing the already selected language on the log in & sign up screen, or
- inside the app, display the context menu by tapping the  button and select "Change language".

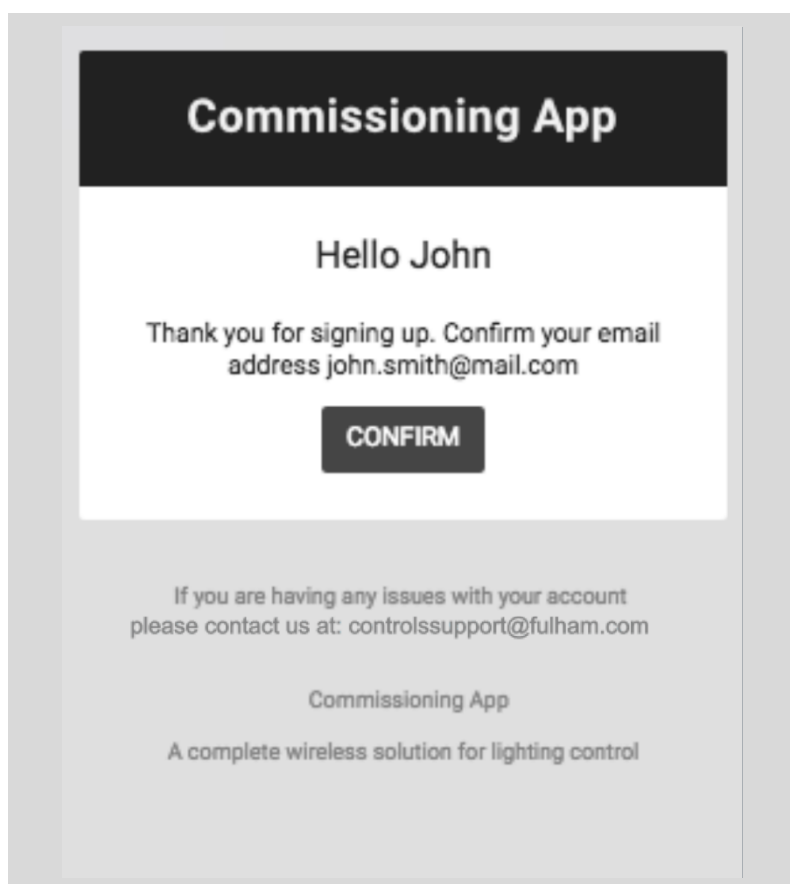

- For new users: once you have signed up, check your email for the confirmation email (subject: "Fulham. Verify your email"). Follow the steps in the email to confirm your email address.
- Click "**CONFIRM**" and you will be directed to the web app, which should automatically open in the "My projects" view.

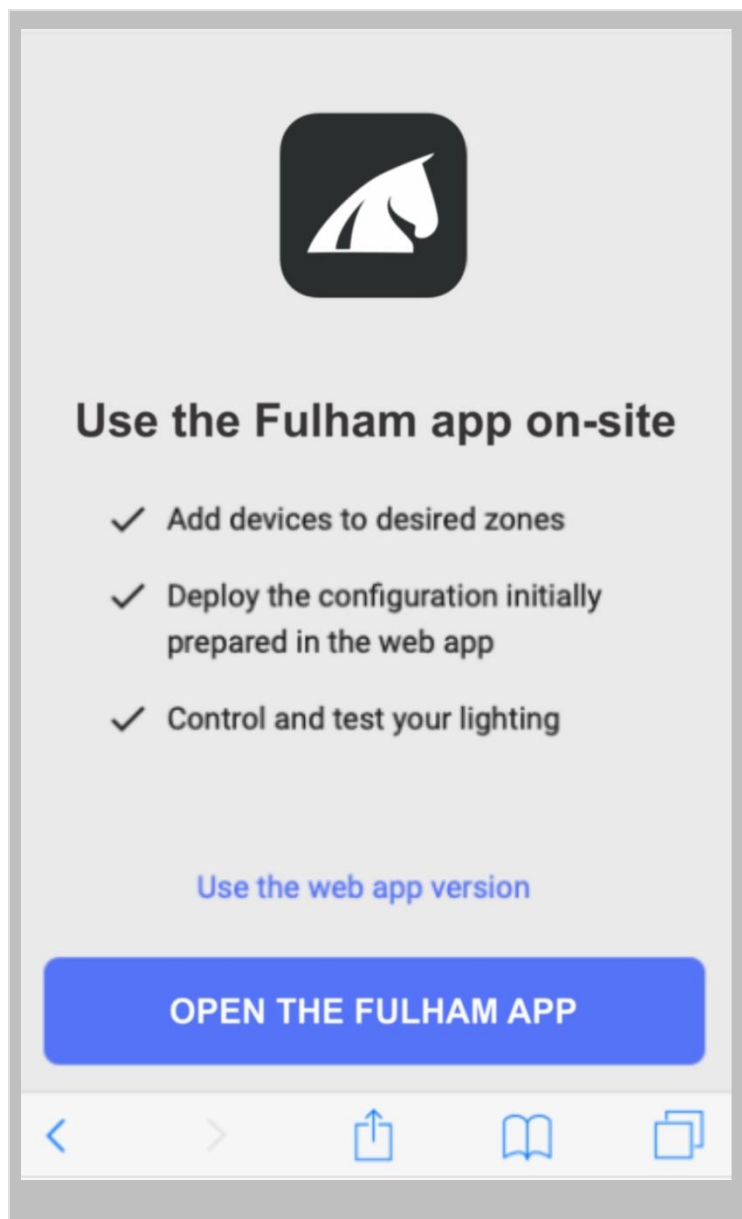

If you log in to the web application in your mobile phone's browser, the information to use mobile app or web app on a desktop will be displayed.


If you tap:

"Use the web app version" - the overlay will close.

"Open the Fulham app" - the app or the App store will open.


## Create a project

Your lighting systems are organized into projects that can represent areas as large as a whole building, or as small as a single room. Each project is a separate Bluetooth mesh network.

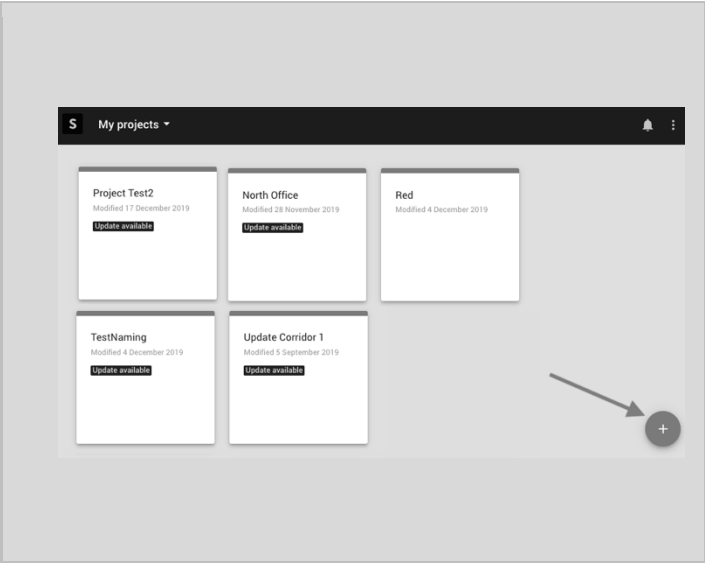

The screenshot shows a dashboard titled 'My projects'. It contains five project cards: 'Project Test2' (Modified 17 December 2019), 'North Office' (Modified 28 November 2019), 'Red' (Modified 4 December 2019), 'TestNaming' (Modified 4 December 2019), and 'Update Corridor 1' (Modified 5 September 2019). Each card has an 'Update available' button. A grey plus button is located in the bottom right corner of the dashboard, with an arrow pointing to it.


Sign in and start by creating a new project (click the plus-button in the lower right corner)

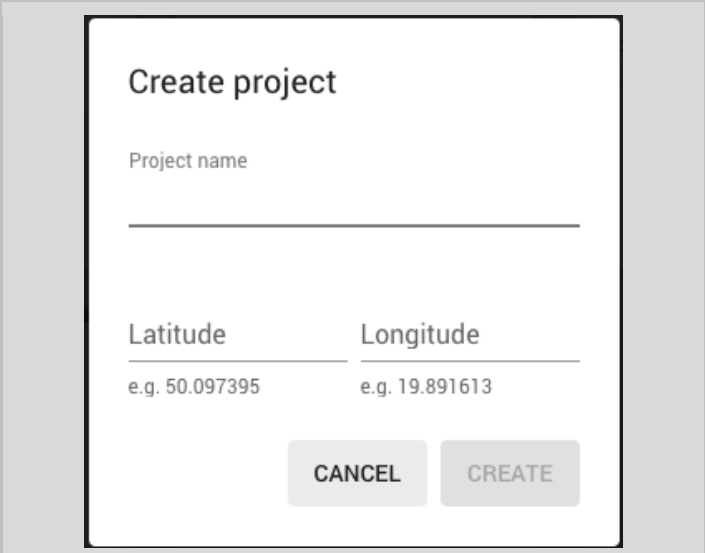

The 'Create project' form has the following fields and buttons:

- Create project** (Section Header)
- Project name** (Text input field)
- Latitude** (Text input field, example: e.g. 50.097395)
- Longitude** (Text input field, example: e.g. 19.891613)
- CANCEL** (Button)
- CREATE** (Button)

- Enter the project name
- Enter Latitude and Longitude of the place where the project will / is used
  - This step is **not** mandatory
  - It is used for extended services that require using gateway
- Press "**CREATE**" to confirm
- You will see your new project appear in the list
- Projects are sorted by the creation date, from the newest to the oldest

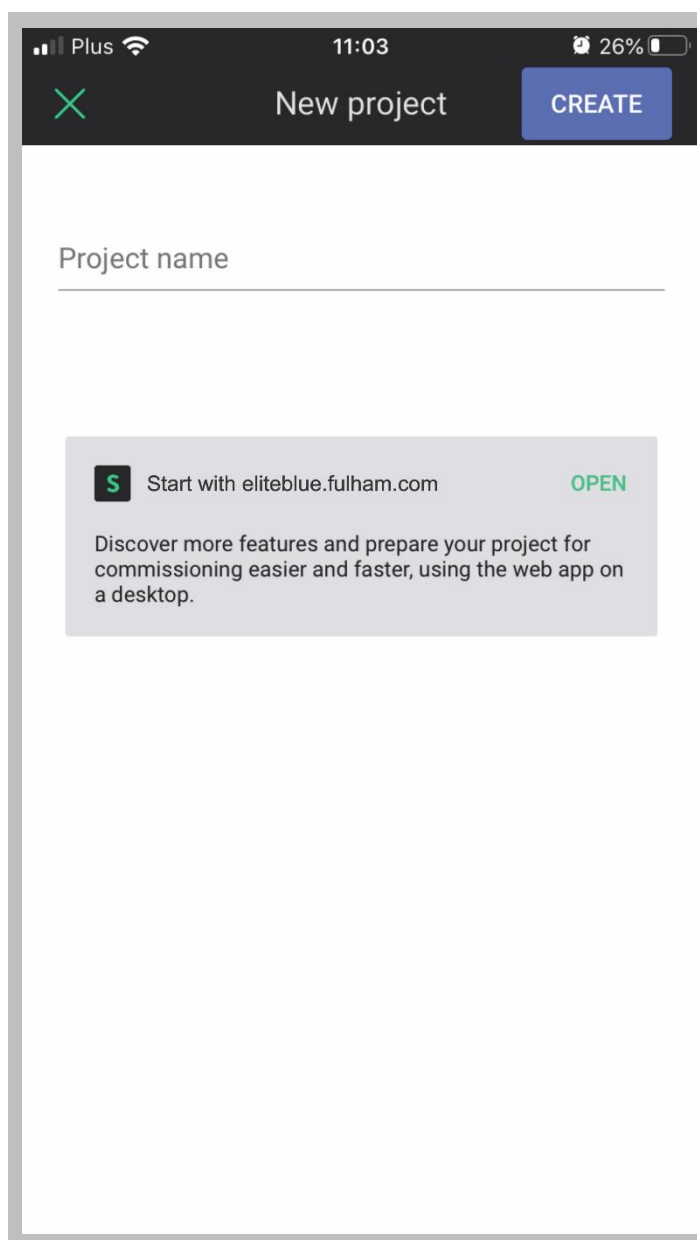

When you will start creating the project using mobile app, the information about the desktop web app will be displayed.  
Tap "Open" to share URL to browser/email.




**NOTE:** By default, the user who creates the project becomes its owner and is marked as such on the collaborators list (see: [Invite & manage project collaborators](#))




**NOTE:** A project represents a single mesh network, so any devices added to this project will automatically be part of the same network.

## Upload and edit the area

Create areas in your projects. This will allow to add various zones to the plan and locate them in the building.

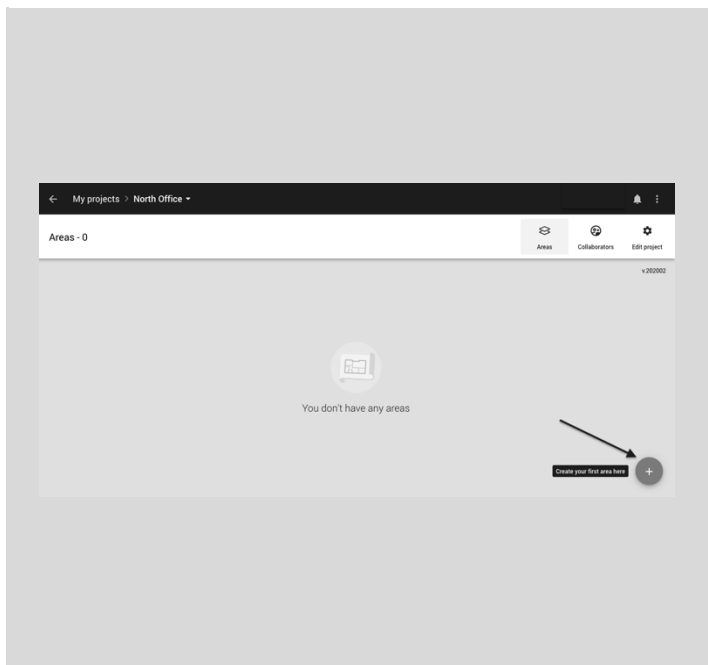

Every commissioning plan must have at least one area. To create an area, click the plus-button in the lower right corner of the screen.

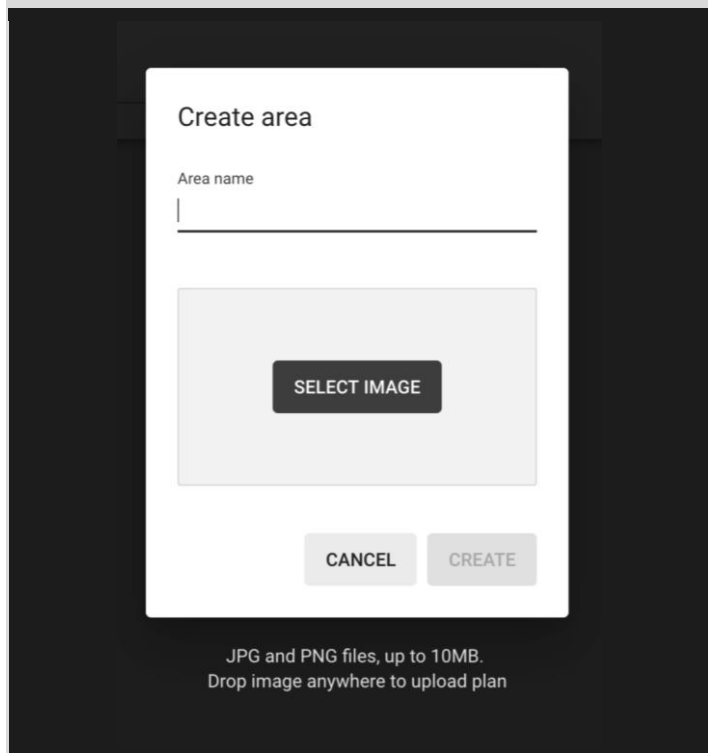


- Add a plan image by clicking on "**SELECT IMAGE**".
- Select the image you want to use, it must be a JPG or PNG file up to 10 MB.
- Enter the area name.
- Click "**CREATE**" to save the area details.


You can drag the image anywhere on the screen to upload the plan.

Replace a plan



Select the project you want to edit and navigate to the plan you want to update.

Click the menu icon  to make changes.

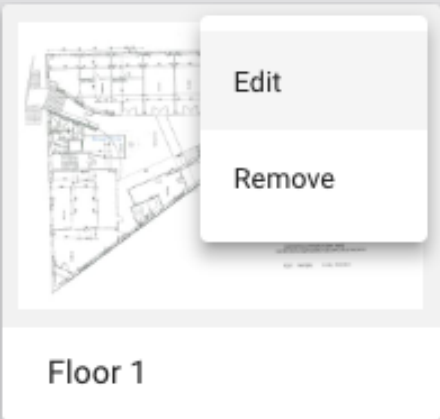

The menu icon allows you to edit the selected plan or remove the area.



To edit the area, select the area you want to update and then right-click on the plan.

You can also replace the plan by dragging an image file from your desktop or hard drive onto the existing plan.







## Zones

Devices (i.e. fixtures, drivers, sensors or switches) commissioned using the Fulham mobile app are organized into zones. A zone is a group of devices that operate with a selected profile. It doesn't have to be a physical space (e.g. a room) as a room may contain one or more zones, e.g. multiple daylight zones.


The Fulham web and mobile apps are synced, so any progress or problems that occur during commissioning are reflected in both interfaces.

A zone is represented on the area with a circular icon which changes color depending on its status:


	<b>DRAFT</b> — when a zone has been created but the profile has not been selected <sup>3</sup>
	<b>READY TO BE COMMISSIONED</b> — when the profile has been selected and the zone is ready to be commissioned on site (with the Fulham mobile app).
	<b>COMMISSIONED</b> — when devices in the zone have been commissioned: devices have been added and configured correctly.
	<b>WARNING</b> — when the zone has been commissioned but requires attention or action, e.g. some devices are missing or were not configured properly.  See details about errors and warnings in the <a href="#">Commissioning alerts: errors and warnings</a> section.

<sup>3</sup> DRAFT zones are only available in the Fulham web application.

### Create a zone

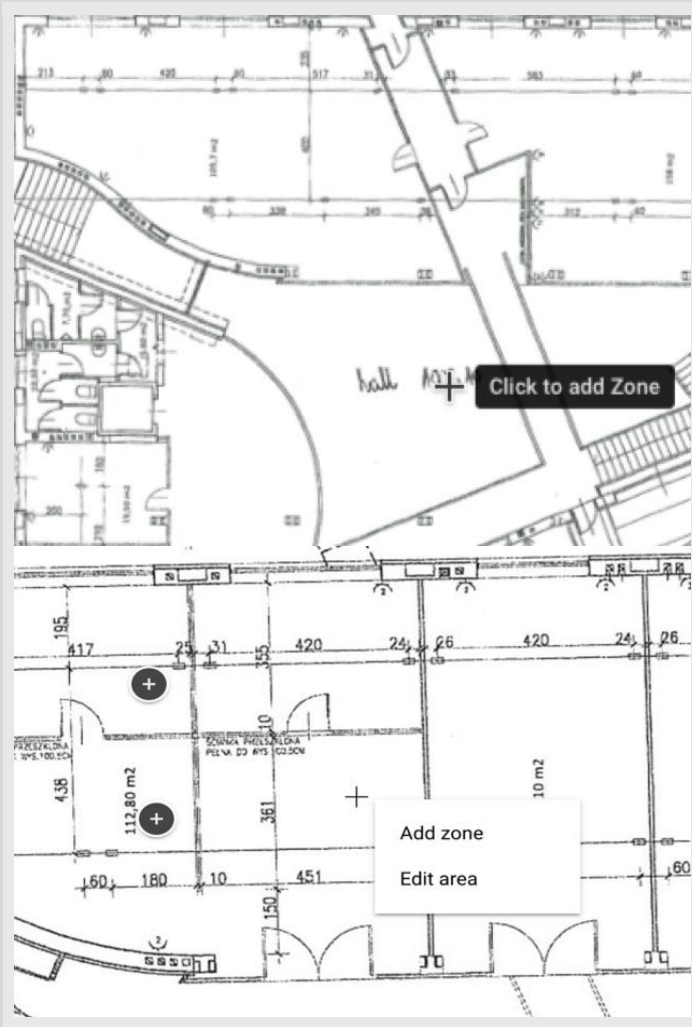

- Navigate to the area view, left click on the floor-plan in a place where you want the zone to be created and add zone.
- You can also right click on the floor-plan and select **"Add zone"** from the dropdown.

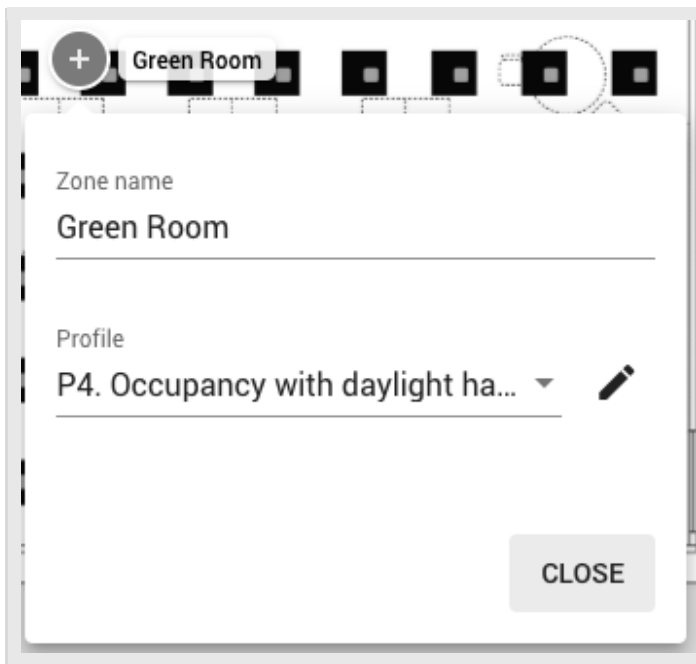


- The zone edition window opens. The default name is "Zone" and it will have no profile assigned.
- **NOTE:** If you don't make any changes to the zone (you do not add zone name, or select a profile), it will not be created. To save the zone - change zone's name and add profile. Those actions are automatically saved.




**NOTE:** You can create multiple zones and edit them later. Don't forget to add zone names and assign profiles. Otherwise your zones will not be created.

## Edit a zone

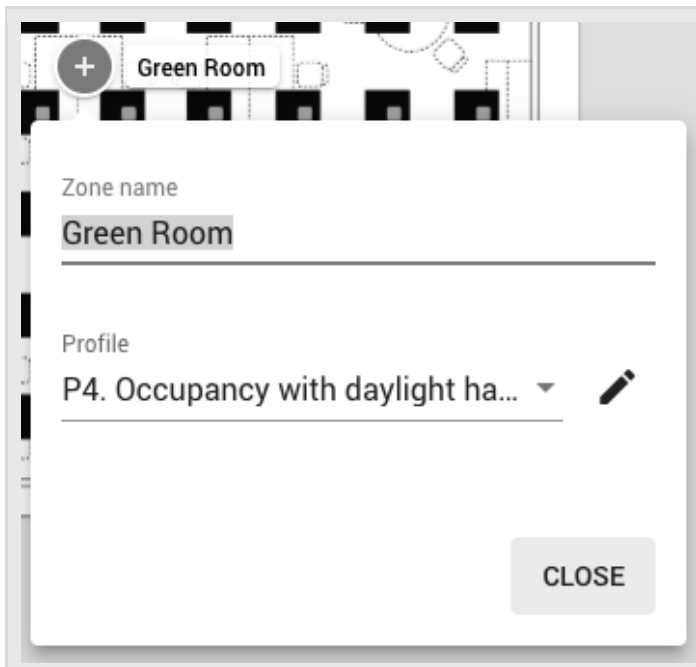

- Editing a zone can be done in two ways:
- **Right click the zone icon.**
  - Press "**EDIT**" button
  - Enter a name, e.g. Conference Room, select the desired profile e.g. Occupancy.
  - Click the pencil button to the right of the PROFILE to start editing profile settings.
  - Click "**CLOSE**" to save the changes.
- **Left click the zone icon.**
  - **NOTE:** This would work only for zone that has a Profile assigned.
    - Change zone name or select a different profile.

 

- Click the pencil button to the right of the profile name to start editing profile settings.
- Click "**CLOSE**" to save the changes.

### Duplicate zone



To duplicate a zone, right-click an existing zone and select "Duplicate".

HINT: Alternatively, you can press the "Option" key on MacOS or "Alt" key on Windows/Linux and drag an existing zone.

The duplicated zone has the same control and energy profile as the original zone. The zone linking and devices are not copied.

### Profiles

Fulham Commissioning lets you set up 8 types of profiles, each of them can be customized as needed (see: [Customize profile](#)). New profiles can also be created. Each zone must have an assigned profile in order to be commissioned. Profiles can be added when user [creates](#), or [edits](#) a zone.

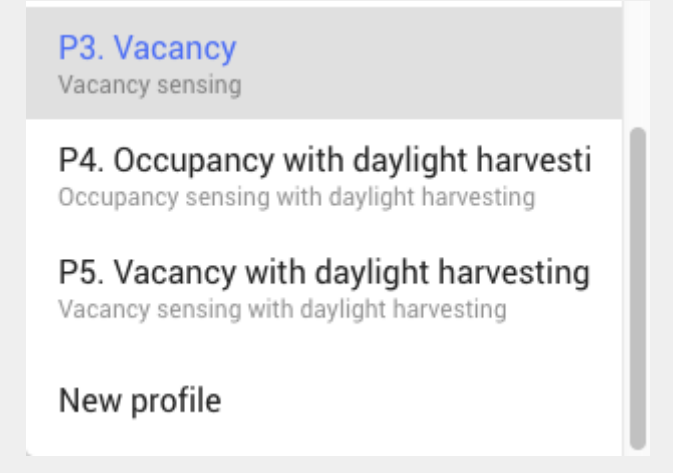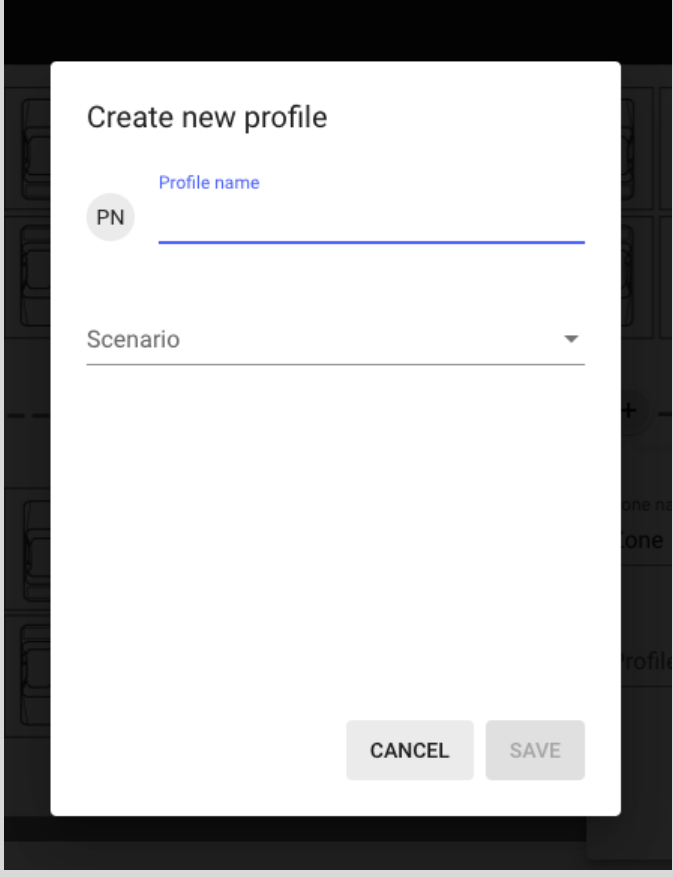	<ul style="list-style-type: none"> <li>• After right clicking on a zone from the floor-plan view and pressing <b>Edit</b>, expand the list of available profiles. For your convenience. under each profile there is a scenario label (this shows the scenario in which this profile operates).</li> <li>• Select a profile, you can edit this profile settings' later.</li> <li>• At the bottom of the list there is an option that allows to create a new profile, if none of the proposed profiles is good for you.</li> </ul>
	<p><b>Creating new profile</b></p> <ul style="list-style-type: none"> <li>• After right clicking on a zone from the floor-plan view and pressing <b>Edit</b>, expand the list of available profiles.</li> <li>• At the bottom of the list there is an option "New Profile" that allows to create a new profile.</li> <li>• Add a profile name and select a scenario.</li> <li>• Tap <b>Save</b> button.</li> </ul> <p>You can edit the profile by changing its settings to the desired values. For more details please check <a href="#">Customize a profile</a> section.</p>



**NOTE:** You can create separate profiles for different types of spaces, e.g. conference rooms can have a "Conference room" profile operating in the Vacancy with daylight harvesting scenario, while corridors can have a "Corridor" profile operating in the Occupancy with daylight harvesting scenario with different times and levels. Each profile can be assigned to

the appropriate zones through a project. This approach allows light control behavior in similar spaces to be easily modified by customizing the profiles.

Regardless of the selected profile, you can define two scenes for each zone that are triggered with a wall switch (see: [Scenes setup](#)). For all profiles, the default light level and automatic mode can be restored manually by pressing the On/Auto key of the wall switch (see: [Using the EnOcean switch](#)).

The available scenarios assigned to the created profiles are:

### **Manual control**

All luminaires in the zone are switched on manually to a defined light level, switched off and dimmed manually with a wall switch. After a power failure, the luminaires will come back to the same level as before the power failure.

### **Vacancy sensing**

All luminaires in the zone are switched on manually with a wall switch to the defined light level and switched off automatically when no motion is detected for a given time. The lights can also be dimmed and switched off manually with a wall switch, and this action will override automation.<sup>4</sup> Automation will resume after the zone has been vacant for a given time (called *timeout* parameter).

### **Vacancy sensing with daylight harvesting**

All luminaires in the zone are switched on manually with a wall switch to the defined light level and switched off automatically when no motion is detected for a given time, or there is sufficient daylight available to maintain the defined light level. The lights can also be dimmed and switched off manually with a wall switch, and this action will override automation. Automation will resume after the zone has been vacant for a given time (timeout).

### **Occupancy sensing**

All luminaires are switched on automatically to the defined level when motion is detected and switched off automatically when no motion is detected for a given time. The lights can also be dimmed and switched off manually with a wall switch, and this action will override automation. Automation will resume automatically after the zone has been vacant for a given time (timeout).

### **Occupancy sensing with daylight harvesting**

All luminaires are switched on automatically to the defined light level when motion is detected and switched off automatically when no motion is detected for a given time, or there is sufficient daylight available. The

---

<sup>4</sup> Manual control (e.g. wall switch) will override automatic control and the luminaires will no longer maintain the desired light level until the automatic control is restored.

lights can also be dimmed and switched off manually with a wall switch and this action will override automation. Automation will resume automatically after the zone has been vacant for a given time (timeout).

### **Photocell**

It is a scenario that allows you to control lighting depending on the level of ambient light and occupancy. The luminaires switch ON/OFF to the defined level depending on whether it gets dark or bright. The light level can adjust automatically to a defined level when it is occupied.

### **Multiple scenes**

Is a scenario that allows you to set up 4 customizable scenes using the Fulham web app. You can set a separate name and different values for each scene depending on their properties, e.g. desired light levels and different timeouts for office working hours and outside of them, or appropriate light conditions for subsequent work shifts.

The scenes can be triggered by:

- a) pressing wall switch e.g. EnOcean switch ([see EnOcean switch section](#))
- b) Scheduler feature which allows for an automatic scene recall at preset time, without manual control

**NOTE:** Multiple scenes scenario cannot be adjusted using the Fulham mobile app.


### **Central control, Central control for dual output**

The Central control is used in spaces where all luminaires are controlled by a central controller that receives the data from sensors and switches. The central controller determines the appropriate light levels for all luminaires in a zone.


In case of Central control for dual output scenario, one group of devices is controlled centrally and second is controlled locally.

Customize a profile

Each profile can be customized by changing its settings to the desired values.

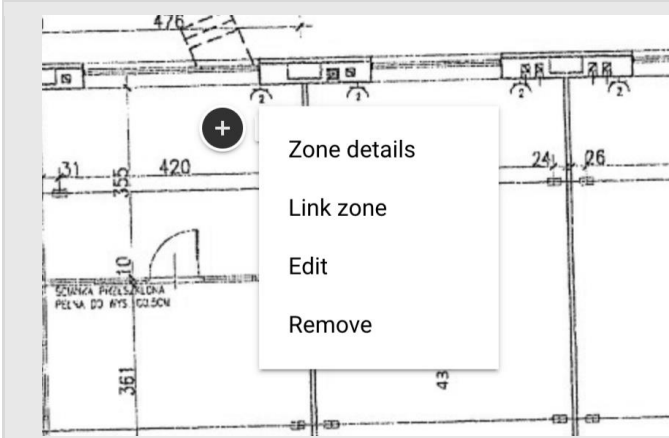


Open the correct plan, right-click the zone icon (e.g. + icon) and select **“EDIT”**.

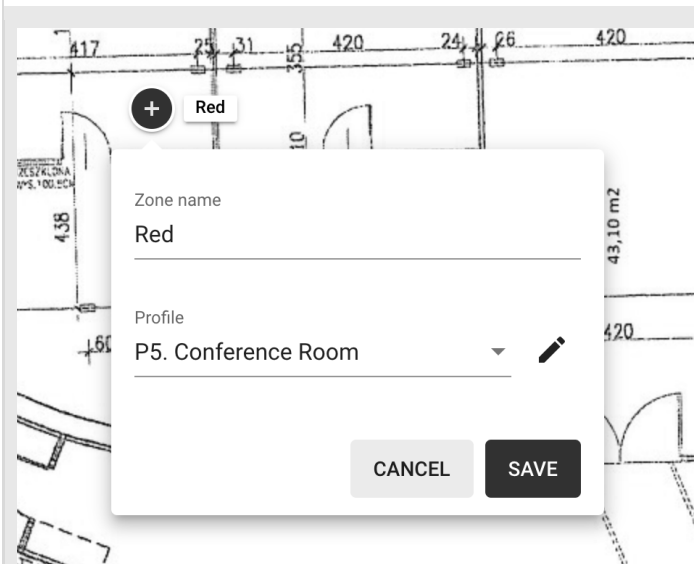


Click the **“EDIT”** pen icon to open the profile customization options.




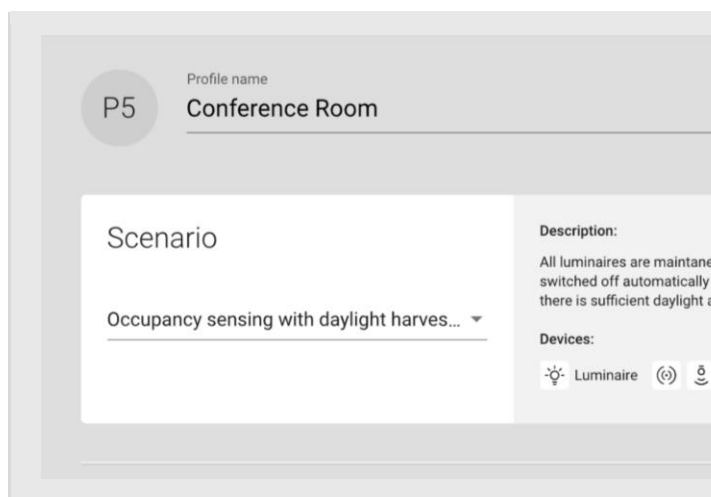

- Change the **SCENARIO**, which defines the basic behavior of the zone.<sup>5</sup>
- Customize the available scenario parameters (the displayed set of parameters depends on the type of scenario which is assigned to the profile).
- Rename the profile.

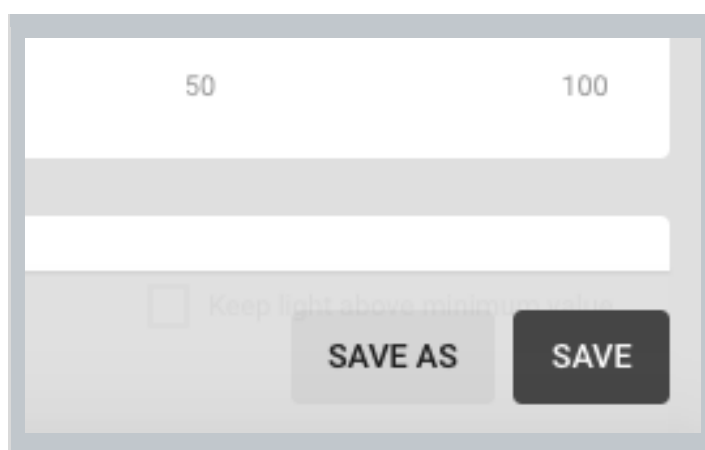


- Click **"SAVE"** to apply the customized profile to all zones in the project where it is used.
- Click **"SAVE AS"** to save a new profile and apply it only to the zone currently being edited. The new profile can be subsequently applied in other zones.

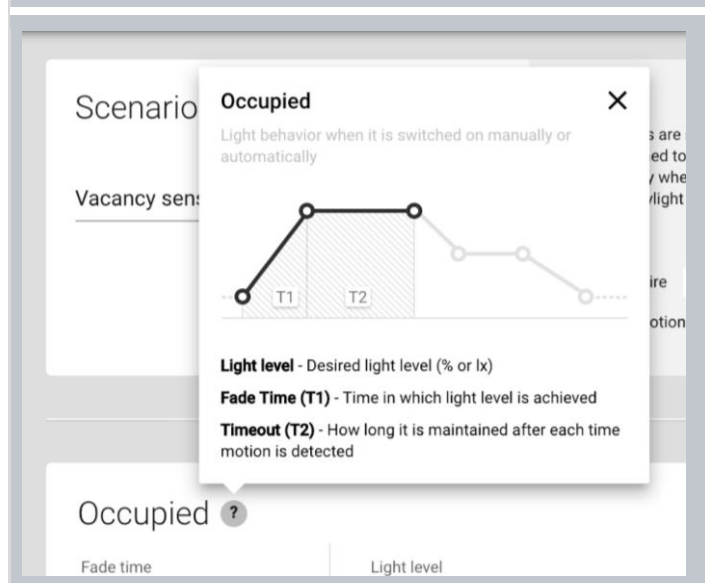

- Click the question mark icon to see an extended description of all of the parameters on the configuration page.

<sup>5</sup> To avoid confusion, we recommend using the "New profile" option or changing the name of the edited profile.

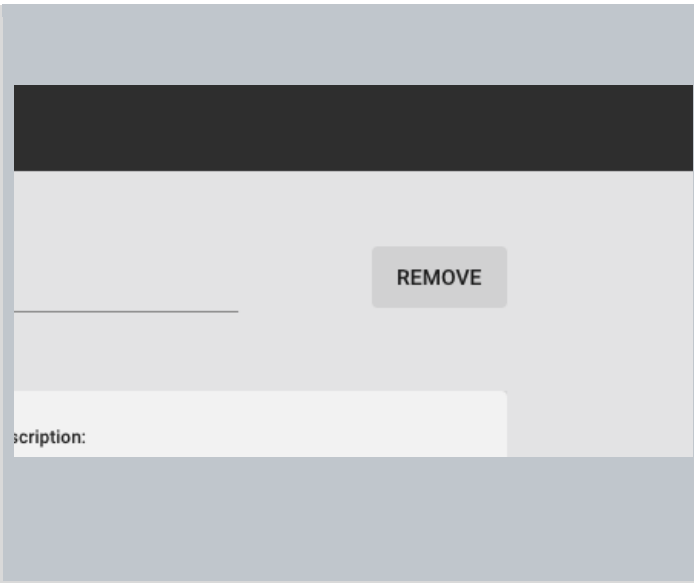

- To remove the profile, select “Remove” button
- You won’t be able to remove the profile if it is being used in at least one zone in the project

Scenario parameters for customization

Each profile has multiple parameters that can be changed to customize it to your needs. The available parameters depend on the **Scenario**, which is assigned to the profile. The parameters are described below.

Manual control scenario

Segment	Parameter	Description
General		
Default light level	Light level	Light level when switched on.
	Fade time	The time over which the light reaches the target level when switched on.
Low/high-end trim	Min	The lower limit of the light level that can be reached with automatic or manual control (e.g. with a wall switch).
	Max	The upper limit of the light level that can be reached with automatic or manual control (e.g. with a wall

		switch).
<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will return to the last level before power failure.
	Defined light level	The light will come on at this light level on power up.
<b>Scenes</b>		
<b>Scene A</b>	Light level (%)	Light level when switched on
<b>Scene B</b>	Light level (%)	Light level when switched on

## Vacancy sensing & Occupancy sensing scenarios

<b>General</b>		
<b>Occupied</b>	Light level	Light level when switched on.
	Timeout	The time for which the light is maintained at the defined level when switched on. The timer is reset each time motion is detected.
	Fade time	The time over which the Occupied mode Light Level is reached.

<b>Prolonged</b>	Light Level	Light level to be maintained for a defined time after the Occupied mode (occupancy) timeout.
	Timeout	The time for which the light is maintained at the Prolonged mode Light Level after Occupied mode timeout.
	Fade time	The time over which Prolonged mode light level is achieved after Occupied mode timeout.
<b>Vacant</b>	Light Level	Light level to be maintained for a defined time after the Prolonged mode timeout. It can be a non-zero value.
	Fade time	The time over which the Vacant mode light level is achieved after Prolonged mode timeout.
<b>Low/high-end trim</b>	Min	The lower limit of light level achievable via automatic or manual control (e.g. with a wall switch).
	Max	The upper limit of light level achievable via automatic or manual control (e.g. with a wall switch).

<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will return to the last level before power failure.
	Defined light level	The light will come on at this light level on power up.
<b>Manual override timeout</b>	Time	<p>Define the length of time after which the light will switch itself to default settings.</p> <p>Example: Manual override timeout is set to 10 minutes. When I turn on one of the preset scenes from the EnOcean switch, after 10 minutes of detected vacancy in the space the light will be switched to default settings.</p> <p><b>NOTE:</b> Any human activity detected (such as occupancy, using the EnOcean switch) will reset the timer.</p>
<b>Scenes</b>		
<b>Scene A</b>	Light level (%)	Light level when switched on
<b>Scene B</b>	Light level (%)	Light level when switched on

## Occupancy sensing with daylight harvesting scenario

### General

<b>Occupied</b>	Light level	Light level when switched on.
	Timeout	The time for which the light is maintained at the defined level when switched on. The timer is reset each time motion is detected.
	Fade time	The time over which the Occupied mode Light level is achieved.
	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone with will not fall down below, e.g., 10% for the time of Occupied mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Prolonged</b>	Light level	Light level to be maintained for a defined time after the Occupied mode (occupancy) timeout.
	Timeout	The time for which the light is maintained in the Prolonged mode Light level after Occupied mode timeout.
	Fade time	The time over which Prolonged mode light level is achieved after Occupied mode timeout.
	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone with will not fall down below, e.g., 10% for the time of Prolonged mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Vacant</b>	Light level	Light level to be maintained for a defined time after the Prolonged mode timeout. It can be a non-zero value.

	Fade time	The time in which Vacant mode light level is achieved after Prolonged mode timeout.
	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone will not fall down below, e.g., 10% for the time of Vacant mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Low/high-end trim</b>	Min	The lower limit of light level achievable via automatic or manual control (e.g. with a wall switch).
	Max	The upper limit of light level achievable via automatic or manual control (e.g. with a wall switch).
<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will return to the last level before power failure.
	Defined light level	The light will switch on to this light level on power up.
<b>Manual override timeout</b>	Time	<p>Define the length of time after which the light will switch itself to default settings.</p> <p>Example: Manual override timeout is set to 10 minutes. When I turn on one of the preset scenes from the EnOcean switch, after 10 minutes of detected vacancy in the space the light will be switched to default settings.</p> <p><b>NOTE:</b> Any human activity (such as occupancy or use of the EnOcean switch) will reset the timer.</p>

Scenes		
<b>Scene A</b>	Light level (%)	Light level when switched on
<b>Scene B</b>	Light level (%)	Light level when switched on

## Vacancy sensing with daylight harvesting

General		
<b>Occupied</b>	Light level	Light level when switched on.
	Timeout	The time for which the light is maintained at the defined level when switched on. The timer is reset each time motion is detected.
	Fade time	The time in which desired light level is achieved.
	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone will not fall down below, e.g., 10% for the time of Occupied mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Prolonged</b>	Light level	Light level to be maintained for a defined time after the Occupied mode (occupancy) timeout.
	Timeout	The time for which the light is maintained in the Prolonged mode Light level after Occupied mode timeout.
	Fade time	The time over which Prolonged mode light level is achieved after Occupied mode timeout.



	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone with will not fall down below, e.g., 10% for the time of Occupied mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Vacant</b>	Light level	Light level to be maintained for a defined time after the Prolonged mode timeout. It can be a non-zero value.
	Fade time	The time in which Vacant mode light level is achieved after Prolonged mode timeout.
	Keep light above minimum value	<p>The feature allows to keep the light in the zone at the preset minimal value. The light in the zone with will not fall down below, e.g., 10% for the time of Occupied mode.</p> <p>Min. value: select the minimum light value using the slider or enter the percentage value manually.</p>
<b>Low/high-end trim</b>	Min	The minimum light level achievable via automatic or manual control (e.g. with a wall switch).
	Max	The maximum light level achievable via automatic or manual control (e.g. with a wall switch).
<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will restore to the last level before power failure.
	Defined light level	The light will come on at this light level on power up.

<b>Manual override timeout</b>	Time	<p>Define the length of time after which the light will switch itself to default settings.</p> <p>Example: Manual override timeout is set to 10 minutes.</p> <p>When I turn on one of the preset scenes from the EnOcean switch, after 10 minutes of detected vacancy in the space the light will be switched to default settings.</p> <p><b>NOTE:</b> Any human activity detected (such as occupancy, using the EnOcean switch) will reset the timer.</p>
<b>Scenes</b>		
Scene A	Light level (%)	Light level when switched on
Scene B	Light level (%)	Light level when switched on

## Central control

Segment	Parameter	Description
<b>General</b>		
<b>Default light level</b>	Light level	When selected, the light will come on to this level (0-100% light level).
	Fade time	The time over which the light reaches the target level after it is switched on.
<b>Low/high-end trim</b>	Min	The minimum light level that can be adjusted automatically or manually (e.g. with a wall switch).
	Max	The maximum light level that can be achieved. automatically or manually (e.g. with a wall switch).

<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will restore to the last level before power failure.
	Defined light level	The light will come on at this light level on power up.
<b>Scenes</b>		
<b>Scene A</b>	Light level (%)	Light level when switched on
<b>Scene B</b>	Light level (%)	Light level when switched on

## Photocell

Segment	Parameter	Description
<b>General</b>		
<b>Night</b>	Night starts below	Threshold of the level reported by the light sensor, below which the lighting is switched to the night settings
	Default	The light level to which the lighting is switched on when it gets dark (only vacant if occupancy level is enabled).
	Occupancy	The light level to which the lighting is switched on when occupancy is detected.
<b>Occupancy timeout</b>	Duration	The time for which the light is maintained at the defined level after occupancy is detected.
<b>Manual override timeout</b>	Time	Define the length of time after which the light will switch itself to default settings.
<b>Low/high-end trim</b>	Min	The minimum light level that can be adjusted automatically or manually (e.g. with a wall switch).

	Max	The maximum light level that can be achieved. automatically or manually (e.g. with a wall switch).
<b>Day</b>	Day starts above	Threshold of the level reported by the light sensor, above which the lighting is switched to the day settings.
	Default	The light level to which the lighting is switched on when it gets bright (only vacant if occupancy level is enabled).
	Occupancy	The light level to which the lighting is switched on when occupancy is detected.
<b>Fade time</b>	Duration	The time in which particular light level is reached.
<b>Power up behavior</b>	Keep light off	The light will remain off on power up.
	Restore	The light will restore to the last level before power failure.
	Defined light level	The light will come on at this light level on power up.
<b>Scenes</b>		
<b>Scene A</b>	Light level (%)	Light level when switched on
<b>Scene B</b>	Light level (%)	Light level when switched on

### Multiple scenes


Is a scenario that allows you to add 4 customizable scenes in the Fulham web app. It cannot be configured from the Fulham mobile app. You can set a separate name and different values for each scene depending on its properties.

### SCENE DETAILS


Scene name	Click to edit the scene name.	
Scene properties	Static scene	<p>If a static scene is chosen, none of the checkboxes are ticked.</p> <p>Scene properties</p> <p><input type="checkbox"/> Automatic scene <input type="checkbox"/> Daylight harvesting</p> <p><b>Scene settings:</b></p> <p>Light level: Set the desired light level.</p>
	Automatic scene	<p>Scene properties</p> <p><input checked="" type="checkbox"/> Automatic scene <input type="checkbox"/> Daylight harvesting</p> <p><b>Scene settings:</b></p> <p>Occupied Fade time: the time during which the desired light level is achieved. Timeout: the time for which the light is maintained at the defined level when motion is detected. Light level: the desired light level.</p> <p>Prolonged Fade time: the time during which the desired light level is achieved. Timeout: the time for which the light is maintained at the defined level before switched to Vacant. Light level: the desired light level.</p> <p>Vacant Fade time: the time during which the desired light level is achieved. Timeout: by default, it is set to: until Occupied mode is triggered. Light level: the desired light level (set to OFF by default).</p>

	Automatic scene with daylight harvesting	<div>Scene properties</div> <div><input checked="" type="checkbox"/> Automatic scene <input checked="" type="checkbox"/> Daylight harvesting</div> <div><b>Scene settings:</b> Keep light level above a minimum value:  The feature allows the light in the zone to be kept at a preset minimum value. The light in the zone with will not fall below this level for the duration of the Occupied mode.  Min. value: select the minimum light value using the slider or enter the percentage value.</div> <div><div>Occupied ?</div><div><div><div>Fade time</div><div>1</div><div>sec</div><div></div></div><div><div>Timeout</div><div>10</div><div>min</div><div></div></div></div><div><div><div>Light level</div><div>300</div><div>LX</div></div><div><div>Min. value</div><div>1</div><div>%</div></div></div><div><div><div><div></div><div>0</div><div>750</div><div>1500</div></div><div><div></div><div>0</div><div>50</div><div>100</div></div></div><div><input checked="" type="checkbox"/> Keep light above minimum value</div></div></div>
--	--	--


Create a new scenario

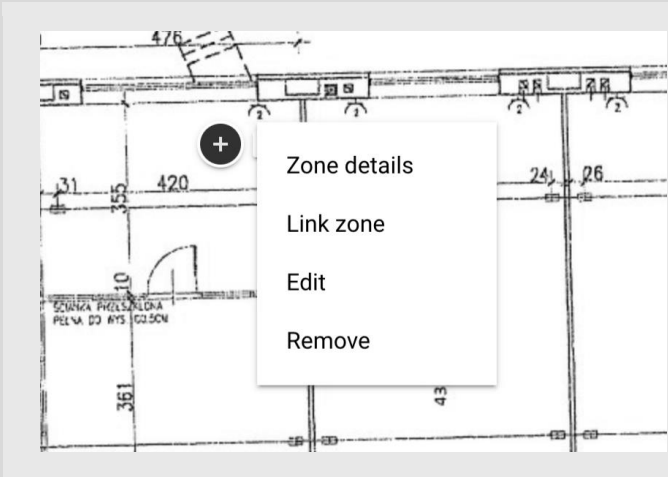

Open the desired plan, right click the zone and select **“EDIT”**.

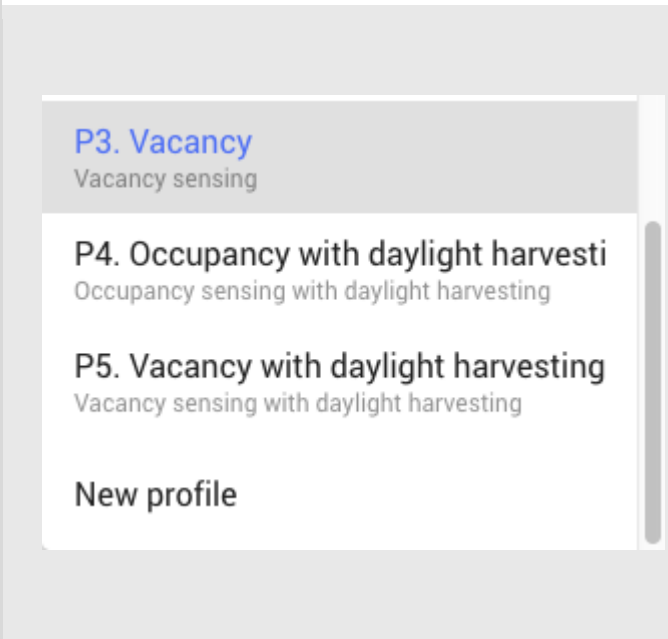


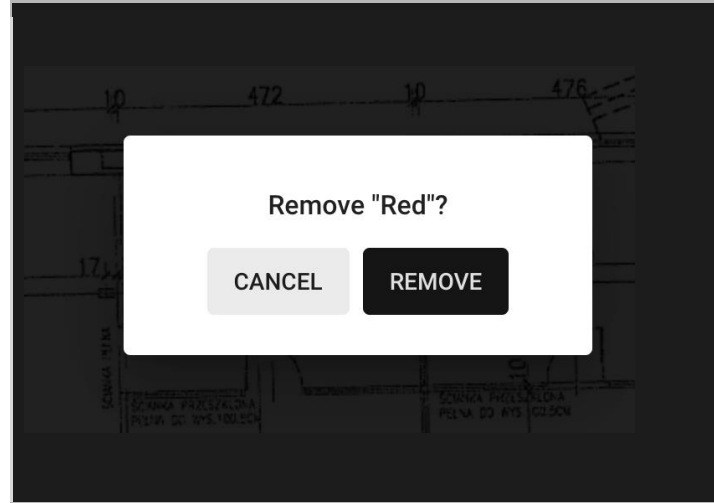
Unfold the "Profile" list and scroll down until you see **“NEW PROFILE”**. Click it to start creating a new profile.

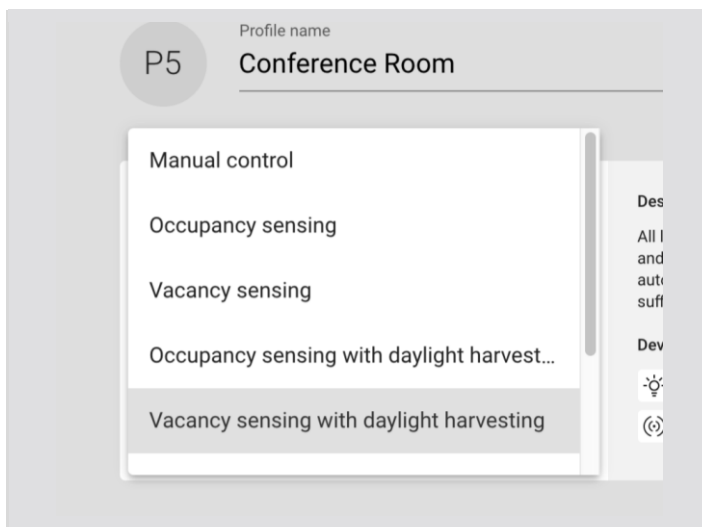


- Enter the profile name.
- Select the scenario to define the basic behavior of the zone. This determines which parameters are available for customization.
- **“SAVE”** the new profile. It can now be applied to any zone.



Remove a zone

	<p>Right click the zone you want to remove and select <b>“REMOVE”</b>.</p>
	<p>Confirm your decision by clicking <b>“REMOVE”</b> on the confirmation pop-up. In order to prevent accidental removal of the zone, the button will be clickable after 3 seconds.</p>

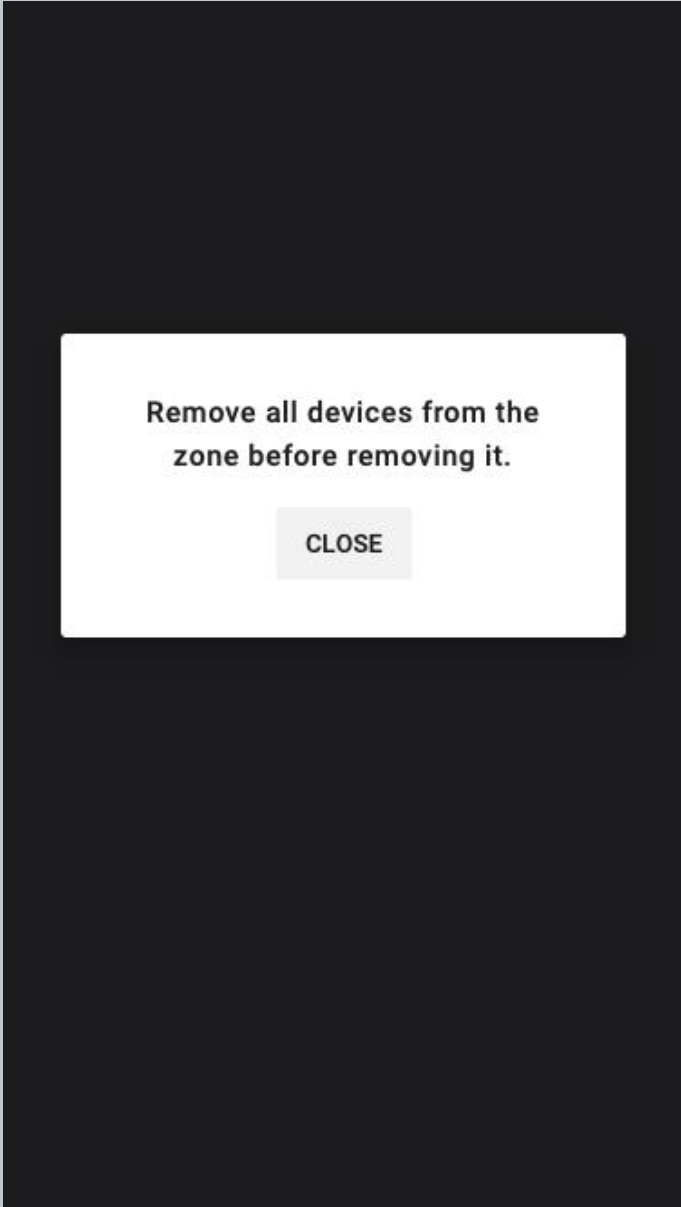

Remove all devices from the  
zone before removing it.

CLOSE

**Note:** You are not able to remove zones with active devices. Before doing it you will need to remove all devices.

For more information on how to do that go to the section "Remove device".

## Zone linking

Zone linking allows occupancy and switch control to be shared between multiple zones, i.e.:

- controlling multiple zones with a single wall switch,
- triggering the lights in multiple zones with an occupancy sensor.

The feature allows to link zones in two manners: **uni-directional**, or **bi-directional**.

### Uni-directional linking

Allows for triggering or turning off the lights in linked zones in one direction only (Zone A triggers the lights in zone B, but not the other way around).


Example: A conference room (the controlling zone) is linked with a corridor. Detecting occupancy or pressing a wall switch in conference room will trigger the lights in corridor. Actions in corridor do not affect the light in conference room.

In uni-directional linking, the controlling zone is responsible for adjusting lighting behavior in all linked zones. The signal to turn the lights on or off in linked zones depends on the controlling zone's scenario settings and can be configured with the Fulham web app.

### Bi-directional linking


Allows for triggering or turning off the lights in linked zones in both directions. (Zone A triggers the lights in zone B, and zone B triggers the lights in zone A).

Example: A corridor is divided in two zones (zone A, and zone B), which should have the same lighting behavior. When bi-directional zone linking is applied, occupancy detected in any of the zones will turn on the light in the whole corridor (zone A and zone B). In this case, linking works in two ways - zone A triggers zone B, and zone B triggers zone A.

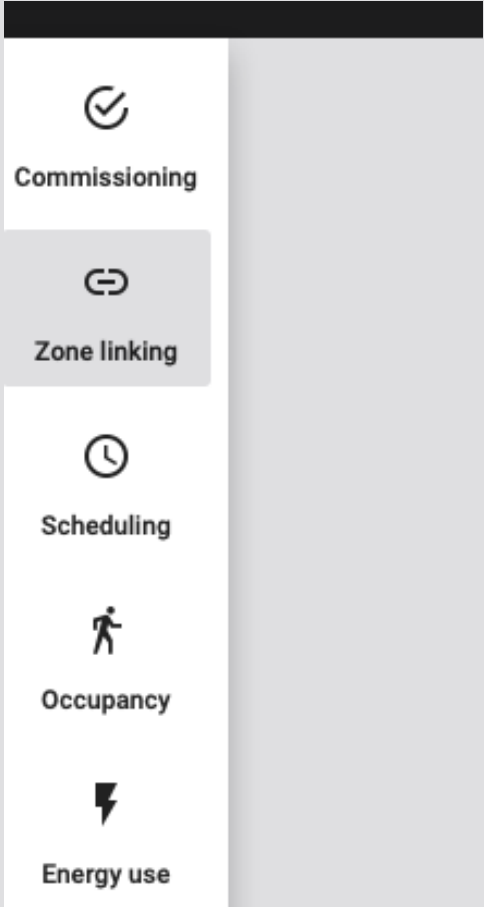

To link a zone, open the [Fulham web app](#), navigate to My projects, select the target Area and click the **Zone linking** tab.

**HINT:** Alternatively, right-click the zone and select “**Link zone**”.

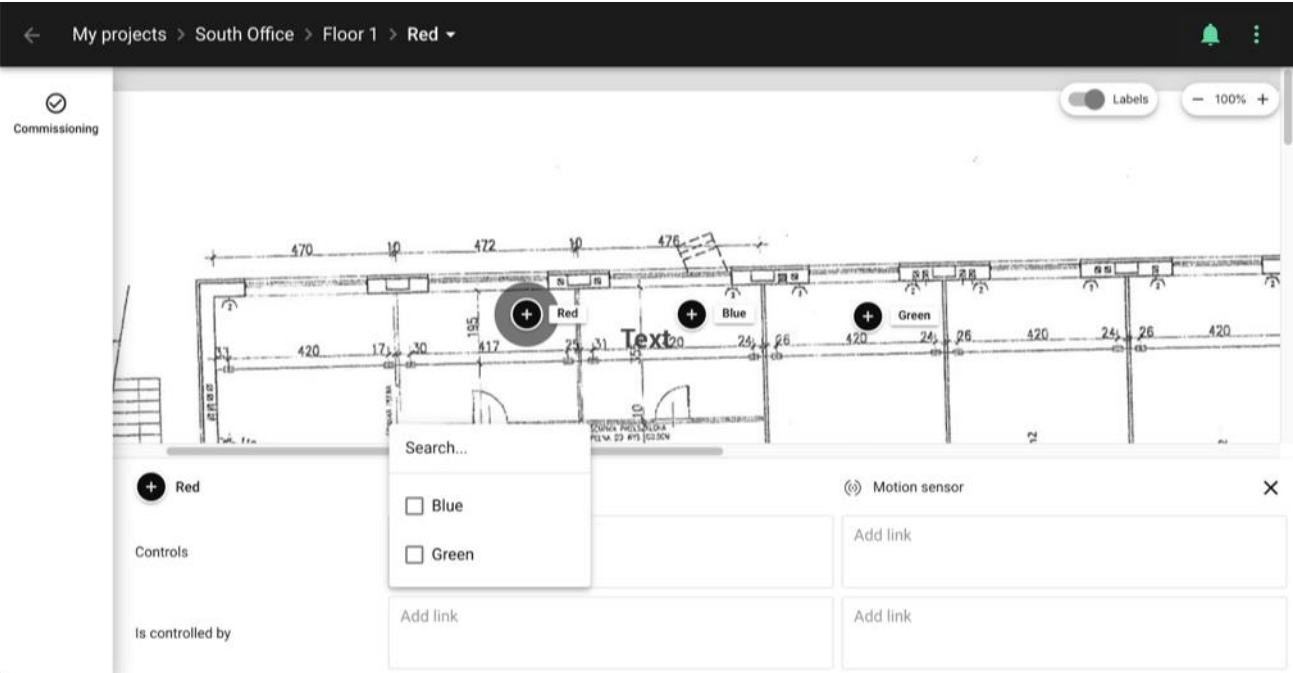

Use the panel to link zones by adding them to the appropriate fields in the table.

### Switch controls

These zones (e.g. zone: Blue, Green) will be controlled by the switch added to the Conference room (zone: Red).

### Motion sensor controls

Light in these zones will be controlled by the occupancy sensors added to the Conference room (zone: Red).


### (zone: Red) is controlled by a switch

The switch added to these zones (e.g. zones: Blue, Green) will control the light in the Conference room (zone: Red).

### (zone: Red) is controlled with occupancy

An occupancy sensor added to these zones (e.g. zones: Blue, Green) will control the light in the Conference room (zone: Red).

You can select other zones on the plan to set up zone linking for them. To finish zone linking, close the panel by clicking the **X** icon in the top right corner, or by clicking on the background.

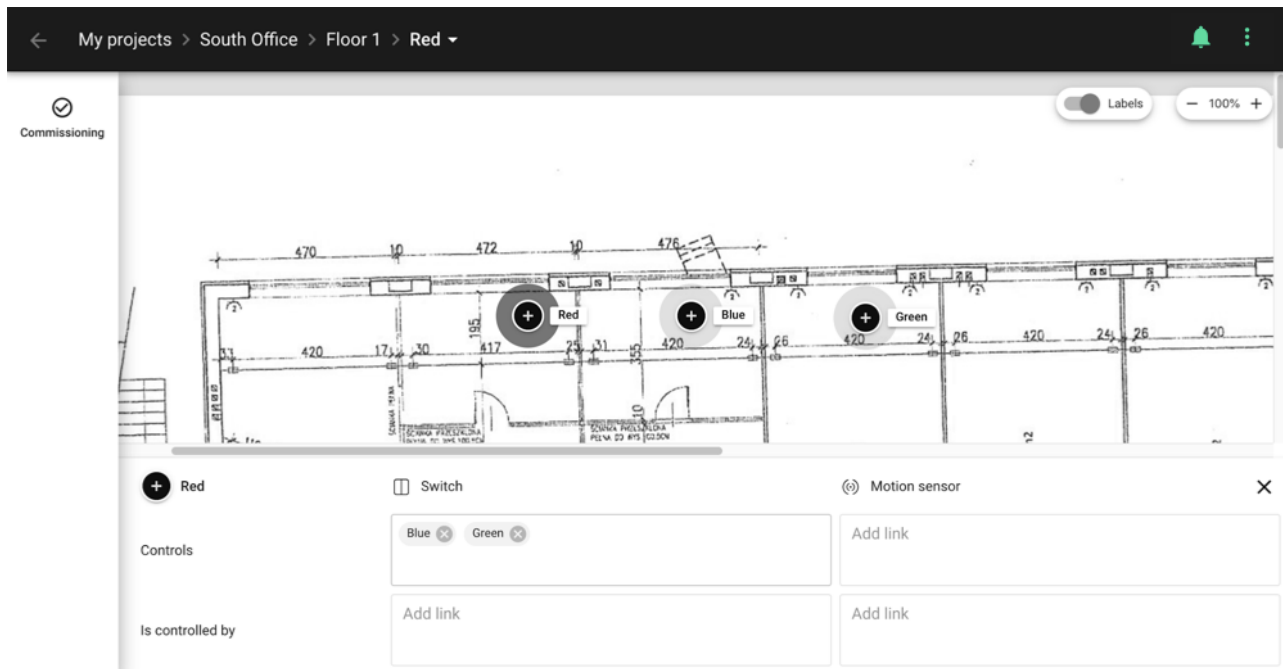

The links between zones can be visualized by holding your cursor over the panel.




### Zone linking recommendations

When you use zone linking feature in your lighting installation, it is worth considering what are the profiles and corresponding scenarios in each of the linked zones. For example, a good practice is to link Conference room zone with Vacancy sensing profile and Corridor with Occupancy sensing profile to have corridor hold function. On the other hand, it is not advisable to link motion between two zones, where one of them has Manual control profile, and light in the other zone is controlled with an occupancy sensor. Check the below linking motion examples for more information.

Useless configuration:


<div><div>master zone</div><div><div>Zone A MANUAL</div><div>↓</div><div>Zone B VACANCY</div></div></div>	<p>Zone A (Manual control) does not have occupancy sensing enabled, so it will not be possible to control the light in zone B (Vacancy).</p>
<div><div>master zone</div><div><div>Zone A OCCUPANCY</div><div>↓</div><div>Zone B MANUAL</div></div></div>	<p>Occupancy in Zone A will not trigger light in Zone B, as the Zone B is configured to be only controlled manually.</p>


Recommended configuration:

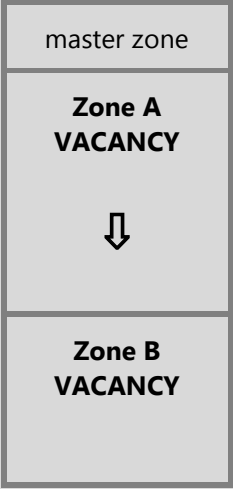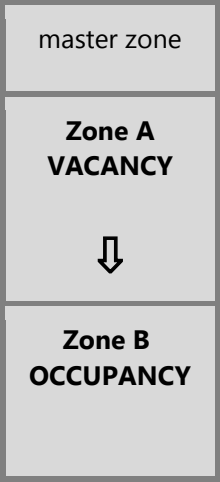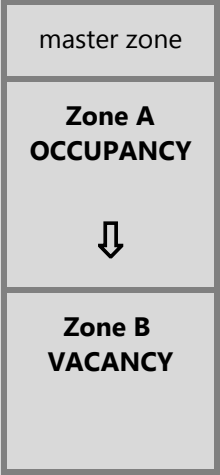		
Both zones have the same profile. Pressing a wall switch in zone A triggers the light in zone B.	The light in the Zone B will be maintained while occupancy is detected in Zone A.	After the light is switched on manually in the Zone B it will be maintained while occupancy is detected in Zone A.




## Remove an area

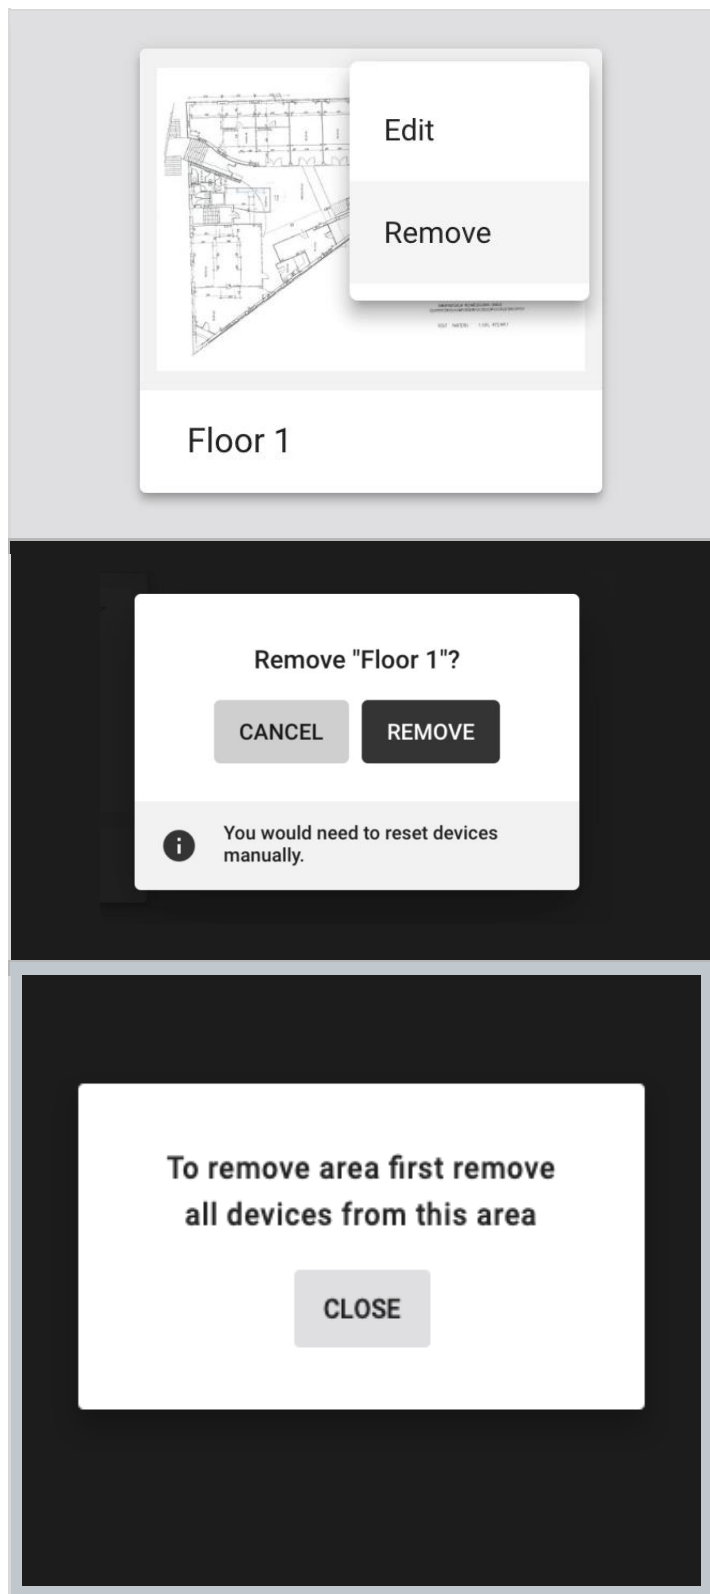


- Navigate to the selected project.
- Place the cursor on the  menu icon on the area to open the context menu, then select **"REMOVE"**.


Confirm your decision by clicking **"REMOVE"** on the confirmation popup. In order to prevent accidental removal of the area, the button will be clickable after 3 seconds.

 
**Note:** You are not able to remove an area with active devices. Before doing it you need to remove all devices.  
For more information on how to do that go to the section "Remove device".




Remove a project

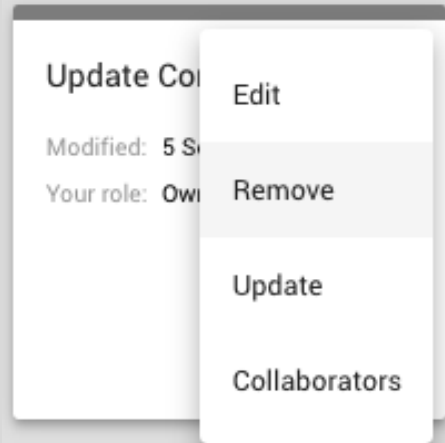

- Navigate to the project list.
- Click the context menu icon  on the project you want to remove and select **"REMOVE"**.
- You will see the "Remove" option only if your role in the project is "Owner".

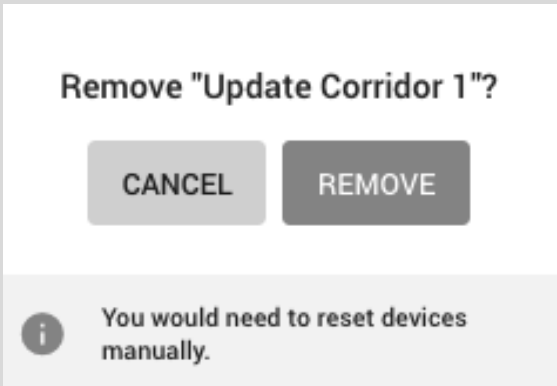


- On the confirmation pop-up, click **"REMOVE"** again. In order to prevent accidental removal of the project, the button will be clickable after 3 seconds.
- The project will be removed and will not be available for any users collaborating on the project.

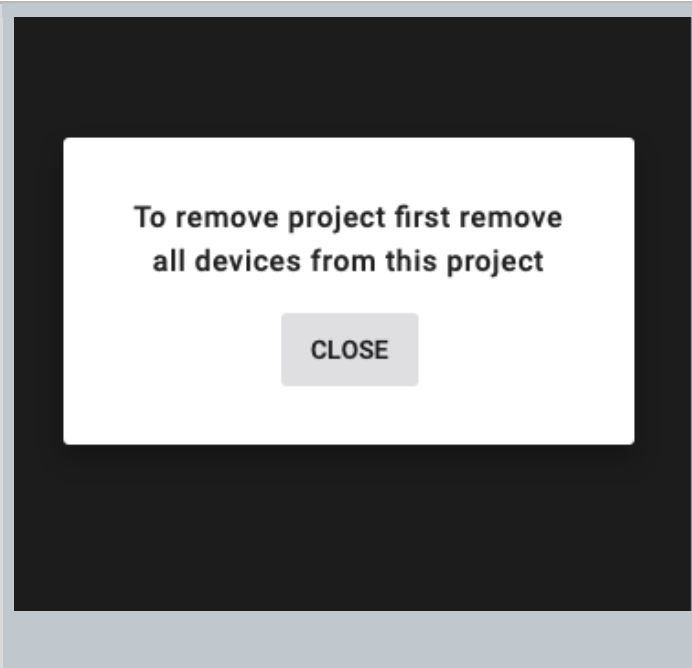


**Note:** You are not able to remove a project with active devices. Before doing it you need to remove all devices first.  
For more information on how to do that go to the section "Remove device".


**Invite & manage project collaborators**

Multiple users can collaborate on the same project by creating and editing the commissioning plan and, most importantly, by carrying out on-site commissioning, thereby shortening the most critical part of the whole project.

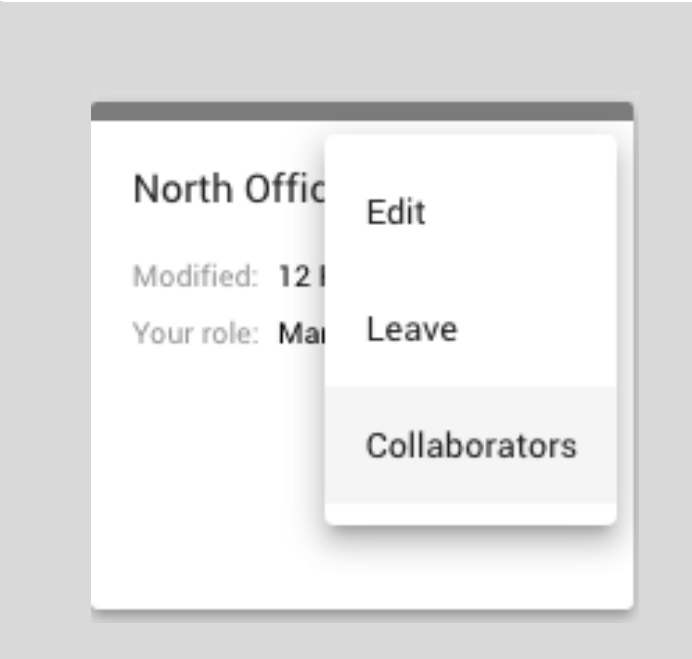


Open My projects tab and place the cursor on the menu icon  of the selected project and click on "**COLLABORATORS**".

**NOTE:** You can also click "**COLLABORATORS**" after entering a project.

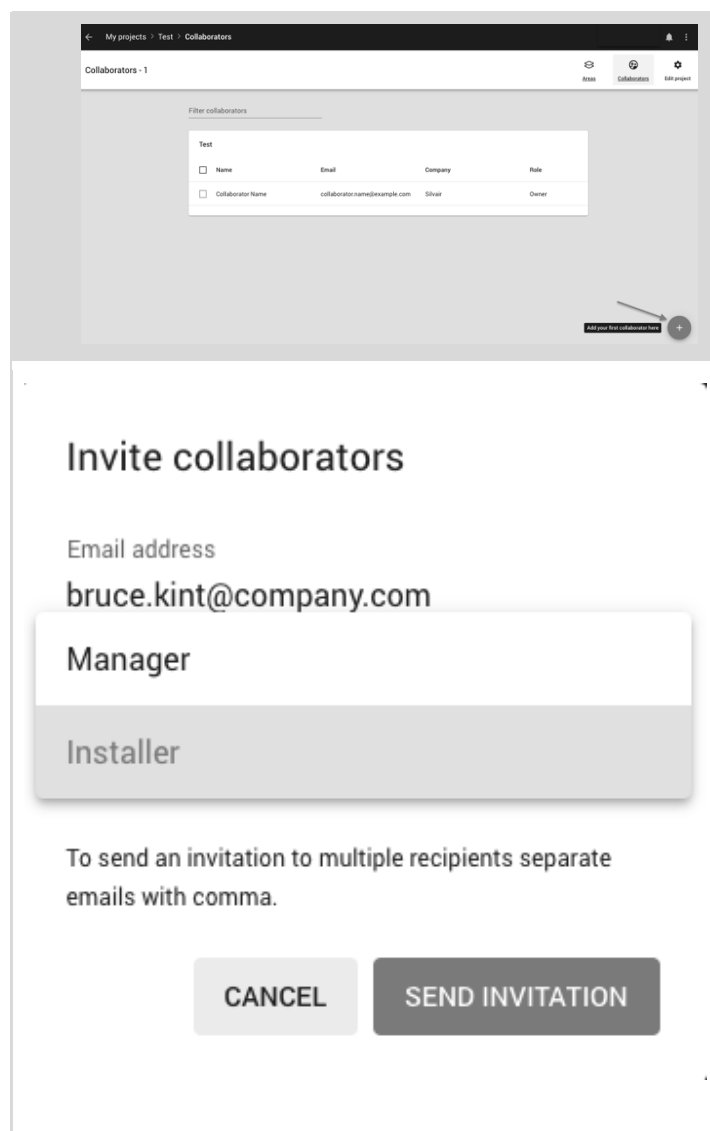

You should see a list of collaborators available in the selected project. In the bottom-right corner of the view there is a blue button. Click it to add a new collaborator to the project.

- Enter one or more email addresses to invite collaborators and share access to the project.
- Select the role for the new user(s). You can choose between:
  - Installer
  - Manager
- Depending on the selected user role the user rights vary. Confirm by pressing the **SEND INVITATION** button.
- The invited users will be granted a set of rights to the project which depend on the user role.

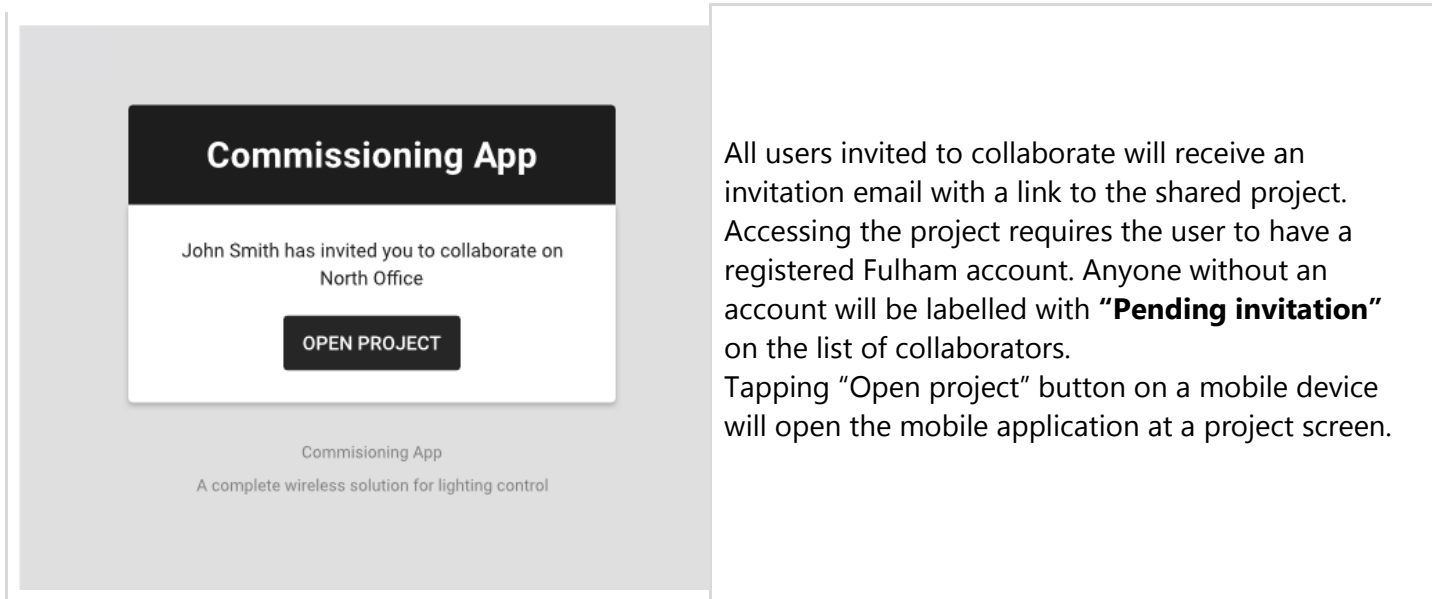

## User roles in the project

Our commissioning apps (web and mobile) currently support 4 user-roles in the projects: owner, installer, manager and end-user.

☐ End user

Can only view the project and control the light.  
Cannot make any changes.

☐ Installer

Can make changes in the project. Can add and manage devices.

☐ Manager

Can manage collaborators, make changes in the project, add and manage devices.

☒ Owner

Have full access to the project. Cannot be removed.

If you create a project, you automatically become owner of the project.

**Owner role:**

- The owner is automatically assigned to the user who creates a project in the app. There is only one owner of the project.
- The owner right cannot be revoked (there must always be an owner of the project), but instead of that it can be transferred to a verified collaborator.
- You can transfer the ownership only when:
  - You're logged in as owner of the project
  - There're other project members added (the owner is not the only person left in the project)
  - The other collaborator(s) already have a verified account in the system
- Only the owner of a project is able to delete a project from the web mobile app
- Owner can manage access to the project

☐ End user

Can only view the project and control the light.  
Cannot make any changes.

☐ Installer

Can make changes in the project. Can add and manage devices.

☒ Manager

Can manage collaborators, make changes in the project, add and manage devices.

☐ Owner

Have full access to the project. Cannot be removed.

**Manager role:**

- This role is granted to the user by inviting the new collaborator to a project (access is granted by owner or another manager).
- Can manage collaborators (invite / remove users from the project and change user roles).
- Can manage project & commissioning processes.
- It is possible to have multiple managers added to a single project.
- They can leave a project but cannot remove the project (only the "Owner" role can remove the project).

☐ End user

Can only view the project and control the light.  
Cannot make any changes.

☒ Installer

Can make changes in the project. Can add and manage devices.

☐ Manager (Current)

Can manage collaborators, make changes in the project, add and manage devices.

☐ Owner

Have full access to the project. Cannot be removed.

**Installer:**

- This role is granted to the user by inviting the new collaborator to a project (access is granted by owner or another manager).
- Can manage project & commissioning processes.
- This user cannot manage collaborators (cannot invite / remove users from the project or change user roles).
- it is possible to have multiple installers added to a single project.
- They can leave a project but cannot remove the project (only the "Owner" role can remove the project).



### End user

Can only view the project and control the light.  
Cannot make any changes.



### Installer

Can make changes in the project. Can add and manage devices.



### Manager (Current)

Can manage collaborators, make changes in the project, add and manage devices.



### Owner

Have full access to the project. Cannot be removed.

#### End user:

- This role is the default role granted to the user by inviting the new collaborator to a project (access is granted by owner or another manager).
- The user can only see a list of projects with an option to "Leave project" selected from the project context menu
- This user cannot make changes inside a project, or manage collaborators (cannot invite / remove users from the project or change user roles)
- It is possible to have multiple end users added to a single project
- They can leave a project, but cannot remove the project (only the "Owner" role can remove the project)



### Change Zoe Miller role

☐ End user

Can only view the project and control the light.  
Cannot make any changes.

☒ Installer

Can make changes in the project. Can add and  
manage devices.

☐ Manager (Current)

Can manage collaborators, make changes in  
the project, add and manage devices.


☐ Owner

Have full access to the project. Cannot be  
removed.

CANCEL

SAVE

**Changing user roles:**

- To change the user role (e.g. from a manager to an installer role), select a project from the menu icon  and click COLLABORATORS from the menu.
- Select the user and select: Change role
- Select the role that you want this user to have and confirm with the SAVE button
- The role will be updated for the selected user.
- NOTE: It is not possible to change the role of a user to "Owner" role, as there is only one owner of each project.

### Change Zoe Miller role

☐ End user

Can only view the project and control the light.  
Cannot make any changes.

☐ Installer

Can make changes in the project. Can add and manage devices.

☐ Manager (Current)


Can manage collaborators, make changes in the project, add and manage devices.

☒ Owner

Have full access to the project. Cannot be removed.


CANCEL

TRANSFER



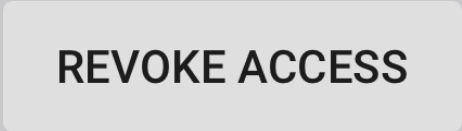
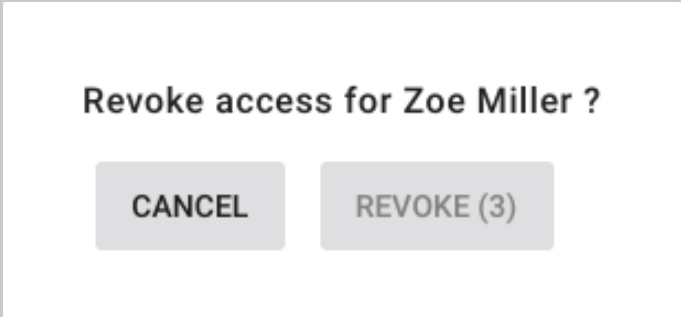


You will transfer the owner role and loose ability to fully manage the project.

### Transfer ownership of a project:

- It is not possible to change the role of a user who is a manager, or an installer to owner of a project. The role of "Owner" can only be transferred.
- To do it, owner of a project needs to open COLLABORATORS panel and click the  icon on any user's menu which have a confirmed account in the app.
- Press "Change role" and select "Owner". Confirm by pressing TRANSFER button.
- The ownership of the project will be transferred to the selected user. The user will be notified about becoming the new owner of that project.

Revoke access to the project

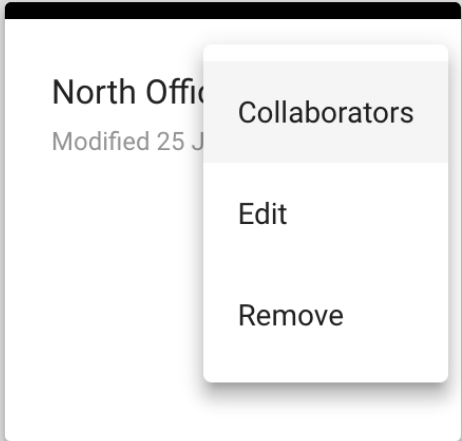	<p>Click the context menu icon  in the "My projects" tab and select <b>"COLLABORATORS"</b>.</p> <p><b>NOTE:</b> You can also click <b>"COLLABORATORS"</b> after entering a project.</p>
	<p>Select one or more collaborators by clicking the checkbox next to a username on collaborators page. When you pick the person, you want to remove from the project, select "REVOKE ACCESS" which is displayed in the right corner of the table with collaborators.</p>
	<p>Confirm by clicking <b>"REVOKE"</b> on the pop-up window.</p> <p><b>NOTE:</b> It is not possible to revoke access to of the user with the "Owner" role in the project.</p>



**NOTE:** The selected users will be removed from the project and will no longer have access to it either from the web app or the mobile app.<sup>6</sup>

## Supporting previous versions

New versions of Fulham Commissioning platform bring new features, improvements and some modifications that may not be compatible with the capabilities of devices in your projects or may require some actions on-site such as reconfiguration. You can update your project to the newest version at the right time, or you can keep using it in older version, without having to reconfigure the whole project.



**NOTE:** You will not be able to update projects to the newest version if they already include commissioned devices that are not compatible (e.g. out-of-date, not supported or lacking some features).




**NOTE:** The zones that include devices that are not compatible with the project version will be marked with alerts and conflicting devices will be highlighted on the list of devices.

## Updating project to latest version


There are two ways in which the user can update a project to the newest version.

---

<sup>6</sup> Fulham prevents you from removing the last collaborator as there must always be at least one user with access to the project. When the original owner is removed as a collaborator of the project, ownership is automatically transferred to the next collaborator.

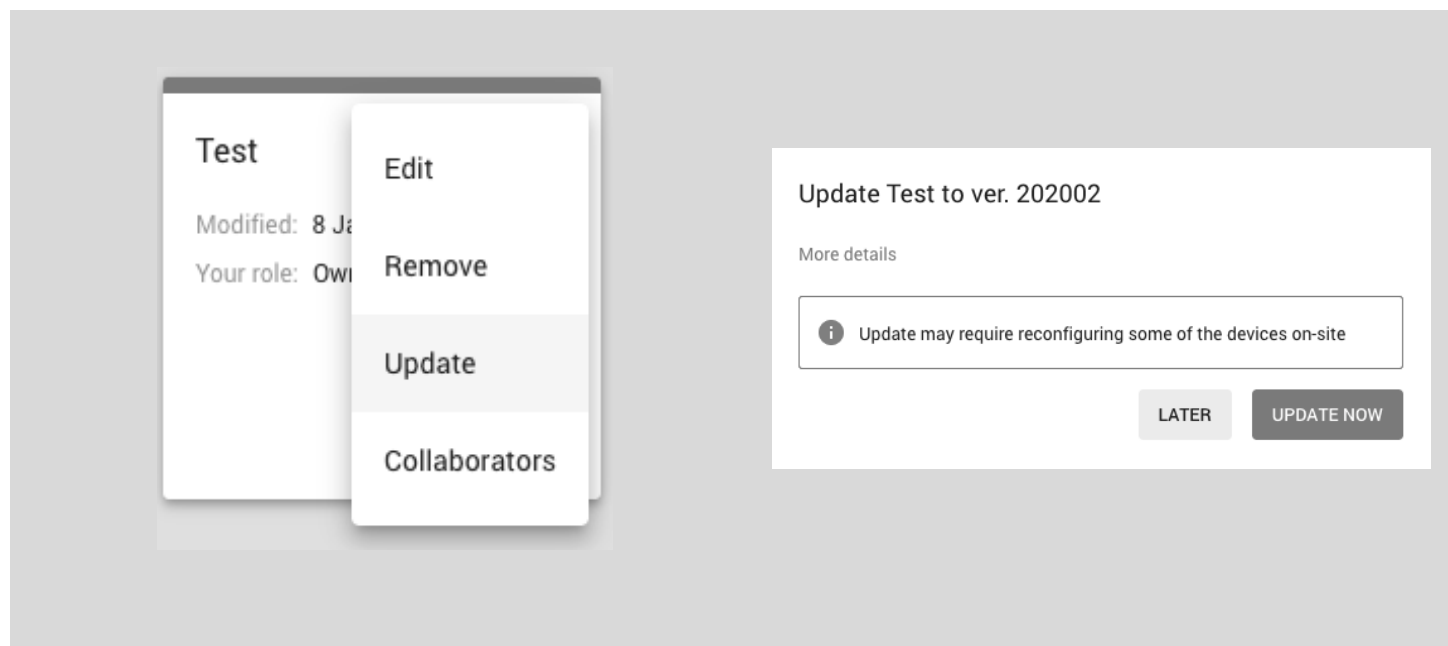


- **Option 1:** Click on the context menu in top-right corner of a project box and select **"Update"**.
- You will see a pop-up, where you can update your project by clicking **"UPDATE NOW"** button.
- Click **"More details"** to access the release notes for the newest version.
- Additionally, there is information about firmware compatibility, e.g.  
Ver. 201808  
Compatible with firmware:  $\geq 2.8.0$

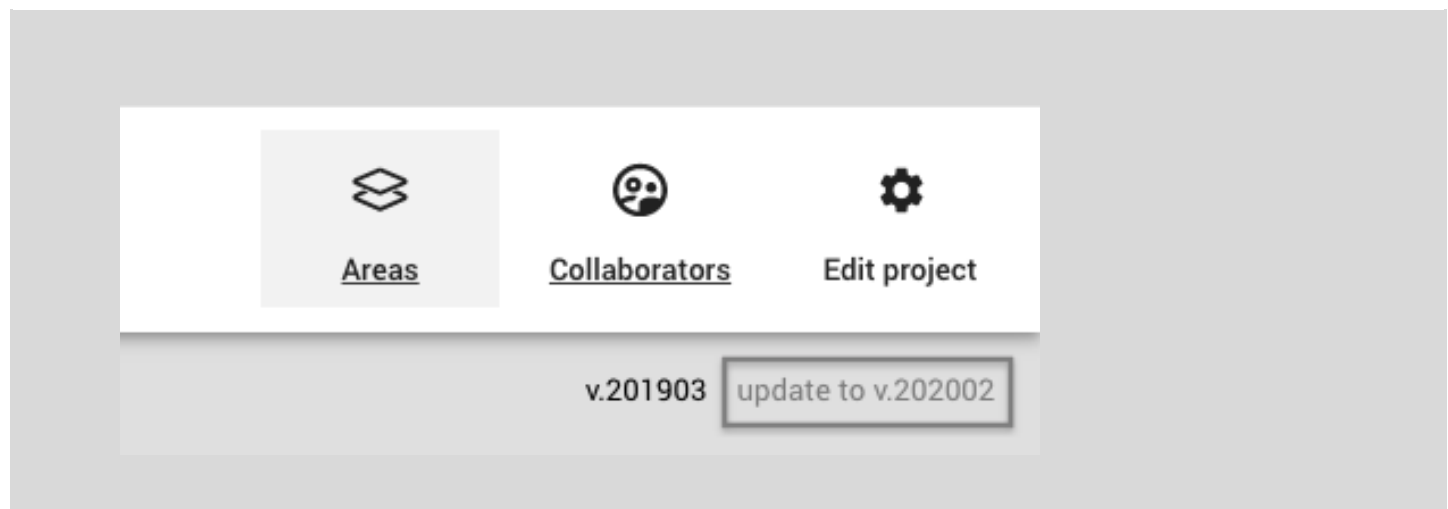

**Option 2:**


- Click on the project that is labelled with “**Update available**”.
- Under the “Collaborators” button, there are the names of two versions of the project:  
v.201903 = current version  
update to v.201909 = new version update link
- Click on the new version link and select “**Update**” button. The update should start automatically.


## Title bar navigation

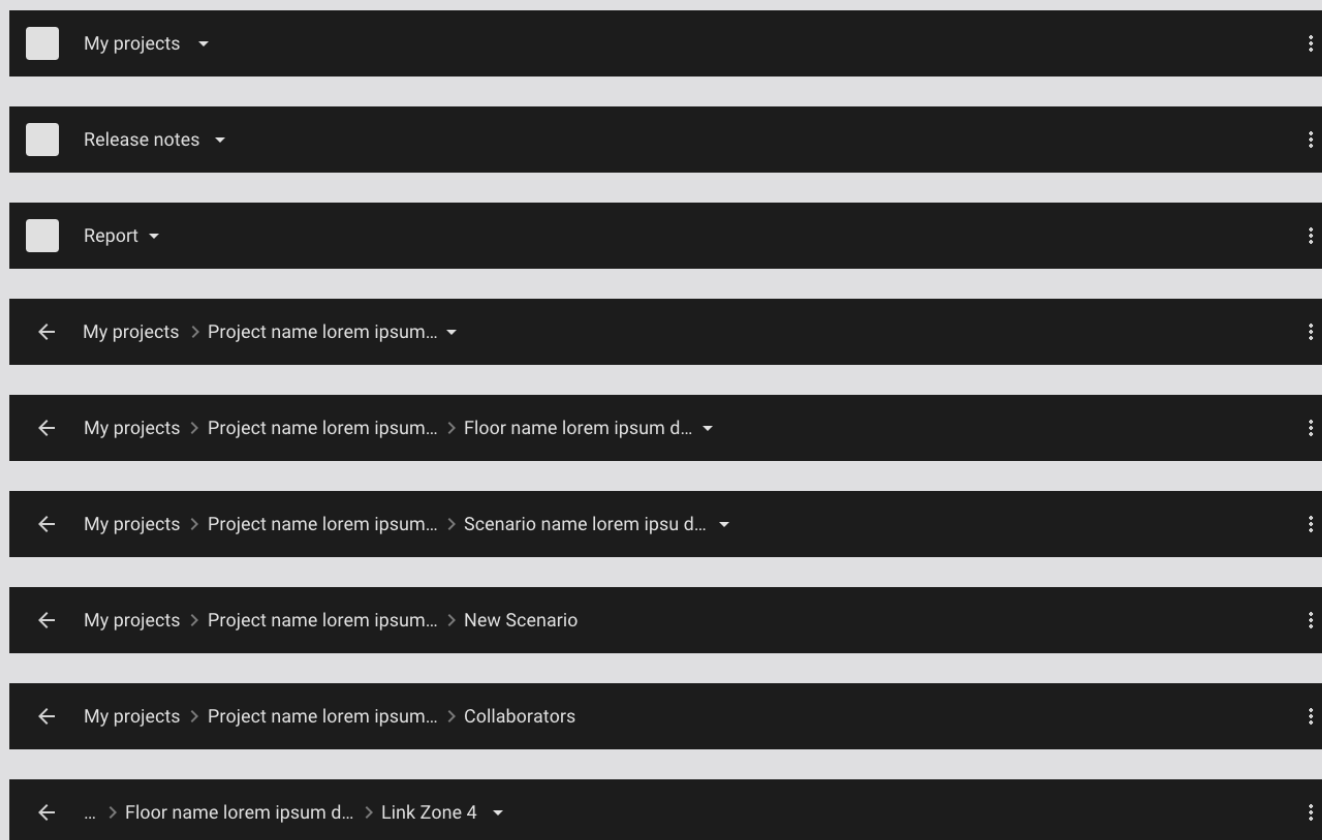

You can easily and quickly navigate through projects, areas and profiles using the navigation in the title bar. This feature also allows you to create projects and areas quickly.


Sign out

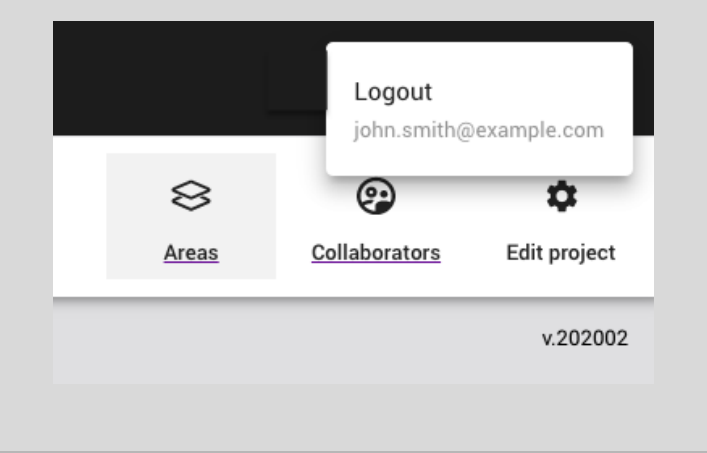A screenshot of the Fulham eliteBlue Commissioning user interface. The top navigation bar is black. Below it, there are three main menu items: 'Areas' with a folder icon, 'Collaborators' with a group of people icon, and 'Edit project' with a gear icon. A dropdown menu is open over the 'Collaborators' icon, showing the text 'Logout' and the email address 'john.smith@example.com'. The version number 'v.202002' is visible in the bottom right corner of the interface.


To sign out, click the  icon in the top right corner of the screen (on the black navigation bar).


When the menu appears, click **Logout**.



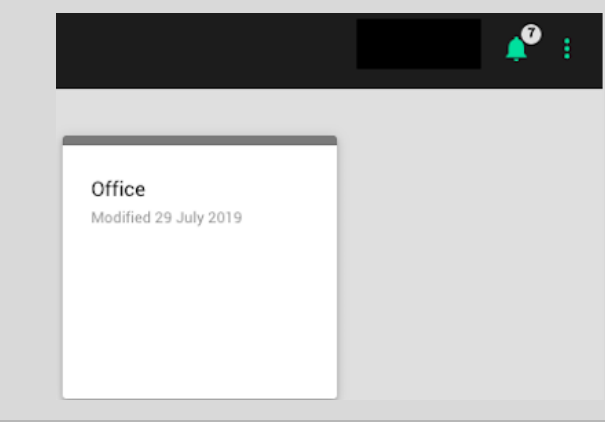




Notifications

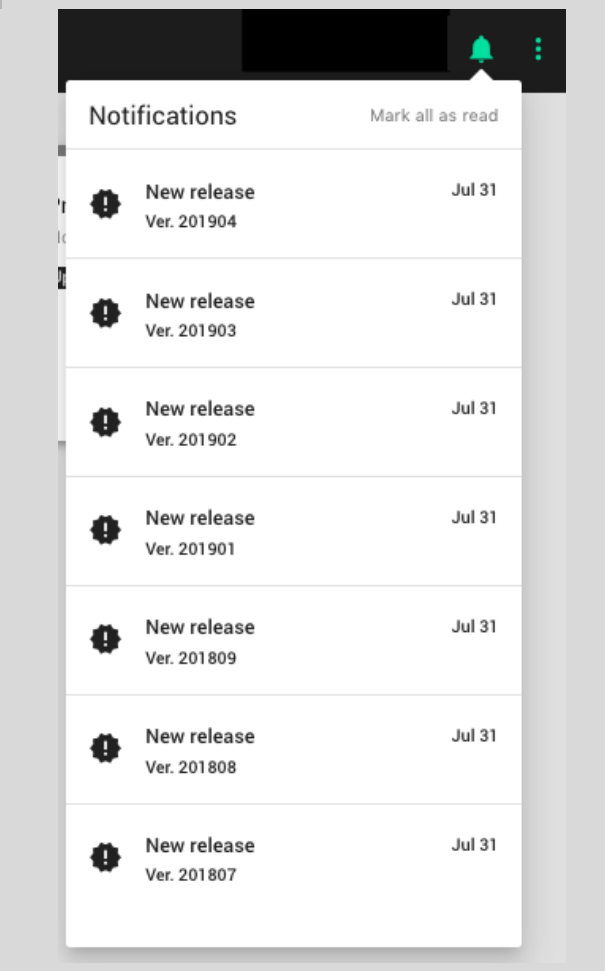


Office  
Modified 29 July 2019

When a new version of the app is available, you will see an  icon on the black navigation bar with a number of new notifications on it.



Notifications		Mark all as read
	New release Ver. 201904	Jul 31
	New release Ver. 201903	Jul 31
	New release Ver. 201902	Jul 31
	New release Ver. 201901	Jul 31
	New release Ver. 201809	Jul 31
	New release Ver. 201808	Jul 31
	New release Ver. 201807	Jul 31



To see more information about a release, click the  icon and press the release notification that you want to read on.


To delete an individual notification, hover on the release notification from the list and press the x button (clear notification).

You can also click “**MARK ALL AS READ**” to see only new notifications bolded.




## Help center

Provides quick access to all essential support documents, including user manuals, application notes, and tutorials. The Help Center can be accessed via buttons located in the upper right corner of the screen. In the web app, click the question mark  button. In the mobile app, use the context menu  button.

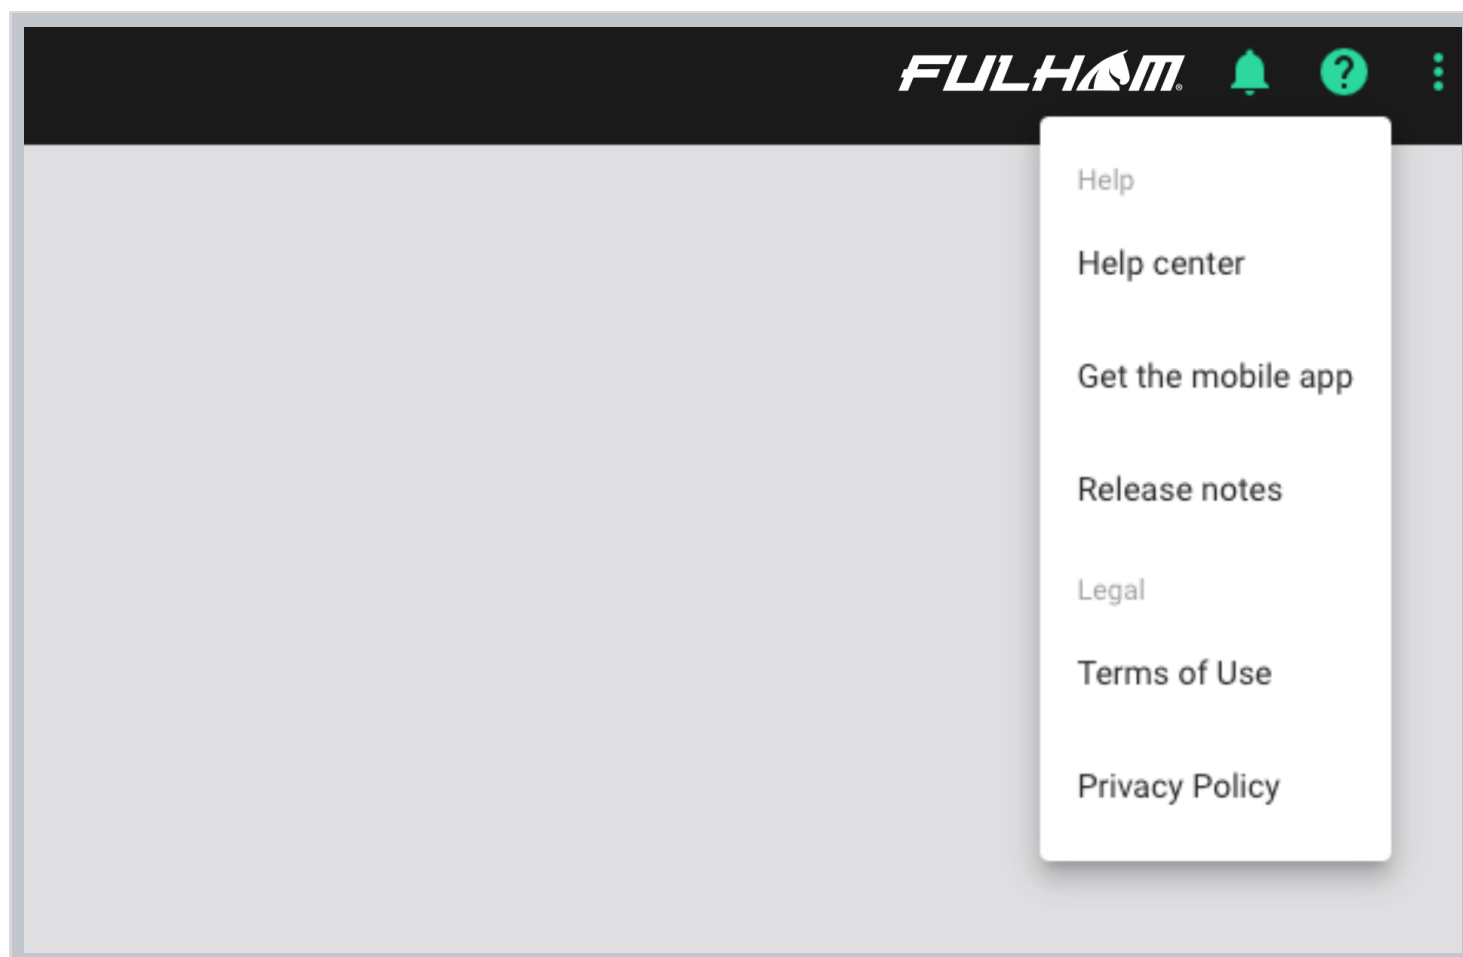

Pressing the help (question mark sign) title bar on the menu links to the:

- Help center
- Get the mobile app (mobile app store page)
- Release notes
- Legal documents: Terms of Use, Privacy Policy

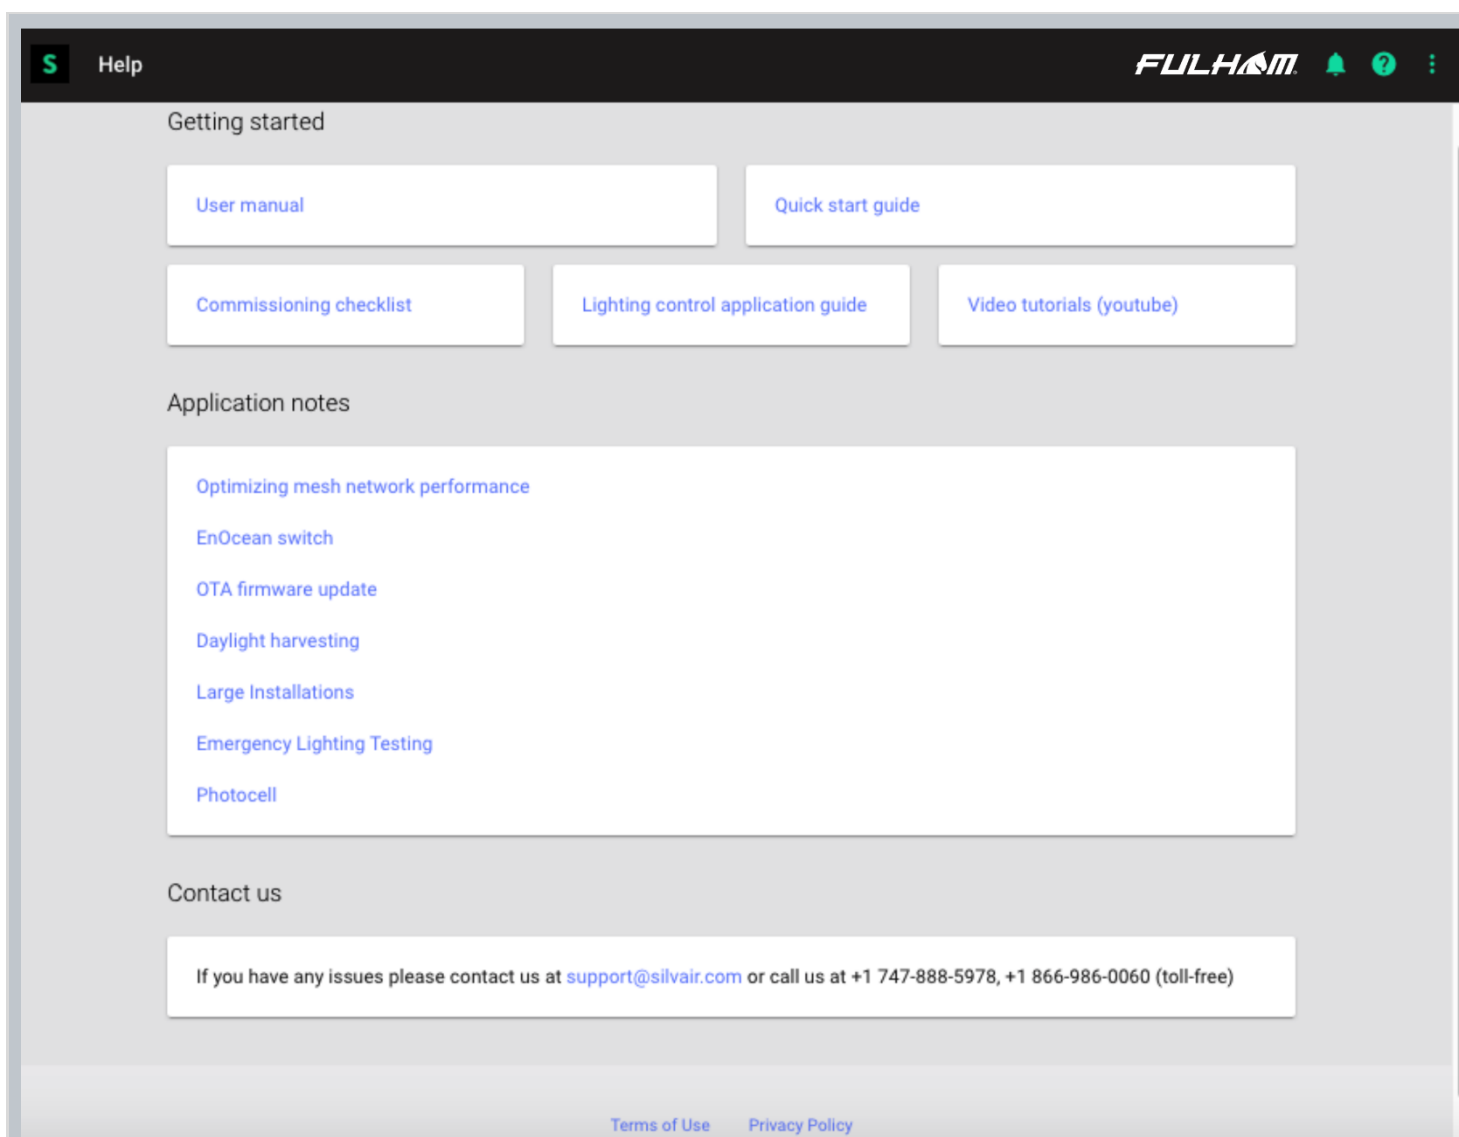

**Help center:**

- Opens in the new tab.
- Is available externally - the user doesn't need to be logged in.
- Can be opened on the mobile phone.
- Contains support documents, including user manuals, application notes, and tutorials.
- Helpline phone number and email address for customers who require immediate support.

### 3. Commissioning on-site

Commissioning of the devices installed on site can be done with the Fulham on an iPhone or iPad. The mobile app synchronizes with the web app, so any problems or changes made during commissioning are visible in both apps in real time. The app supports 7 languages: English, German, French, Spanish Korean, traditional Chinese and simplified Chinese. You can change it anytime.

**NOTE:** For as long as it remains in use, the mobile app disables your smartphone's automatic screen locking functionality. This is to allow undisturbed commissioning process.

#### Log in & Sign up

In order to use the commissioning app, sign in to your account or create one in the app. Make sure you have access to the project you're going to commission (see: [Invite & manage project collaborators](#)).

No SIM 13:12

Commissioning App

LOG INSIGN UP

Email address

Password

LOG IN

No SIM 13:13

Commissioning App

LOG INSIGN UP

Your company (optional)

First nameLast name



Email address

Password

☐ I accept terms of use and privacy policy

SIGN UP


For new users: open **“SIGN UP”** and enter your company (optional), first and last name, email and password. Accept the terms of use and privacy policy and click **“SIGN UP”**.

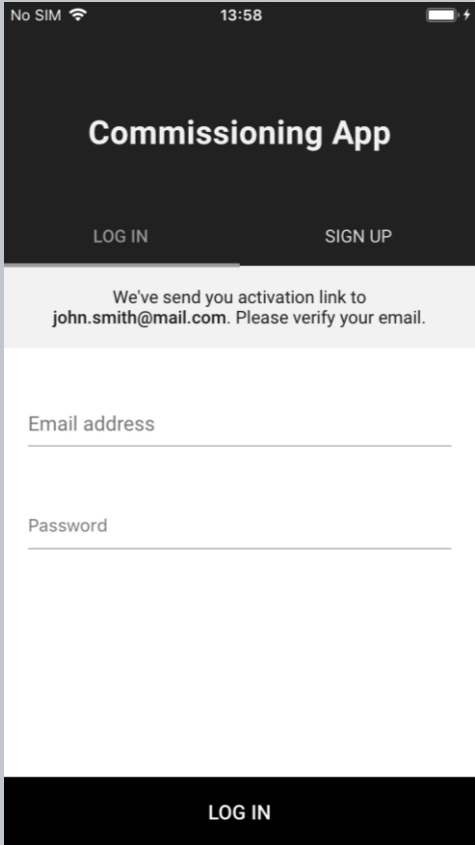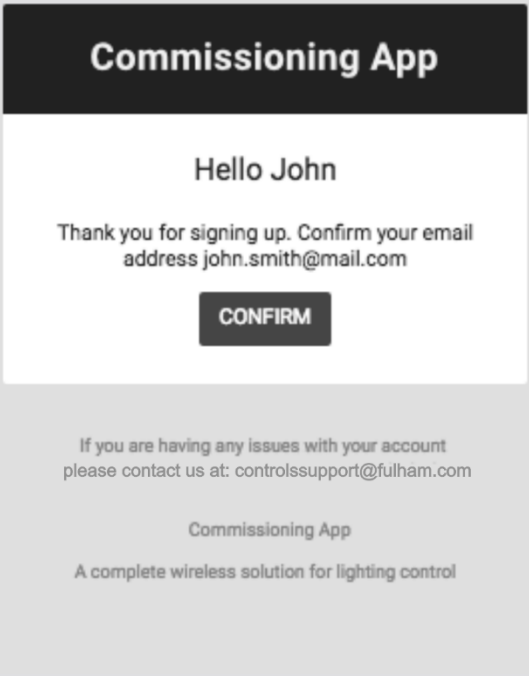	<p>A verification email will be sent to the address you entered.</p>
	<ul style="list-style-type: none"><li>On your phone, open the verification email and click <b>"CONFIRM"</b>. Once the email is</li></ul>

verified you can login to the Fulham mobile app.<sup>7</sup>

---

<sup>7</sup> Clicking **Confirm** will direct you to the web app in your mobile web browser.

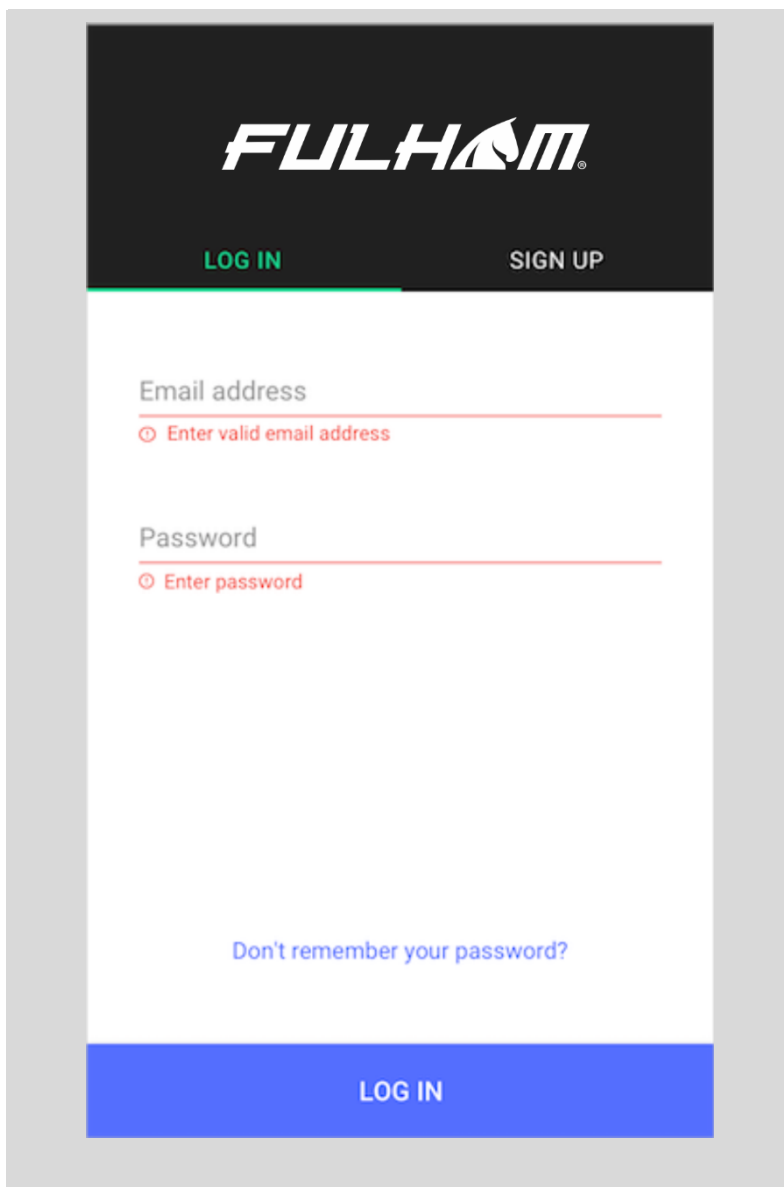

**FULHAM**

LOG IN SIGN UP

Email address

⊙ Enter valid email address


Password

⊙ Enter password

Don't remember your password?

LOG IN

- If you have forgotten your password press "Don't remember your password?" button at the bottom of the page.

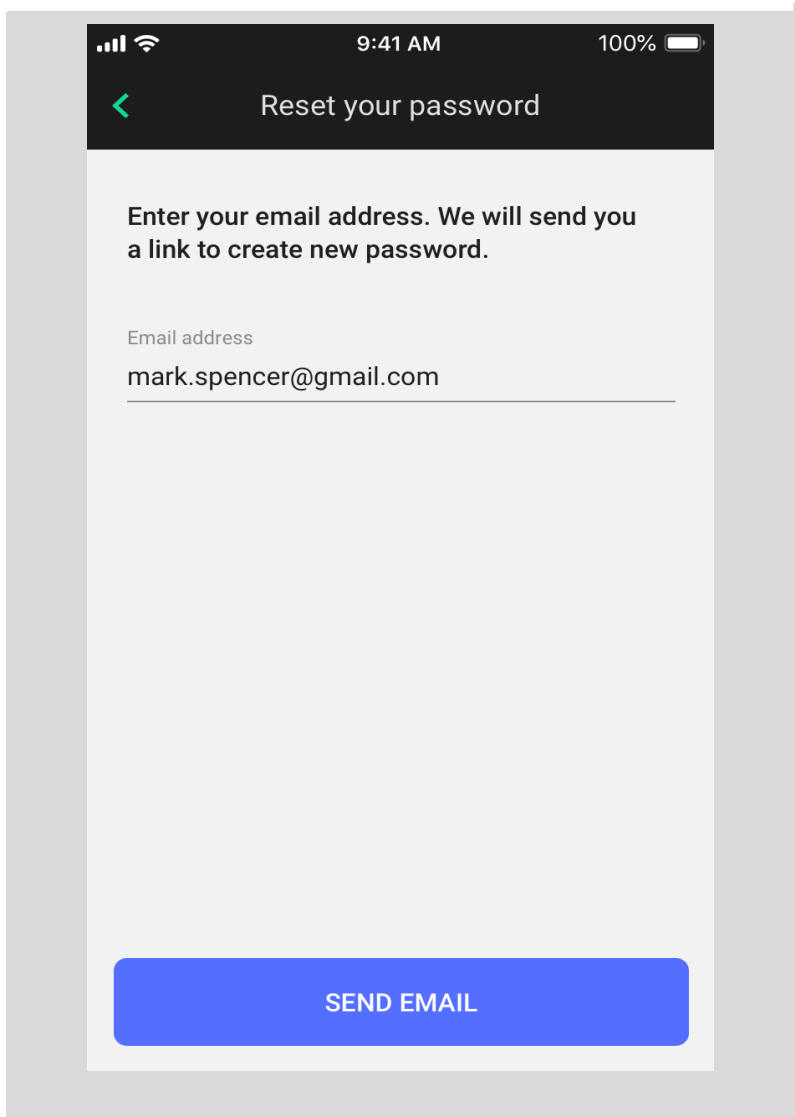

Reset your password

Enter your email address. We will send you a link to create new password.


Email address  
mark.spencer@gmail.com

SEND EMAIL

- Enter your valid email address.
- Check your mailbox for the confirmation email with the link to create a new password.
- Follow the steps in the email to create a new password.




Select a project and area

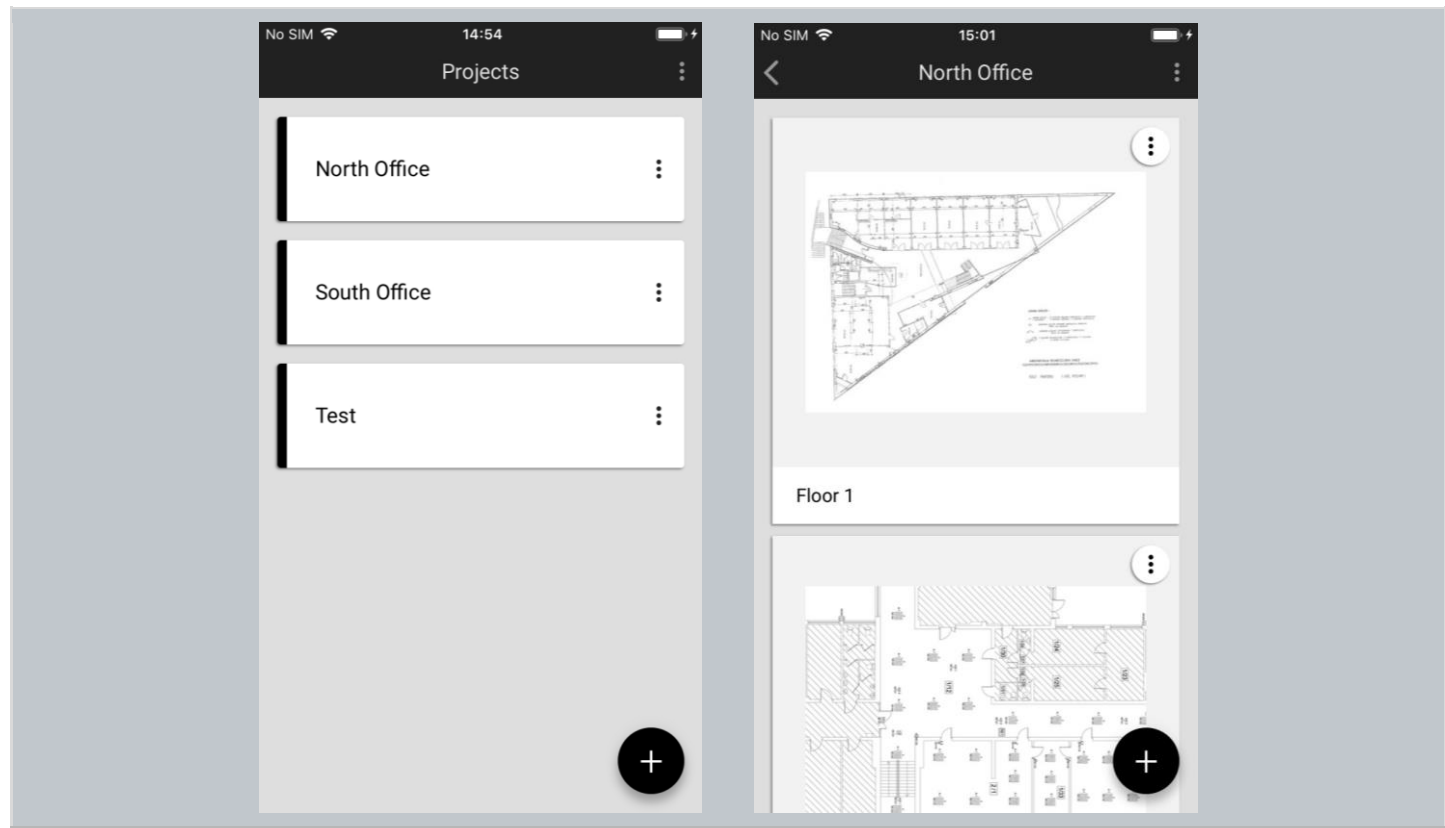

All projects that you have access to will be listed in the projects list. To begin commissioning, select the desired project and area.


## Select zone

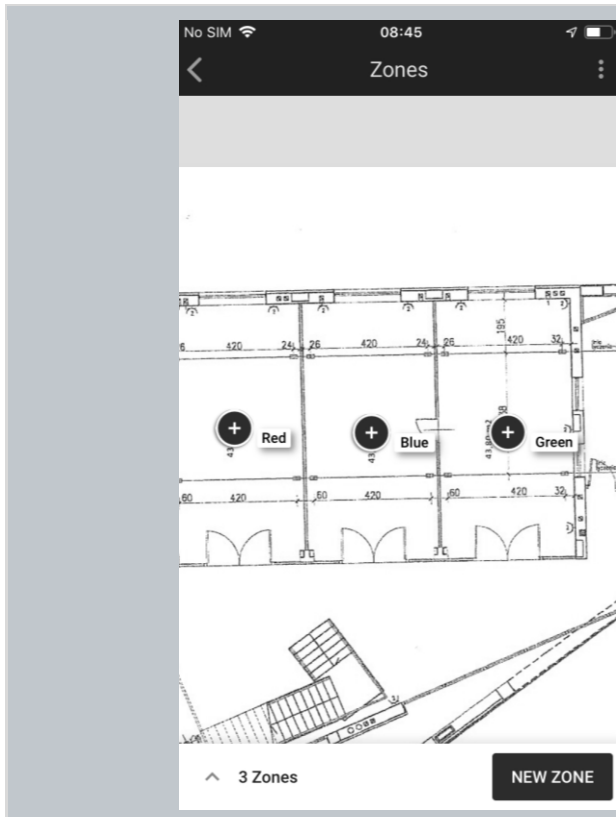

### Area view:

- Zones appear labeled with their assigned name.
- Use a pinch/spread gesture to zoom in and out.
- Select the zone to be commissioned by tapping the zone icon.

The app automatically displays the previously created zones along with their actual status (see: [Zones](#))

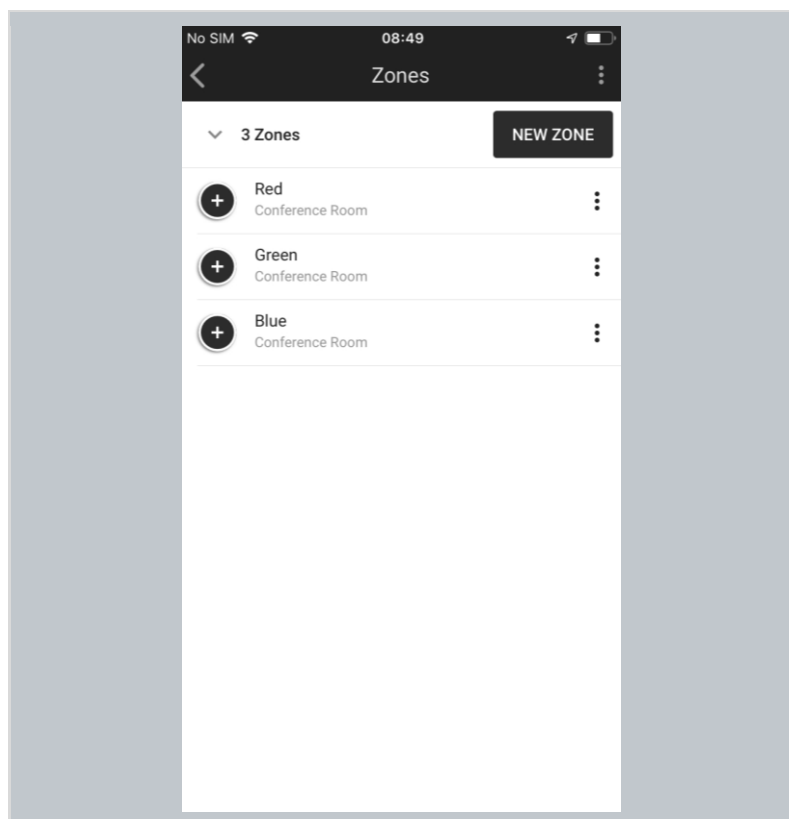


### List view

- If you prefer to see the zones on a list, tap the element at the bottom of the screen with the number of zones, e.g. **3 Zones** in this example.
- Each zone has a status icon, name and assigned profile, e.g. Conference Room
- Select the desired zone by tapping its name.
- To go back to area view, tap on the element at the top of the screen with the number of zones, e.g. **“3 Zones”**.

## Adding devices

Adding devices to a zone allows their full functionality to be accessed and provides maximum security. Devices added to a zone for the first time must also be configured in order to be fully functional.

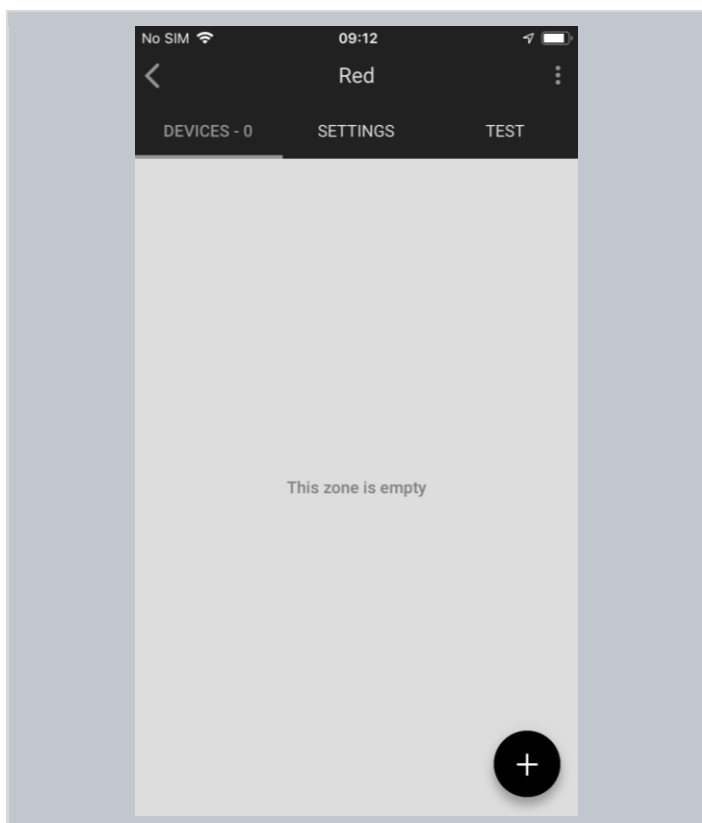


- Select the zone to be commissioned in the area or Zones list view.


- Tap the  button to add a device.<sup>8</sup>

---

<sup>8</sup> Before adding devices to an existing project, the application may require the user to be within range of previously added devices in order to add devices with current network security. Ignoring it may lead to issues in communication and devices may not operate as expected.

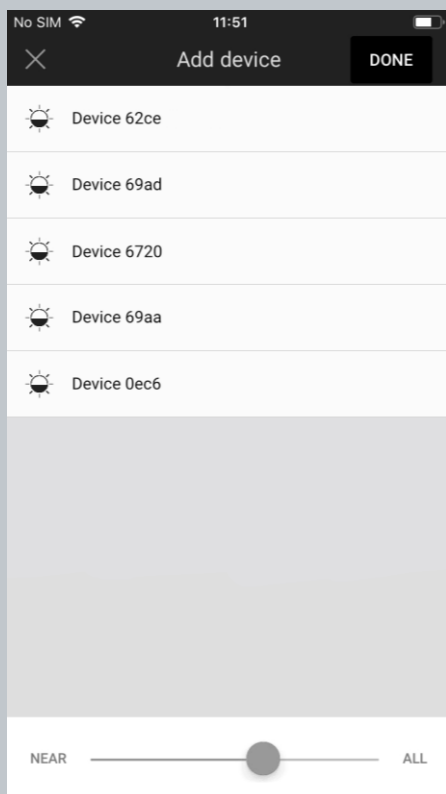


- Narrow down the list to display the closest devices by moving the slider to the left.
- Select the device you want to add by tapping its name.

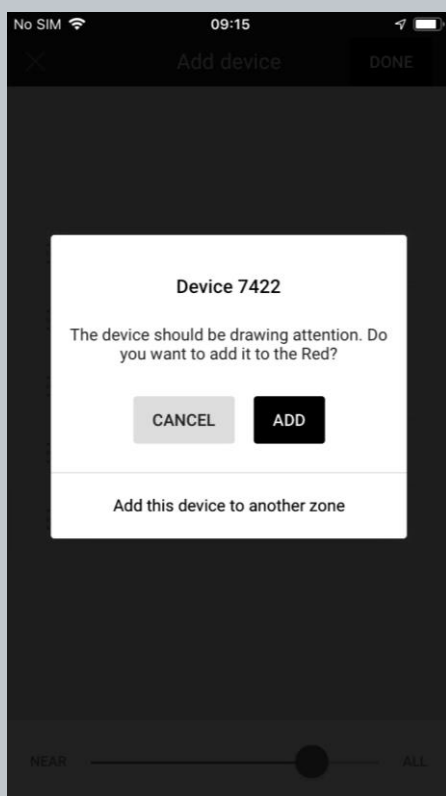


- Check if the device is attracting attention e.g. by flashing (this behavior depends on the device).
- If this is the device you want to add to the zone, tap "**ADD**".
- If this is not the device you want to add to this zone, but you know you want to add



it to another zone, tap on the link “Add this device to another zone”.<sup>9</sup>

- Otherwise, tap “**CANCEL**” and move on to the next device.

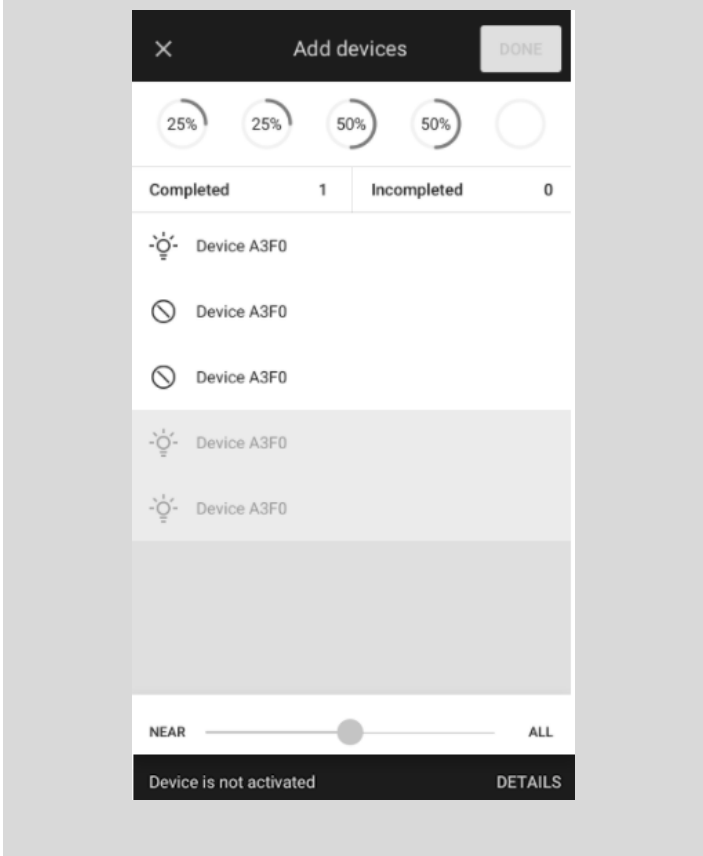


- **Inactive Devices**  
It may happen that one (or some) of the devices are greyed out on the list or are marked inactive with this icon . This indicates that you **cannot** add them to your project. There are two cases when a device cannot be added to a project:
- **Case 1: A device has not been activated.** Solution: You need to contact this device’s manufacturer to set up activation.

<sup>9</sup> Note: devices added to another zone will still require configuration with the settings for that zone.

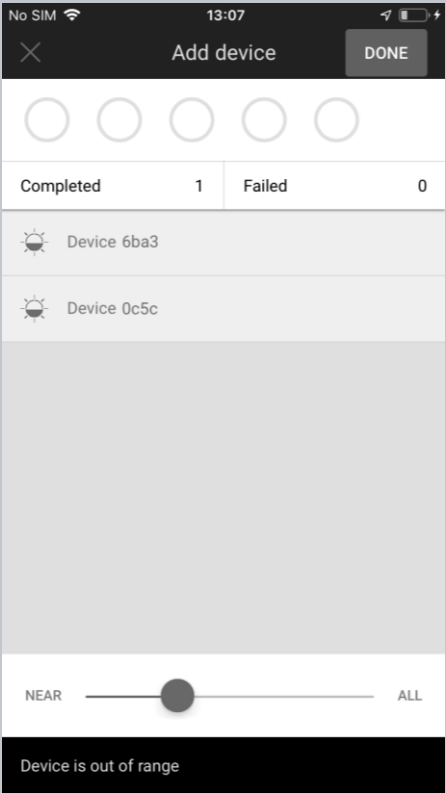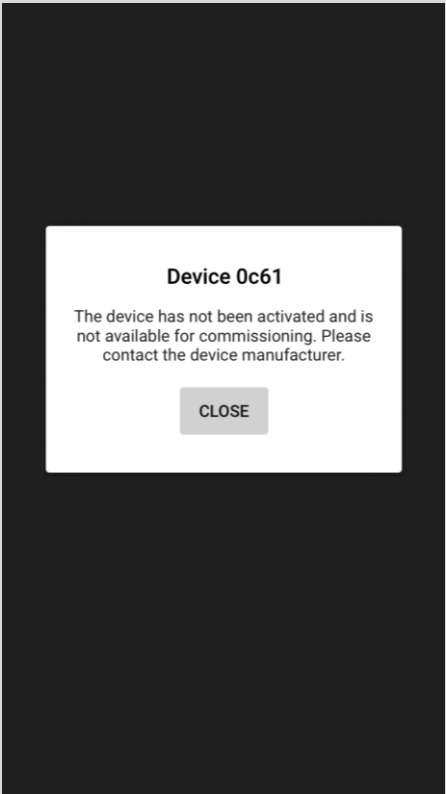

- **Case 2: A device is out of range (it's greyed-out on the list).**
- Solution: change your location and try to move closer to a distant device. Refresh the devices list and try to add it to the project again.

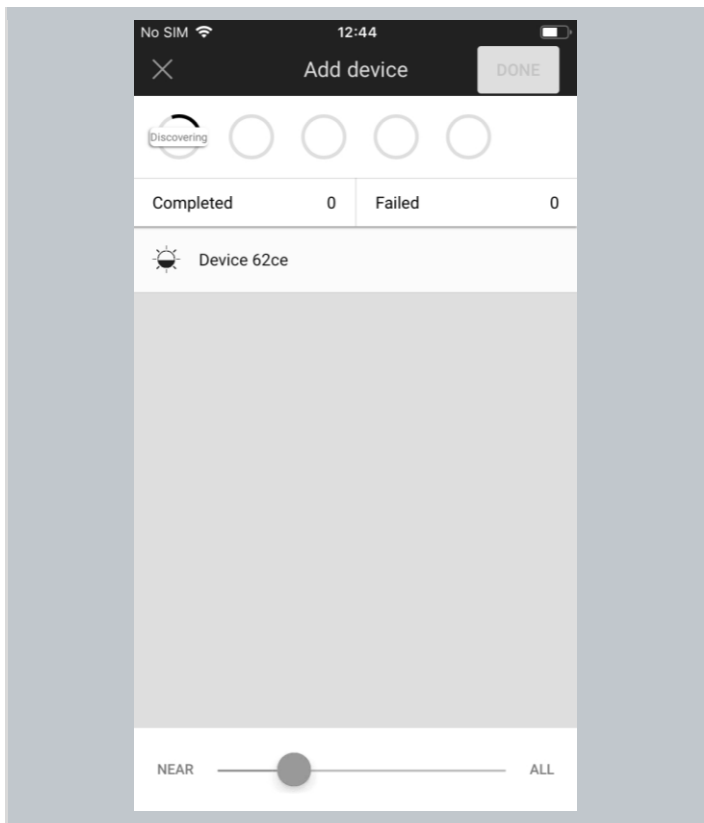

- If your device is active, and it has been successfully added, the configuration will be applied in the background (configuring Mesh network, setting Relays on some of the devices) so you can start adding another device straight away.<sup>10</sup>
- When all required devices have been added to the zone, close the Add device view.<sup>11</sup>

### Configure all devices in a zone

In rare cases, user has to configure the device manually using the mobile app (user selects a single device, or a group of malfunctioning devices by pressing **CONFIGURE ALL** button).


Manual configuration is needed when:

- there has been a connection error (e.g. Internet problems)
- user has accidentally interrupted devices configuration (e.g. an iOS device powers off)
- user made changes in zone's settings (e.g. changing profile, changing scenario settings, adding, or editing zone linking).


<sup>10</sup> Note: Up to 5 devices can be configured in parallel. The configuration status is displayed in the upper panel.

<sup>11</sup> Note: Closing the "Add device" window before configuration has completed will result in an incorrect configuration and the zone will have to be reconfigured later.



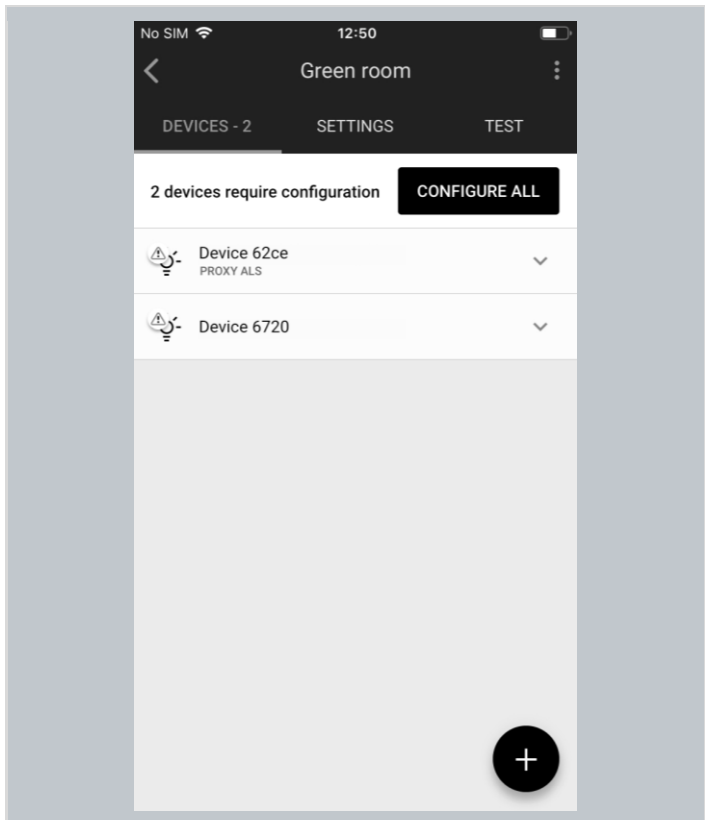


- To configure all devices in a zone, navigate to the zone.
- Tap “**CONFIGURE ALL**”.

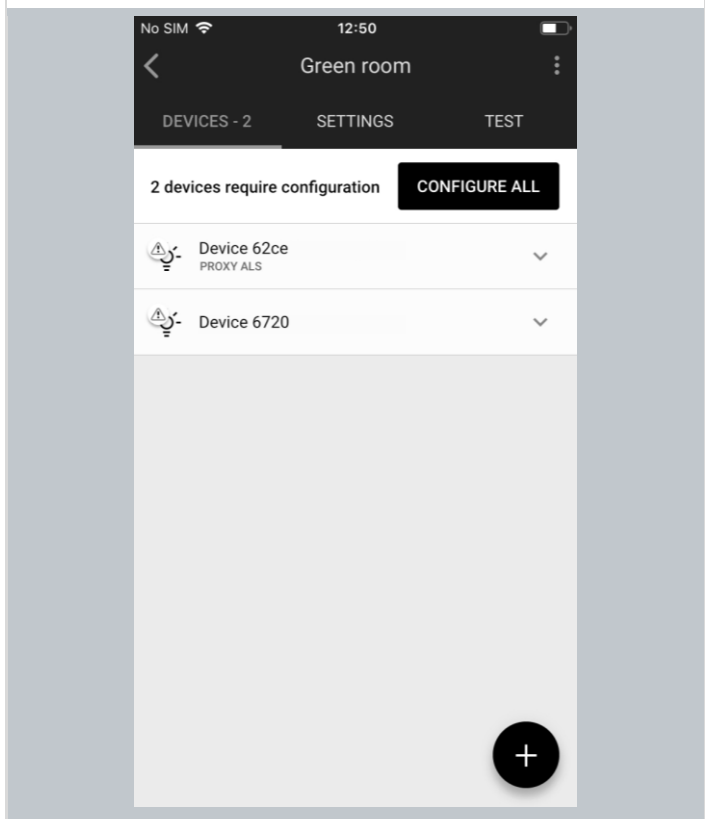


- The required configuration for the zone will be applied to all devices one-by-one.

## Repair device

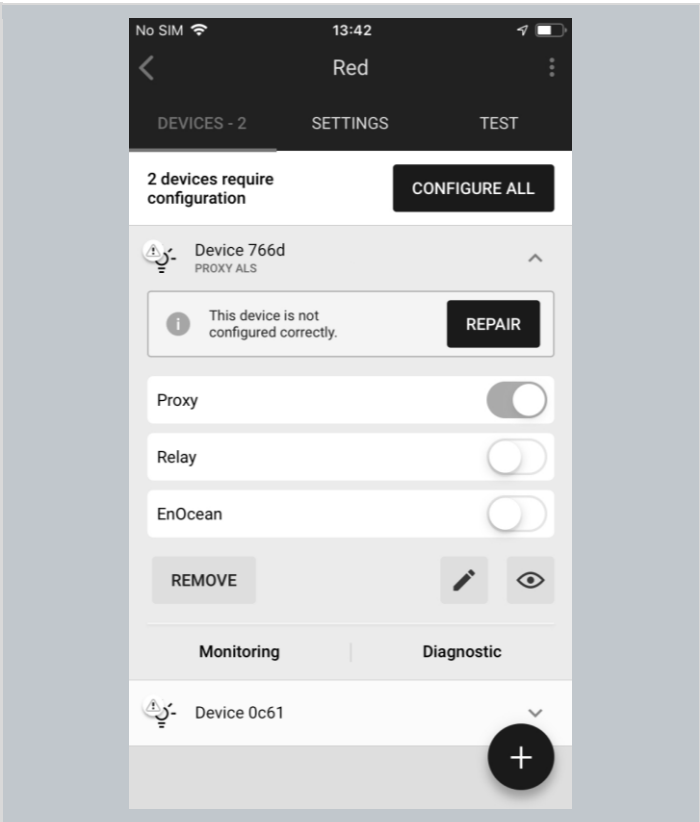


In some cases, configuration of the device may fail or be cancelled by the user. In such cases, the device configuration needs to be repaired.

- To repair a misconfigured device, select it from the Devices list and expand the options.
- Tap **“REPAIR”**.

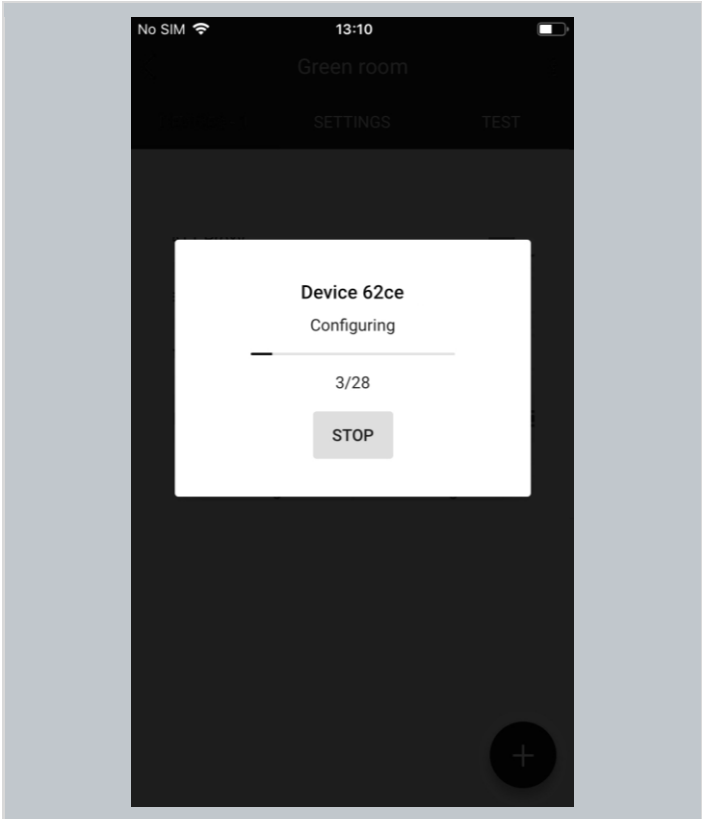


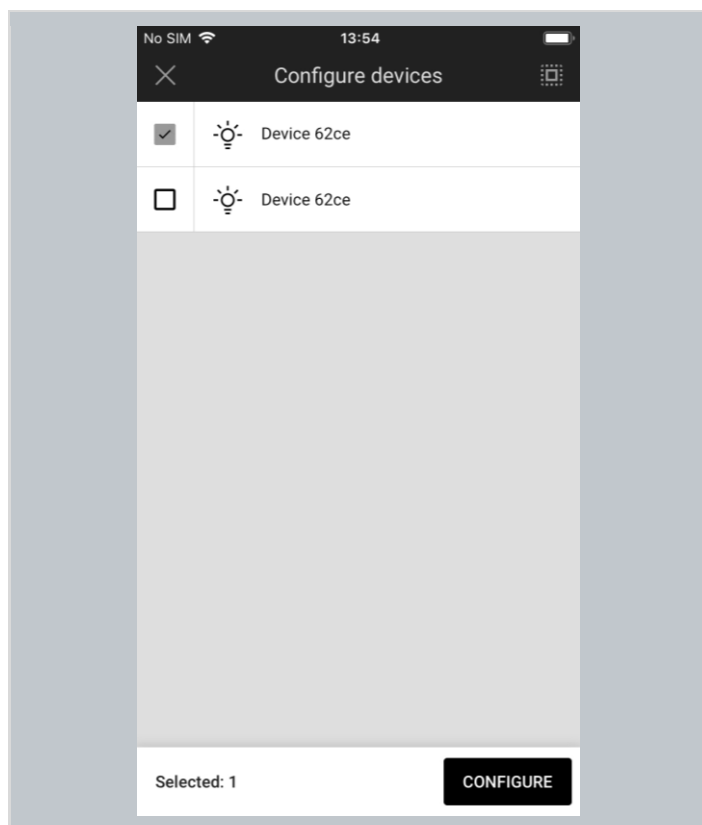
- The required configuration will be applied to the device.


Full Configuration

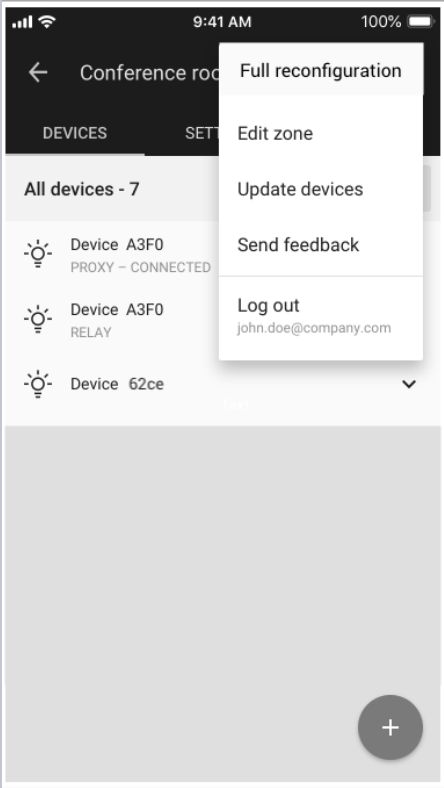A screenshot of the Fulham mobile app interface. At the top, the status bar shows '9:41 AM' and '100%' battery. The app header has a back arrow and 'Conference room'. Below this are tabs for 'DEVICES' and 'SETTINGS'. The 'DEVICES' tab is active, showing 'All devices - 7'. A list of devices is visible: 'Device A3F0 PROXY - CONNECTED', 'Device A3F0 RELAY', and 'Device 62ce'. A context menu is open over the device list, containing the following options: 'Full reconfiguration', 'Edit zone', 'Update devices', 'Send feedback', and 'Log out john.doe@company.com'. At the bottom right of the device list area is a circular button with a plus sign.


The Fulham mobile app also allows you to fully configure any device(s) at any time. A full configuration will send the entire configuration to the device(s) regardless of whether it was previously configured or not.

- Select zone.
- Display the context menu by tapping the  icon and select **“FULL RECONFIGURATION”** option.




- A list of devices will appear.
- Select the devices to be configured. You can do it by tapping the checkbox next to each device or select all devices by tapping the square icon  in the top-right corner of the view.
- Tap **"CONFIGURE"** button.

Update devices (Over-the-air update)

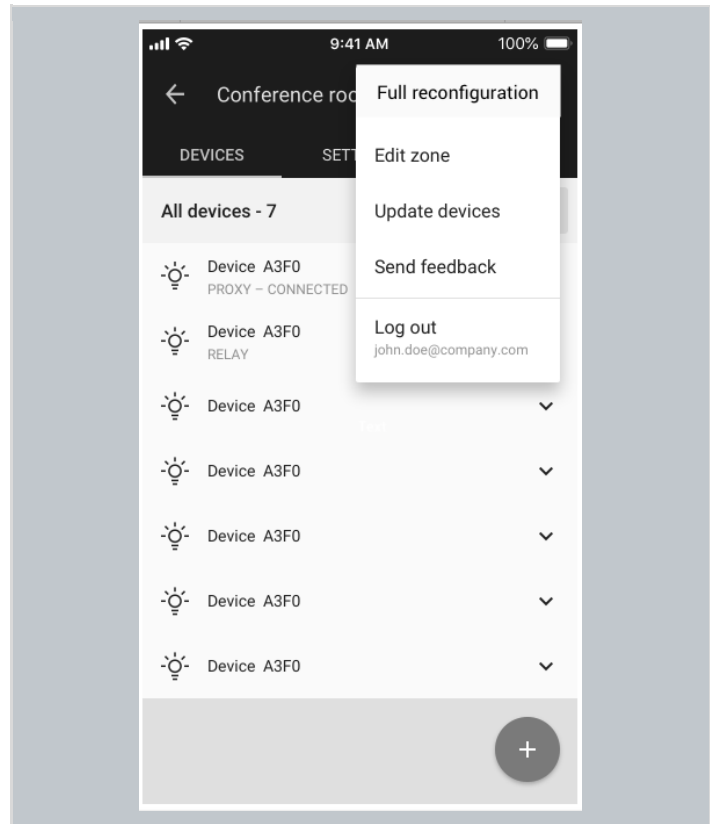


With the Fulham mobile app, you can also do the OTA (Over-the-air) update of devices in the mesh network.

The feature allows to update devices that have already been added to the mesh network. Update for devices with Fulham’s firmware is automatic (the new firmware is stored and automatically downloaded from the cloud).

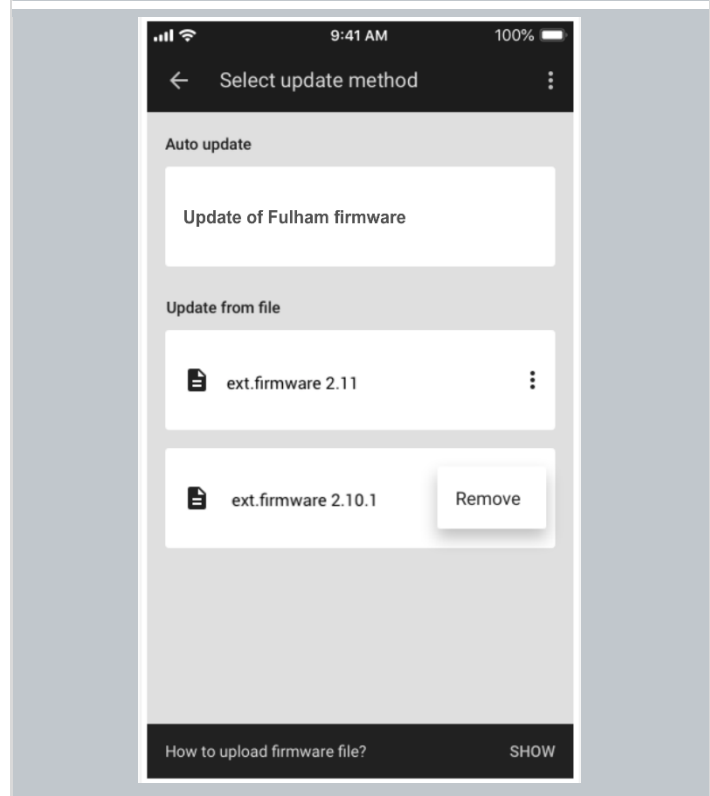

To update devices with external firmware, user must have a firmware file (in a zip format) and upload it to the Fulham mobile app.

## Identifying faulty luminaires in a zone

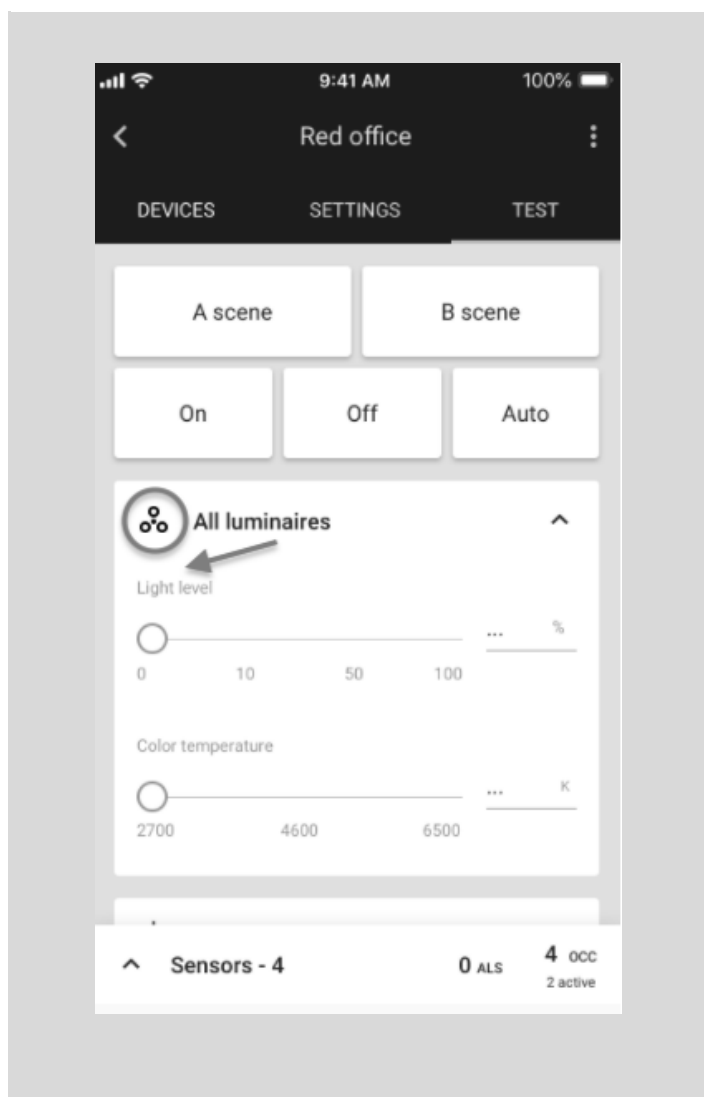

When an installer finishes adding devices process, but there's one, or more faulty nodes inside that zone there is an easy way to check where such a faulty luminaire is located.

To do it, navigate to the zone where you were adding, or updating devices and go to TEST tab and press the icon next to "All luminaires". This button will trigger the mass zone attention. While performing the test, observe the surface on which luminaires are mounted. The faulty luminaire in that zone will not be drawing any attention.

Alternatively, you can also use the "Light level" slider which is placed under "All luminaires" button. While moving the slider to the desired light level (e.g. 70%), the faulty node will not be changing its light level.

## Zone profile customization

Once all the devices have been added to the zone, you can change the settings (e.g. default light level) in the **SETTINGS** tab by tapping **CUSTOMIZE**. The settings and features depend on the **scenario** which controls the profile. Each profile can be controlled by one of the 7 available scenarios. (See: [Scenario parameters for customization](#)).


Example: in **profiles** controlled by **manual control** scenario, users can change *default light level* and *low/high-end trim* using the Fulham mobile app.



**NOTE:** Any changes made to zone parameters via the mobile app will automatically create a local, customized version of the original profile. These changes will be applied only to the particular zone and will not affect other zones configured with the original profile.


### Customize a profile

Each profile can be customized. Depending on the selected **Scenario**, there will be different customization parameters available.

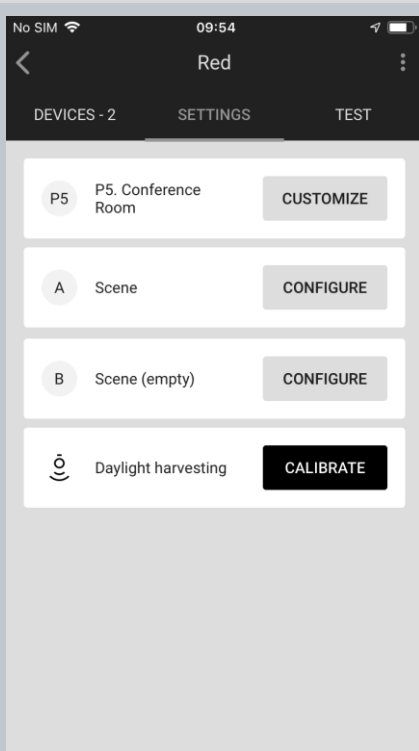

- Go to the **"SETTINGS"** tab.
- Tap **"CUSTOMIZE"** next to the profile that you want to update.



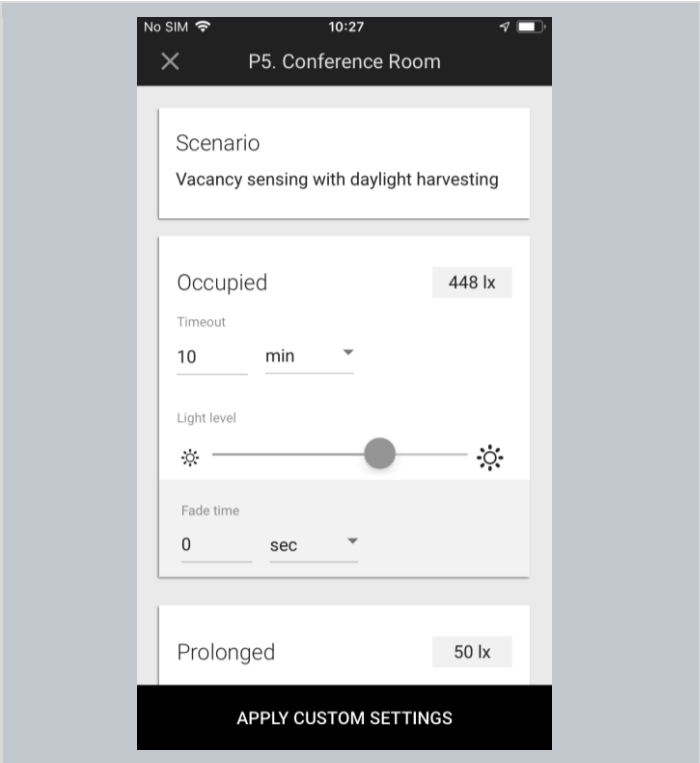

- Change the parameters as needed.
- Tap “**APPLY CUSTOM SETTINGS**”.
- The devices added to the zone will be automatically reconfigured. Observe the progress bar and wait for full reconfiguration.
- After going back to the profiles list on the “**SETTINGS**” tab, the new profile will appear as “Custom profile”.

**Which scenario can be customized?**

Each profile has one scenario assigned in order to work properly. From the Fulham mobile app, user can change settings of 7 scenarios:

- Manual control
- Occupancy sensing
- Vacancy sensing
- Occupancy sensing with daylight harvesting
- Vacancy sensing with daylight harvesting
- Central control
- Central control for dual output

Each of the above scenarios has one, or a few parameters to customize. The below table shows a list of parameters that can show up for customization in each of the above scenarios.

## Scenario customization parameters:

Parameter	Description
<b>Default Light level</b>	<p>Customized the default light level when switched on.</p> <p><b>Fade time</b> - the time over which the light reaches the target level when switched on.</p>
<b>Occupied</b>	<b>Light Level</b> - light level when switched on.
	<b>Timeout</b> - the time for which the light is maintained at the defined level when switched on. The timer is reset each time motion is detected.
	<b>Fade time</b> - the time over which the Occupied mode Light Level is reached.
<b>Prolonged</b>	<p><b>Light level</b> - light level to be maintained for a defined time after the Occupied mode (occupancy) timeout.</p> <p><b>Timeout</b> - the time for which the light is maintained at the Prolonged mode Light Level after Occupied mode timeout.</p> <p><b>Fade time</b> - the time over which Prolonged mode light level is achieved after Occupied mode timeout.</p>
<b>Vacant</b>	<p><b>Light level</b> - light level to be maintained for a defined time after the Prolonged mode timeout. It can be a non-zero value.</p> <p><b>Fade time</b> - the time over which the Vacant mode light level is achieved after Prolonged mode timeout.</p>
<b>Low/high-end trim</b>	<p><b>Min</b> - the lower limit of light level achievable via automatic or manual control (e.g. with a wall switch).</p> <p><b>Max</b> - the upper limit of light level achievable via automatic or manual control (e.g. with a wall switch).</p>
<b>Manual override timeout</b>	<b>Time</b> - the time (in minutes) after which the light will switch itself to default settings.



## Color temperature

Tunable white is a feature that allows the light intensity and correlated color temperature (CCT) to be controlled in order to achieve lighting conditions that are closer to natural light. Color temperature is controlled independently from the light level, so adjusting it won't interfere with the Daylight Harvesting mode, the selected scene or manual dimming.

Tunable White feature requires:


- using luminaires that support tunable white

- using Bluetooth mesh devices (whether fixture controllers, or drivers) with devices that support tunable white

- devices must be flashed with a firmware version that supports tunable white Bluetooth SIG mesh model (Light CTL Temperature (V.2.15.0 or higher)

## Color temperature manual control

The Fulham mobile app allows the manual color temperature adjustment of all compatible tunable white light fixtures in the zone. The change of color temperature can be adjusted in two ways:

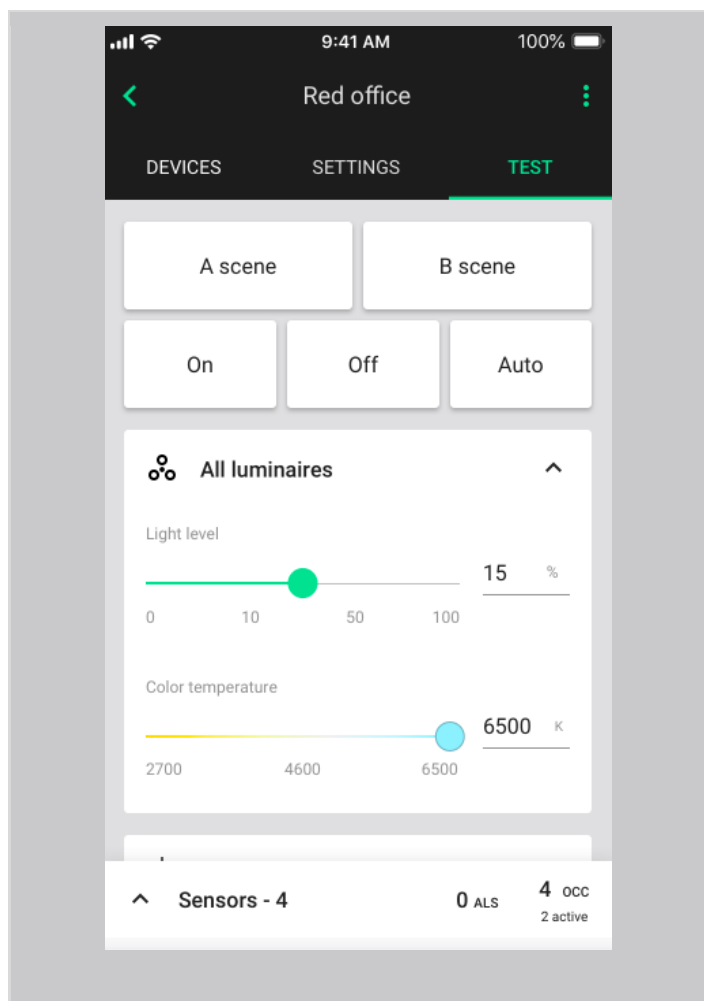

1. By using a color temperature slider in the mobile app (requires app version 1.19 or higher). The slider is in the TEST tab.

- In the mobile app open the project, select the area and press to open a desired zone.
- Go to the **“TEST”** tab.
- Use the Color temperature slider to adjust the color temperature of all tunable white lights in the zone.
- The supported color temperature range is from 2700 to 6500 K.

2. By pressing an EnOcean switch, the right side rocker will control the color temperature (long press). See the example image below.

- Pressing EnOcean in position 4 - long press up - warmer temperature
- Pressing EnOcean in position 3 - long press down - colder temperature



**Easyfit Single (EWSSB)**




**Double Rocker (EWSDB)**

## Daylight harvesting calibration


Calibration of light sensors and controls is critical as poorly calibrated daylight harvesting can negate any energy savings and create an uncomfortable work environment. The Fulham mobile app allows calibration for zones operating with daylight harvesting scenarios.




**NOTE:** Daylight harvesting calibration should be performed only for zones that have been properly configured. Calibration of a malfunctioning zone may lead to errors.

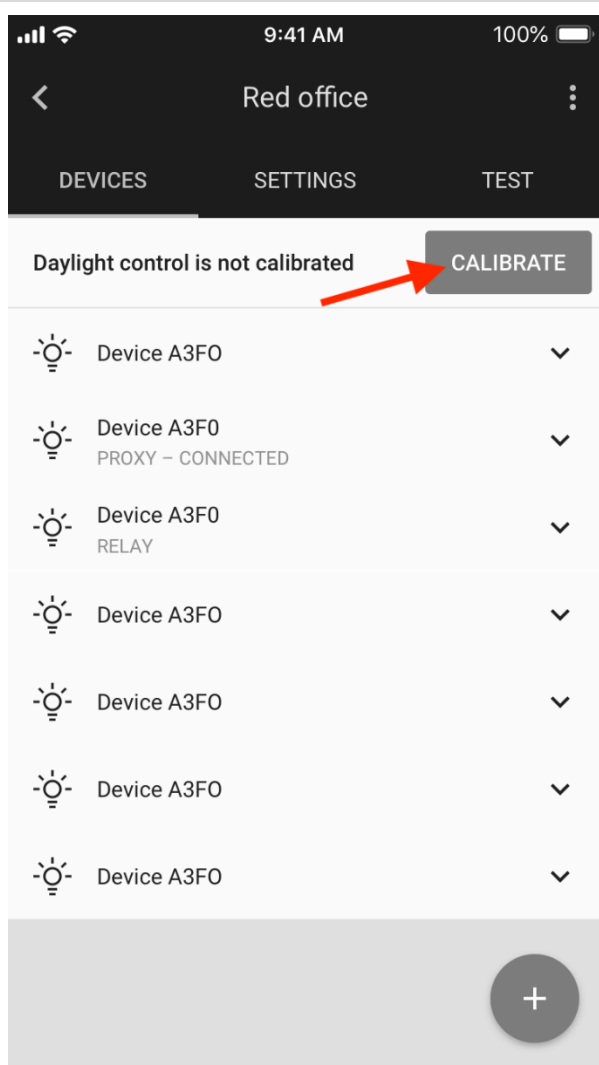


- Open the project, select desired area and a zone.
- Press **CALIBRATE** button from the **"DEVICES"** tab. The button will be active only if there're devices with ALS (ambient light sensor) that should be calibrated.
- **HINT:** You can also start calibration from the **"SETTINGS"** tab. There's a **"Daylight harvesting"** element with CALIBRATE button that opens calibration view.

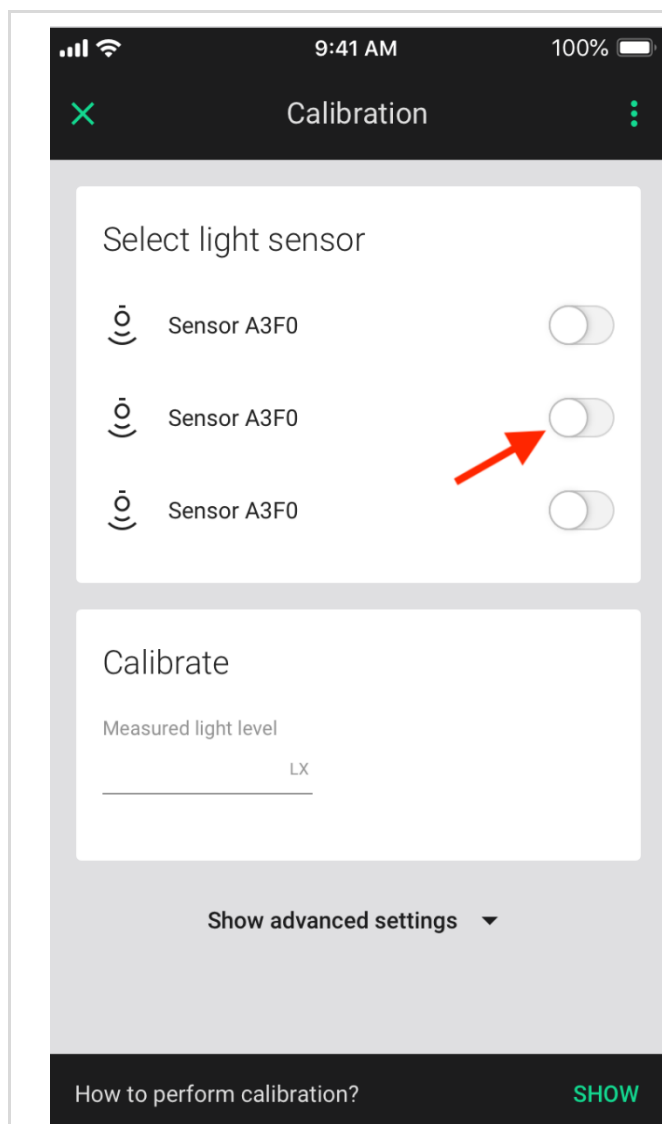


- Select light sensor (switch the toggle next to the light sensor to the right).
- **HINT:** After pressing the sensor icon  a device starts blinking. It helps to quickly identify the luminaire.
- Place a light meter below the sensor on the surface where you want to maintain the desired light level.
- Enter the LUX value measured by the light meter in the **Measured light level** field.
- Note that the ALS Calibration is done once for the whole zone. This means that the selected calibration parameters will be applied to all devices in that zone.



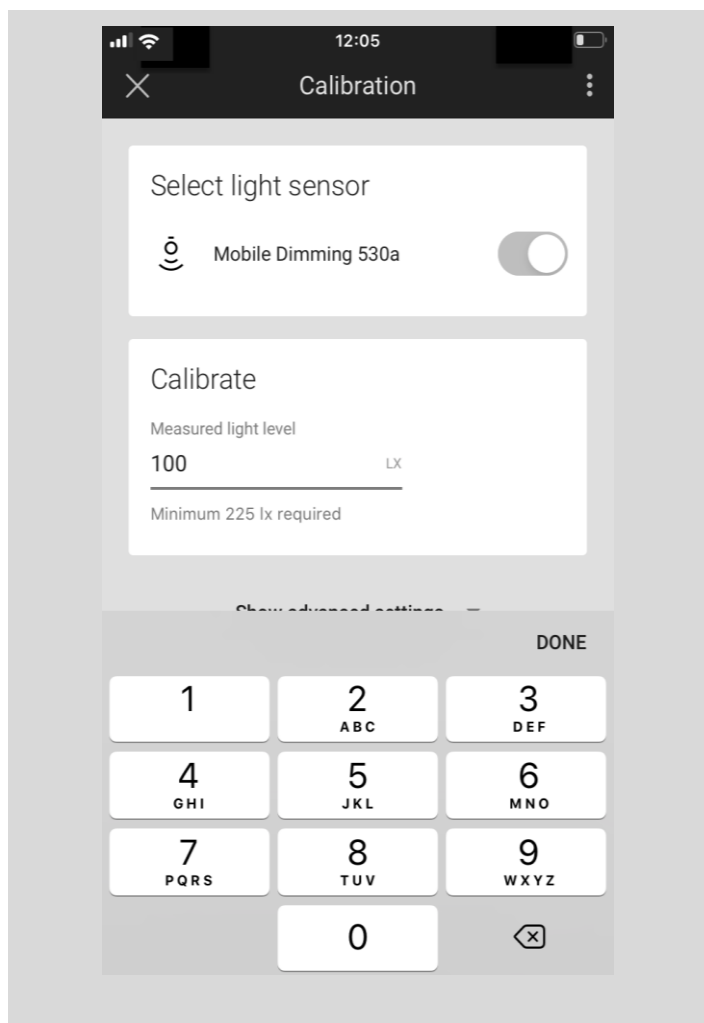



- After entering “Measured light level” LX value in the input field provided, tap anywhere outside the input field or press **DONE**.
- The app validates if the provided value is equal or greater than the required minimum light level.
- If validation is passed, user can confirm the action by pressing **CALIBRATE** button.
- Calibration of the light sensor will start immediately.

Click here to read about “[Show advanced settings](#)”.

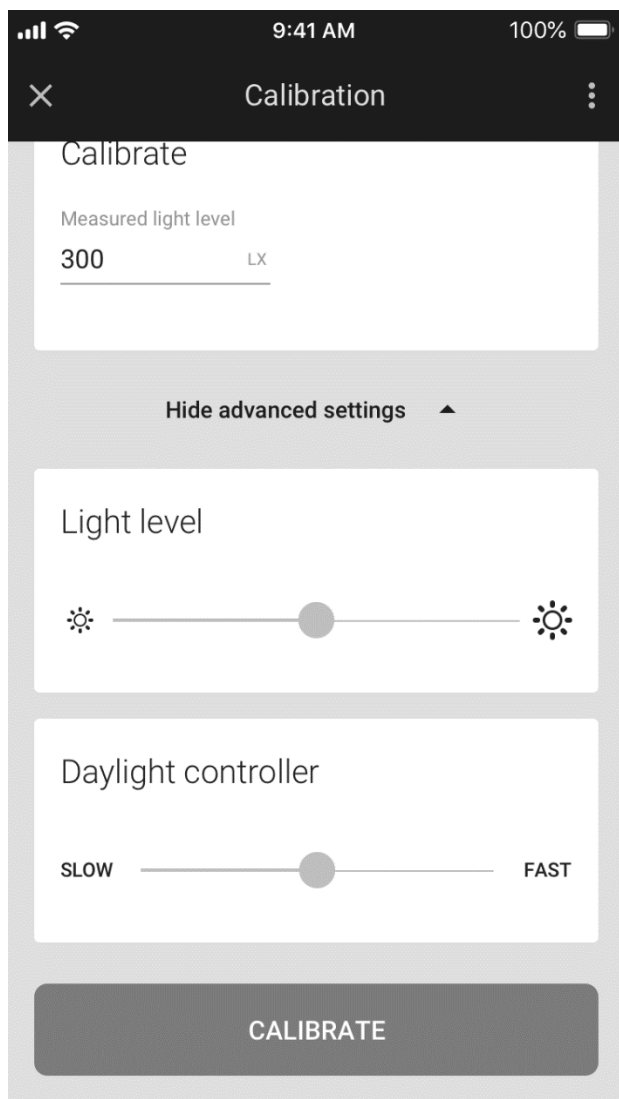


- Show advanced settings - this will show you the Light level and Daylight controller sliders.
- **Light level** - use the slider to adjust the light level of the luminaires in the zone.
- **Daylight controller** - If there are any issues or unexpected light behavior including frequent on/off or oscillation, use the daylight controller slider to adjust the controller settings.
  - Use the slider to adjust the responsiveness of daylight control.
  - If oscillations occur, position the slider to the left.
  - If daylight adjustment is too slow, position the slider to the right.
  - Select "**RUN TEST**" to check whether the performance meets your requirements.
  - After changing the slider position to the left, or right for test purposes, the slider goes back to the central position (as shown in the picture).

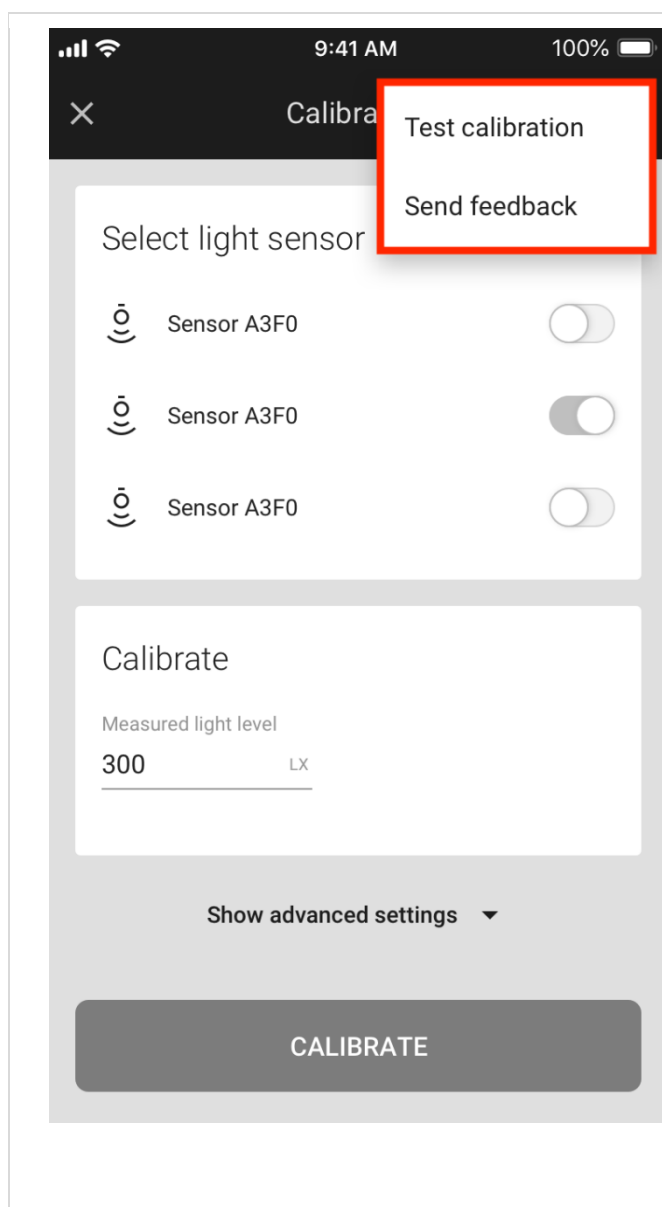


- Press the context menu  on the calibration screen to see additional options.
- **Test calibration** - press the **START TEST** button to test calibration of daylight harvesting. The testing mechanism will adjust the light level of the luminaires to the preset setpoint. The test results will show how the luminaires adjust to the setpoint. If test shows any oscillations or misconfiguration, you should try to redo the calibration, or adjust the Daylight controller slider from the advanced settings.

## Photocell calibration

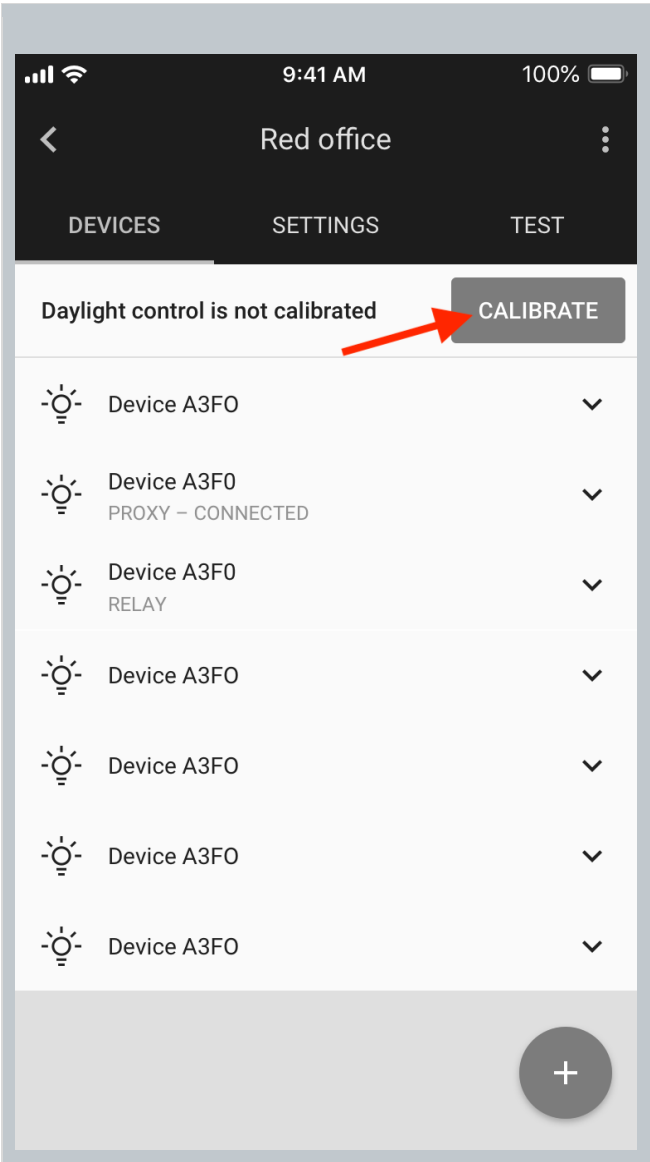


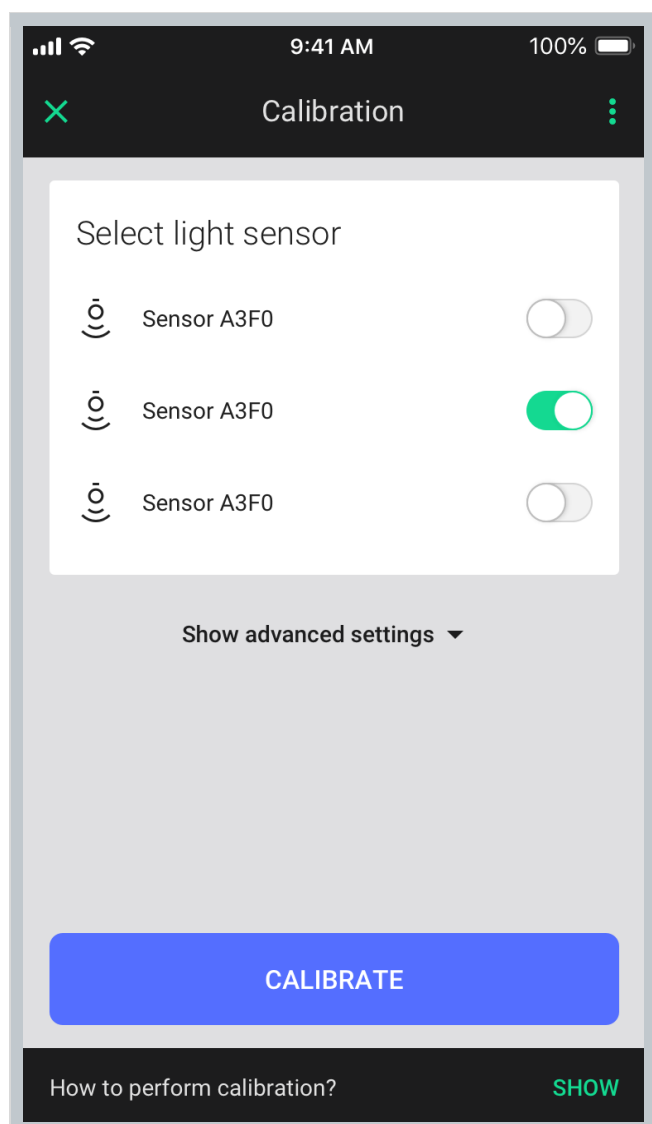
- Open the project, select desired area and a zone.
- Press **CALIBRATE** button from the **"DEVICES"** tab. The button will be active only if there're devices with ALS (ambient light sensor) that should be calibrated.

**HINT:** You can also start calibration from the **"SETTINGS"** tab. There's a **"Photocell"** element with CALIBRATE button that opens the calibration view.

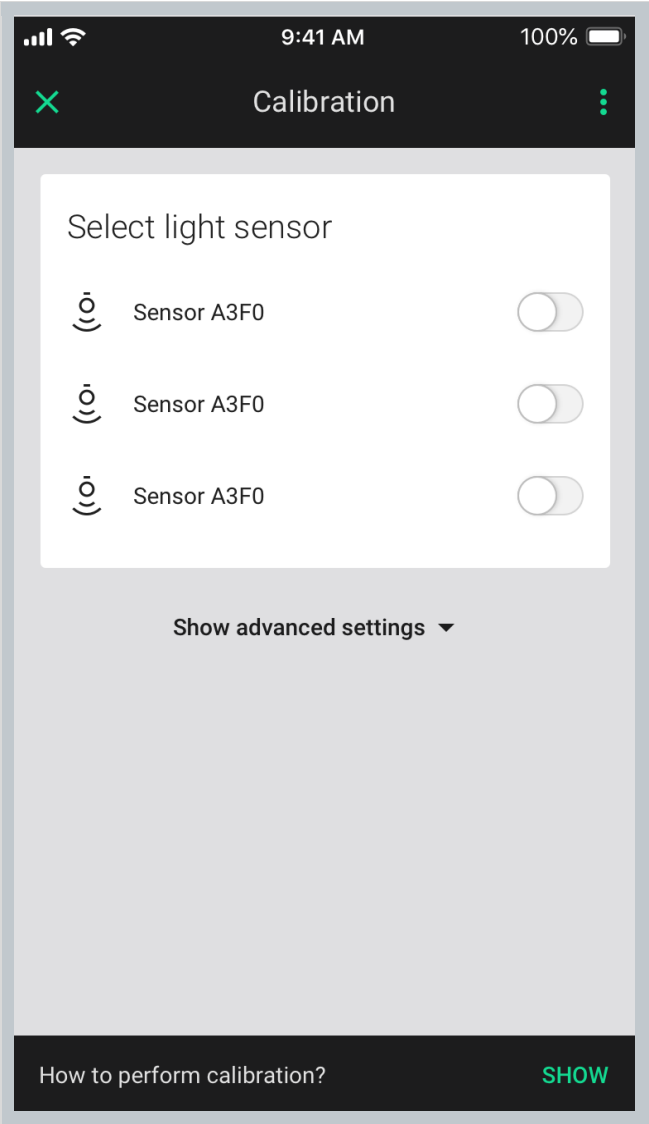


- Select the light sensor (switch the toggle next to the light sensor to the right).

**HINT:** After pressing the sensor icon  a device starts blinking. It helps to quickly identify the luminaire.



- Confirm by pressing **CALIBRATE** button. Calibration of the light sensor will start immediately.
- If you have issues with the accuracy of light sensor you may use the calibrate section in the advanced settings

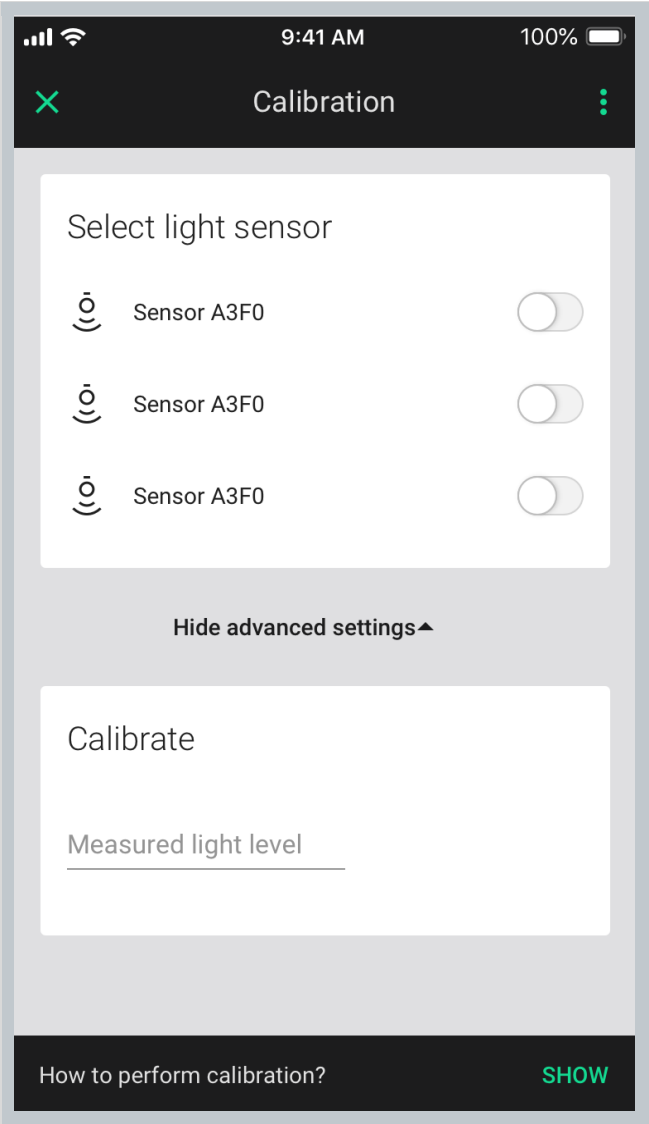


- Use a light meter to measure the light level where the light sensor is installed.
- Enter the LUX value measured by the light meter in the Measured light level field.
- After entering "Measured light level" LX value in the input field provided, tap CALIBRATE button to confirm.
- Calibration of the light sensor will start immediately.

## Scenes A&B setup

The Fulham mobile app allows two scenes to be created per zone. Scenes can be activated with a wall switch (see: [Using the EnOcean switch](#)). Each of the two scenes **for a zone** can have different parameters.


- In the web app user can predefine scene level for scenes A and B. If the predefined settings are enabled, the devices are being configured using those settings while being added/reconfigured in the zone.
- If the predefined settings are not enabled, user can enter scene A & B settings view in the mobile app and customize the scene in the particular zone.
- Each of the two scenes **for a zone** can have different parameters.

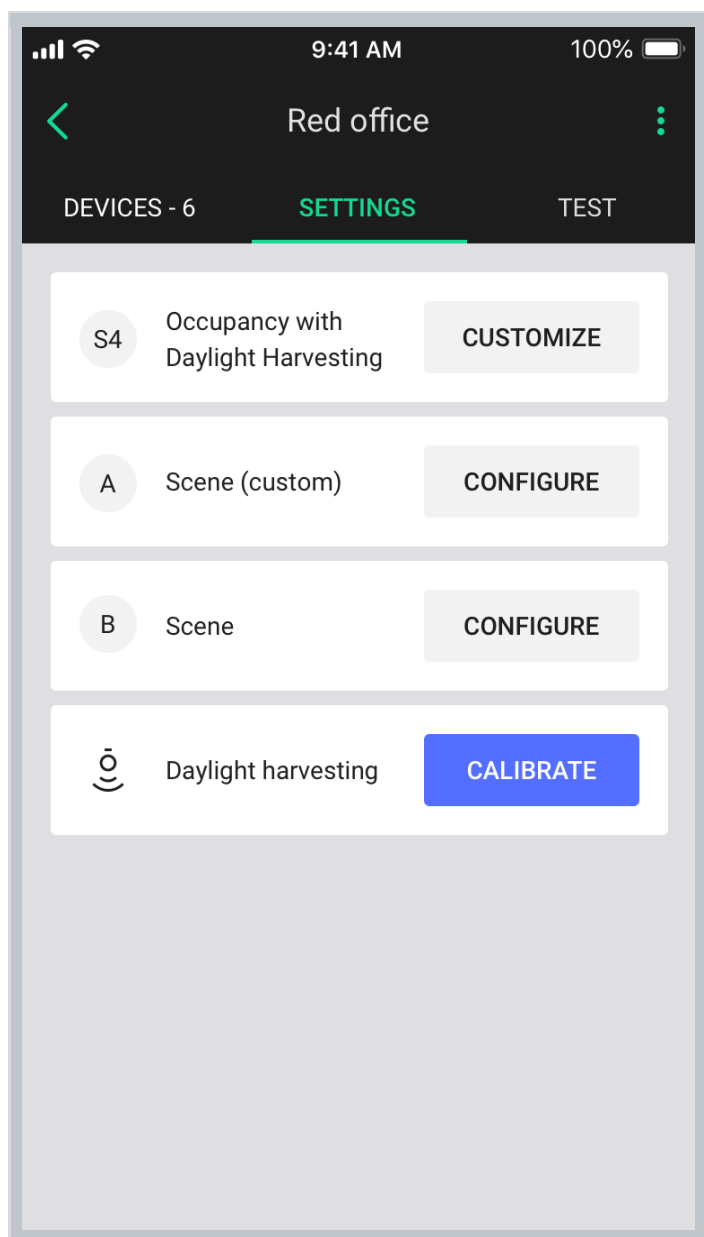

- Open the **SETTINGS** tab.
- Press "CONFIGURE" to select the scene that you want to configure.
- Labels in the settings view show if the scene is customized in this zone
  - No label - the scene has been predefined in the profile with the web app but hasn't been customized with the mobile app
  - Empty - the scene hasn't been predefined nor customized
  - Custom - the scene was customized with the mobile app.

**NOTE:** Configuring scenes requires that all devices have been added to the zone and are configured correctly (i.e. there are no zone alerts or warnings).




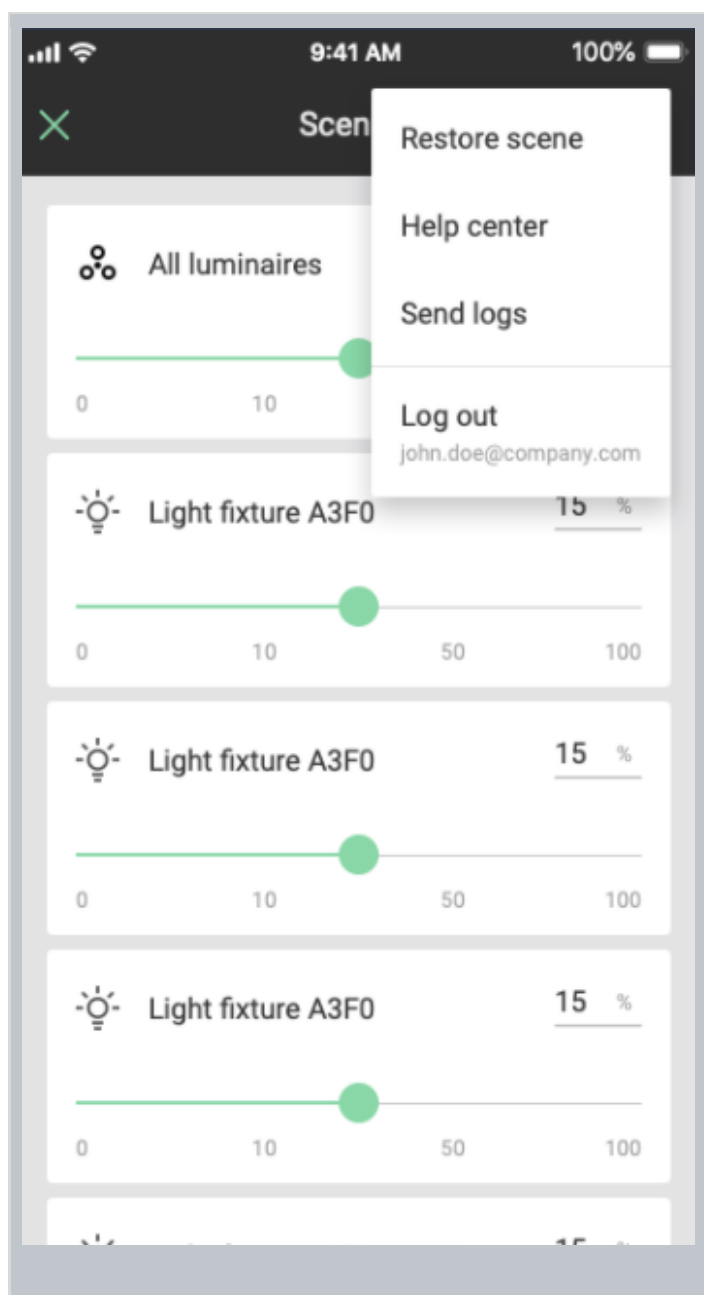


- Adjust the light level for individual luminaires to reflect the desired scene configuration.
- Identify the luminaire by tapping on the device icon. The luminaire will start to flash.
- Tap **"Apply custom settings"** to save the scene.
- If the scene was customized (has a custom label), in the context menu there is an option: **"Restore scene"**, which removes scene settings. or **"Remove scene"** if the scene has not been predefined in the profile


## Test your zone (TEST tab)

The test tab allows you to test if the light control is working correctly, i.e. can the luminaires be switched on to maximum level, switched off, dimmed and are the scenes are configured as desired.

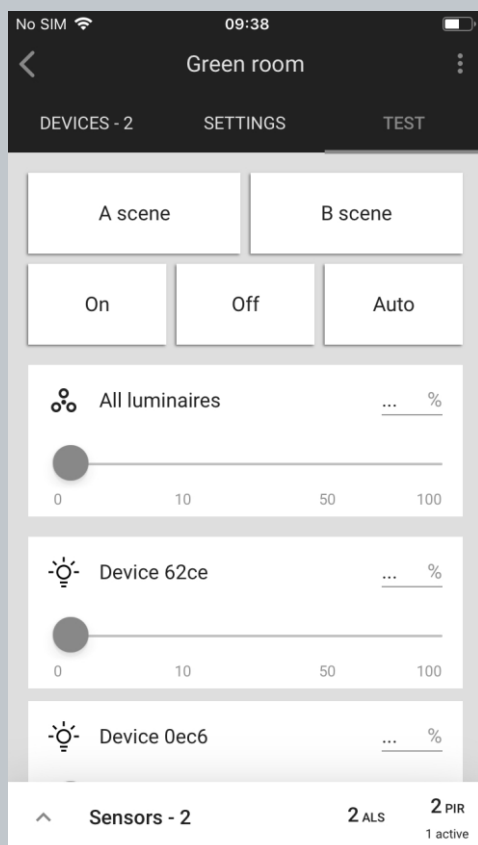

- Open the **TEST** tab
- Choose the test:
  - A scene:** luminaires will go to the light level defined in scene A.
  - B scene:** luminaires will go to the light level defined in scene B.
  - Off:** all luminaires switch off.
  - On:** all luminaires go to 100%.
  - Auto:** turns on the automatic settings for luminaires.
- The luminaires will react immediately.

**HINT:** Check which devices are added to your zone. Press the  button next to **"All luminaires"**. You should immediately see all devices that are added to the selected zone blinking.

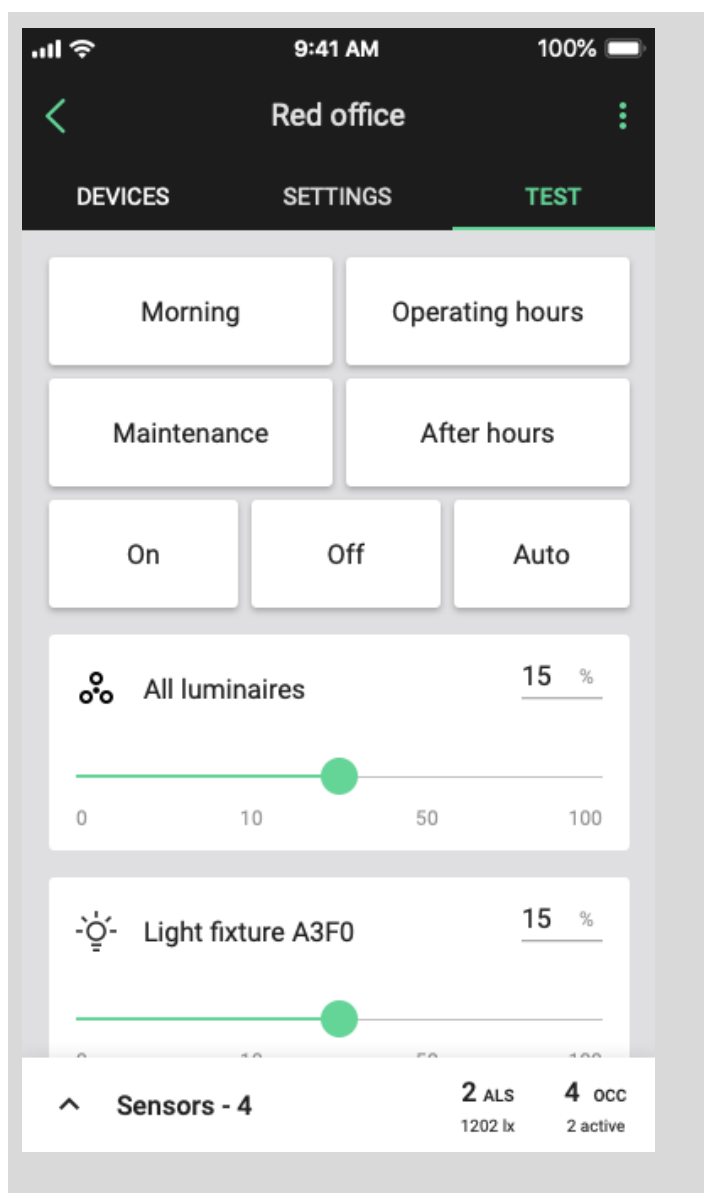


- For a zone where the “Multiple scenes” scenario has been selected, the TEST tab along the On, Off, and Auto options will display the customized names of configured scenes:

Morning (scene 1)  
Operating hours (scene 2)  
Maintenance (scene 3)  
After hours (scene 4)

#### **Testing individual luminaires:**

- Scroll down to see all luminaires added to the selected zone.
- Use the slider to change light level or enter the value manually (in %).
- The selected luminaire should react immediately.

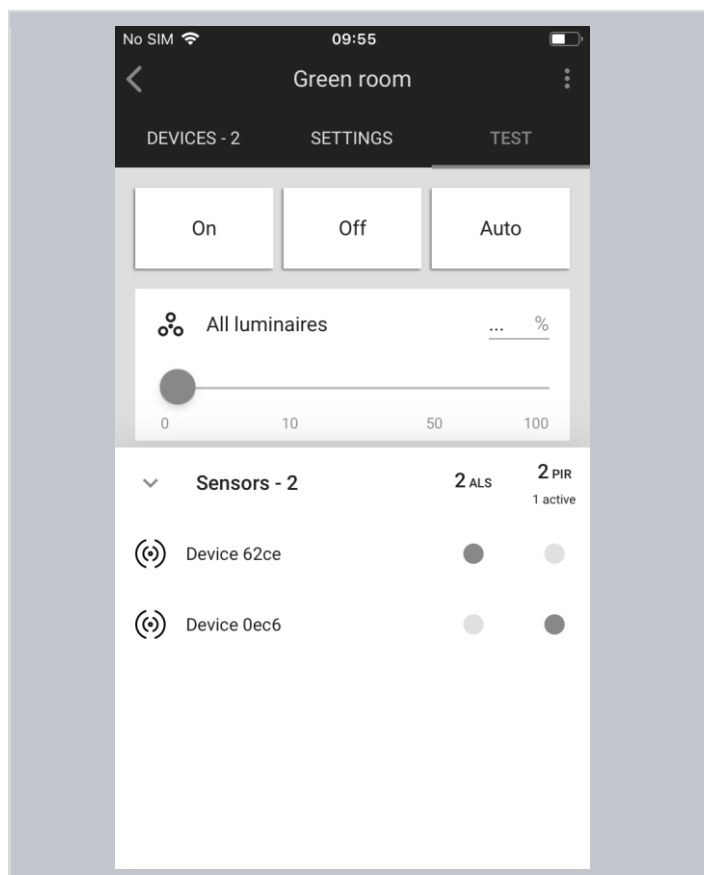

#### Sensors view:


- Sensors can be previewed via the **TEST** tab.
- The list at the bottom of the screen shows how many sensors are available and the light level measured by the light sensor
- The lux level value is read immediately when the panel is opened, and then the next update is only after the device reports the value. When you open the panel again, the application reads the value again (after each lux level update the background is green for a 3 sec.).
- To preview the sensors, expand the list and see which sensors are currently active.
- If no sensors are available, the list is empty.

## Check the devices list

All devices commissioned to a particular zone are listed in the DEVICES tab, along with their name and features.

## Identifying devices added to a zone

It may sometimes be necessary to identify a specific device which has a problem or should be configured as a relay or EnOcean adapter.

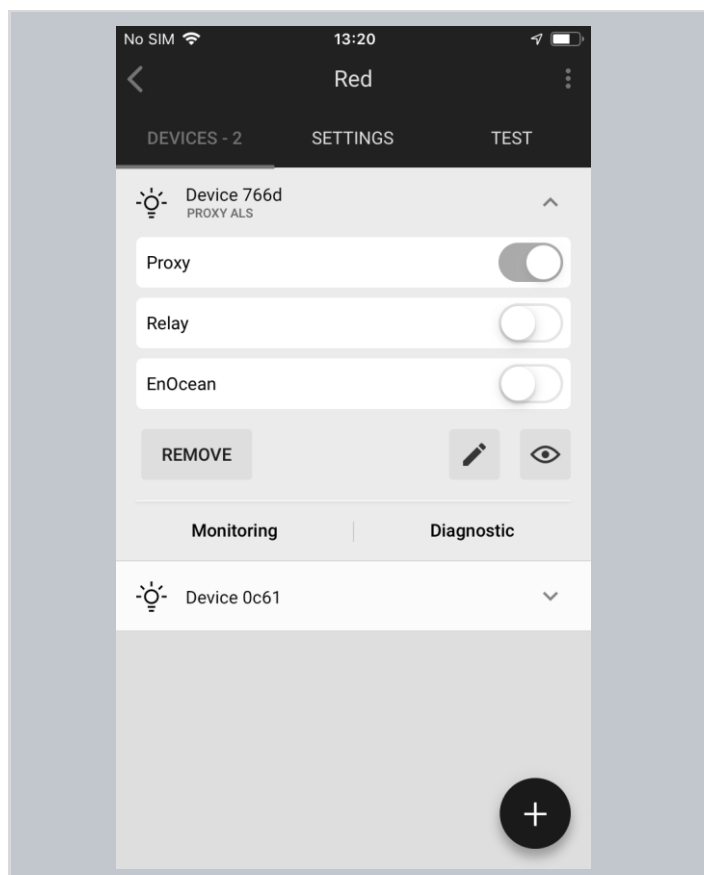

Identify a device

by tapping the **Device** icon: 


Or by tapping the **eye icon**:




The selected device should then draw attention e.g. by flashing.

**Hint:** After an attention request (pressing the device or eye icon), the device will be requested to send a response. When the response doesn't arrive, the snackbar "*{Device name} is not available*" is displayed.


## Rename a device

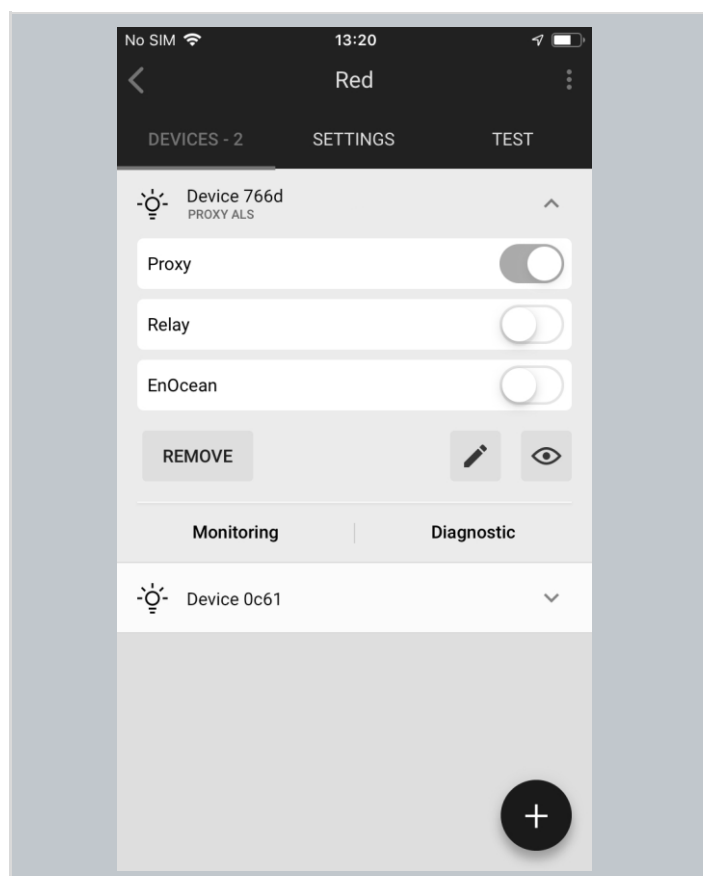

- To change the name of a device, expand the device on “DEVICES” view and tap the pencil icon  to change the name. The new name will be visible in the mobile and web application.
- Once the name is changed, the new name will be visible in the mobile and web application.
- If the device is removed from the zone and recommissioned, it will appear in the mobile and web application with its default name.


## Device mesh network settings

The Fulham mobile app allows users to run the Mesh quality test that allows a user to check the availability and quality of the mesh connection between zones.

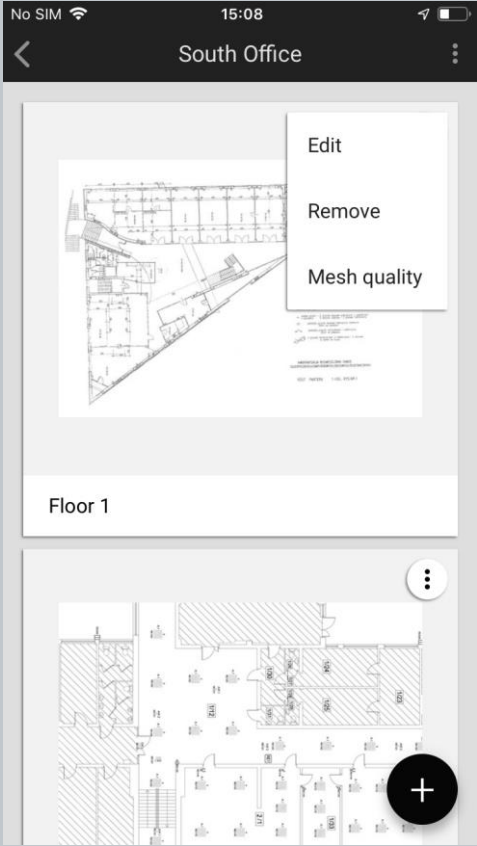


- To start running the test, select the project where you would like to check the connection.
- Then, select the correct plan, click the “More” button and choose “Mesh quality”.
- Testing your mesh network should start immediately.
- The test is performed by selecting a random proxy within the Area and sending a ping message to all the nodes in that Area (one retry is executed if a node does not respond to the first ping message).
- If all the nodes reply with a pong message, zones are marked green to indicate good connection.
- If even one node does not reply with a pong message, the zone it is added to is marked red to indicate potential connection problems.
- The results are presented on the Area floor plan with mesh network indicators such as: relays, proxies, and places with potential connection problems
- For more information about the Mesh quality test, see *SN-202 Optimizing Mesh Network Performance*.

After running the Mesh quality test and discovering some mesh problems, you might want to customize two network parameters for any device in a zone: Mobile device proxy and Relay. To do it, open the “Devices” tab, and select the device you want to look up.

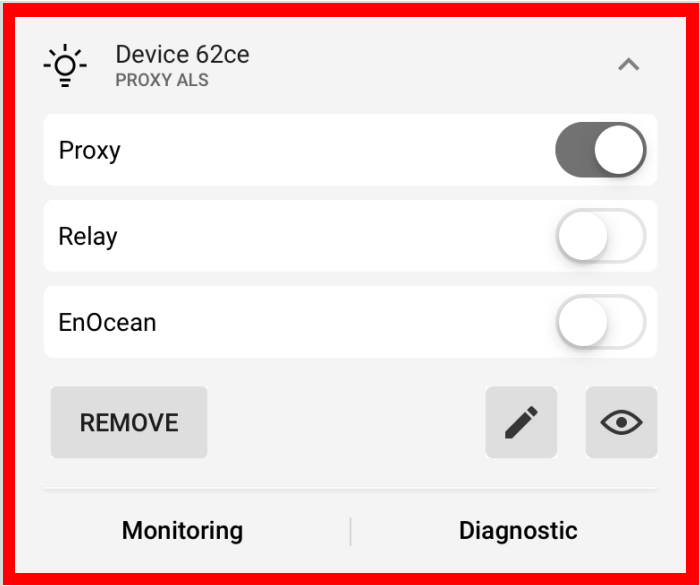


**Mobile device proxy (or “proxy”)** (Fulham’s firmware < 2.17 or project version < 202005) allows the mobile device running the Commissioning mobile app to connect to the mesh network and to configure devices.

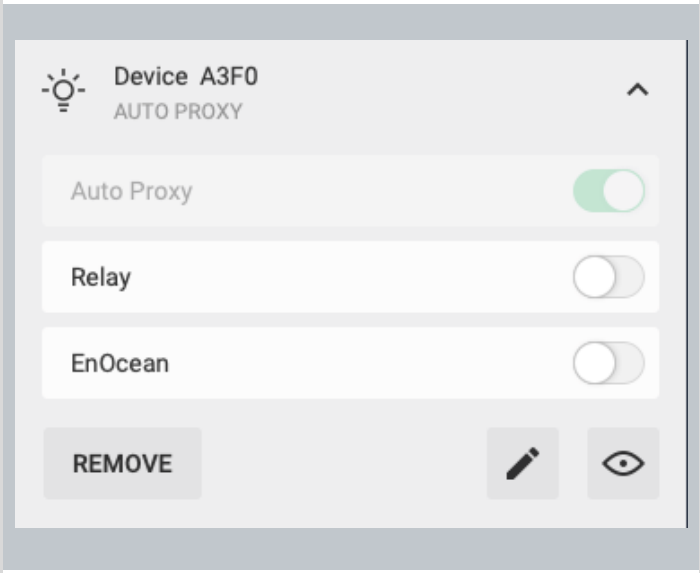

**Auto Proxy** - allows each node to automatically become a proxy whenever the Fulham mobile app is around.  
Devices with enabled auto proxy have toggle labelled “Auto proxy” enabled and inactive.


**NOTE:** Auto proxy function is available in devices with Fulham’s firmware from version 2.17 and projects from version 202005. To use this function in already commissioned projects that do not meet the requirements, a web app project update, firmware update, and recommissioning is required.

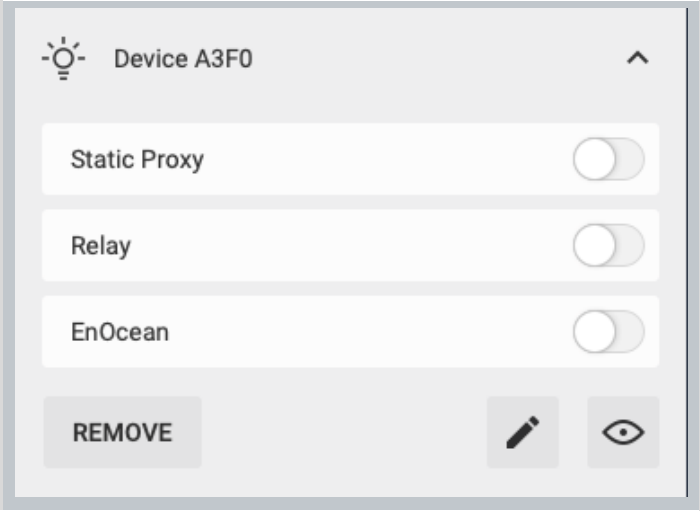

**Static Proxy** - devices and projects that do not support the auto proxy function use static proxy.

Static Proxy is automatically configured by mobile app during the commissioning in

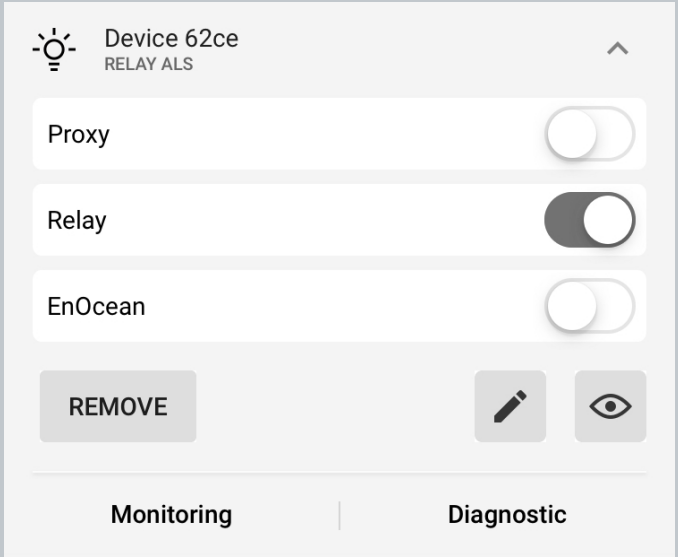


	<p>order to provide access to the network in the whole project.<sup>12</sup></p> <p>Devices not supporting auto proxy have toggle labelled "Static Proxy" active (enabled or disabled).</p>
	<p><b>Relay</b> - the device relays messages on into the mesh network.<sup>13</sup></p>

<sup>12</sup> By default, the mobile application will make sure that at least one device in the project has the proxy enabled. Please be aware that disabling or removing proxy device affects the performance of connecting the application to the network.

<sup>13</sup> Enabling both the Mobile device proxy and Relay functions on the same node will lead to inefficient performance and is not recommended.

Device diagnostics

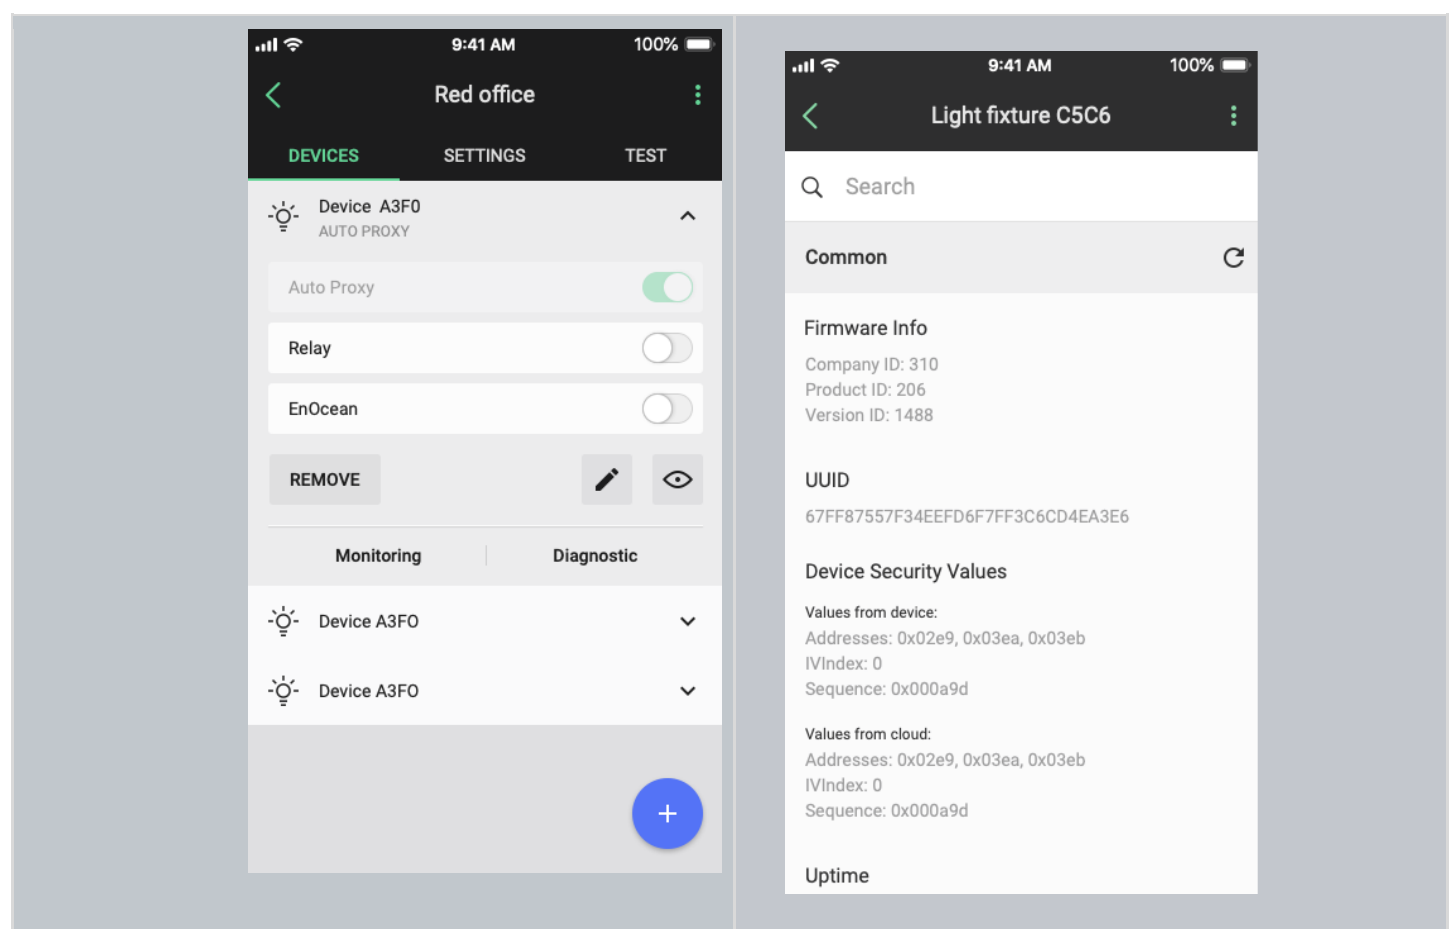

**The device diagnostic report may be helpful in the event of any problems. It gives basic information such as:**

- Firmware information
- Uptime
- Time since last fault
- Controller parameters


The Fulham app also supports some manufacturer specific device health tests, e.g. DALI bus reset.

With the search box, the user can find a cell that contains the searched string. If the search box is empty, then all properties are visible. If the search box contains the searched string, then only those cells are visible that contain the searched string in their content.


## Monitoring

The Monitoring feature allows you to see the energy consumption of compatible devices in the mobile app. These values include:

- Total lifetime power consumption (kWh)
- Apparent power (W)
- Voltage (V)
- Power factor

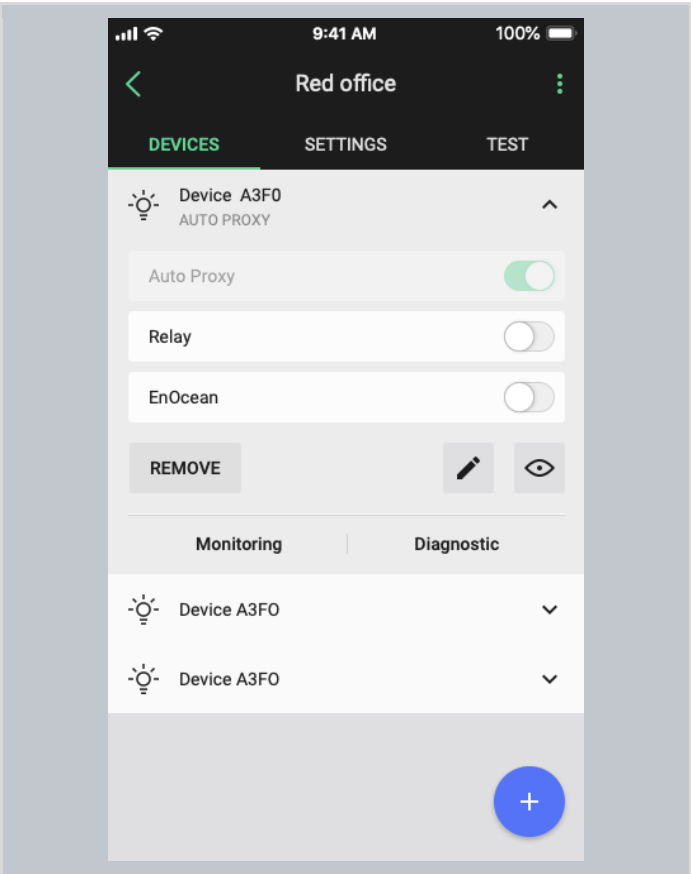

- Go to the “**DEVICES**” tab.
- Expand the down arrow for the device you want to check.
- Tap “**MONITORING**”.




The screenshot shows a mobile application interface for 'Device X2Ce'. The status bar at the top indicates the time is 10:31. The app has a dark header with a close button (X) and the device name. Below the header is a section titled 'Energy monitoring' with a refresh icon. The data is presented in a list of four items, each with a title and a value: 'Total lifetime power consumption' (380.000 kWh), 'True power' (120.0 W), 'Voltage' (120.0 V), and 'Current' (0.8 A).

Parameter	Value
Total lifetime power consumption	380.000 kWh
True power	120.0 W
Voltage	120.0 V
Current	0.8 A


- The energy consumption values are displayed.

## Remove device

If a device has been added to the wrong zone or doesn't operate properly, you can remove it. This action removes the device from the network and from the project, while also resetting the device and erasing its configuration data.

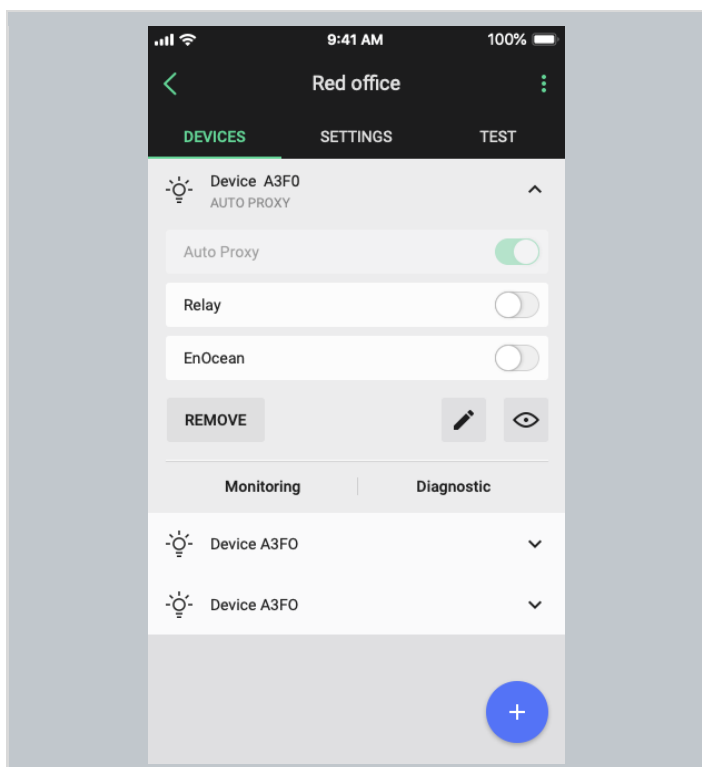

- Go to the **"DEVICES"** tab.
- Select the device you want to remove. The list element will expand.
- Tap **"REMOVE"**.

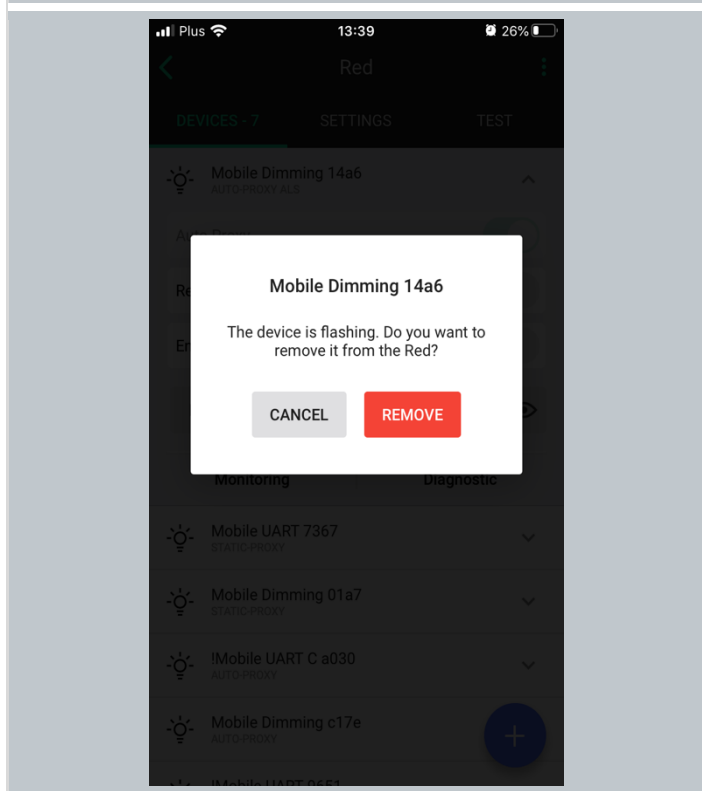

- Check if the device is attracting attention e.g. by flashing.
- If it's the right device, tap **"REMOVE"** again to confirm. This will remove it from the network and restore its default settings, making it available for adding to another network.



**NOTE:** The mobile app will not allow you to remove the last mobile device proxy in the project if it still contains other devices, as this will mean you will no longer be able to connect with them. To remove the last proxy, remove all other devices from the project first. Only then will the app allow you to delete the last proxy device.

## Hidden devices


As part of the device removal process described above, a device is not only removed from the app's database but also fully reset. This means removing a device from the network and restoring its default settings by erasing all configuration data, including security keys. In order to successfully carry out this process, the app needs to exchange certain data with the device which is to be removed. If the app is unable to communicate with the device, the removal process cannot be completed.

This can happen in the following cases:

- device is powered off or does not operate properly (manufacturing defect, failure, etc.),
- device has already been reset or removed manually,
- mesh communication failure (e.g. device is out of range).

A device that cannot be fully removed remains visible in the app and commissioning reports, and may report configuration errors. This could be confusing for the user, especially when such a device has already been physically removed from the ceiling. To address such cases, the app offers the possibility to **hide** a device that cannot be fully removed. A hidden device will no longer be displayed in the list of available devices, will not be included in commissioning reports, and will not report configuration errors. However, it can still be found in the web app (grayed out and marked as *hidden*). This allows the user to restore a device back to the unhidden state if needed (e.g. when it was hidden accidentally).

## Hiding devices

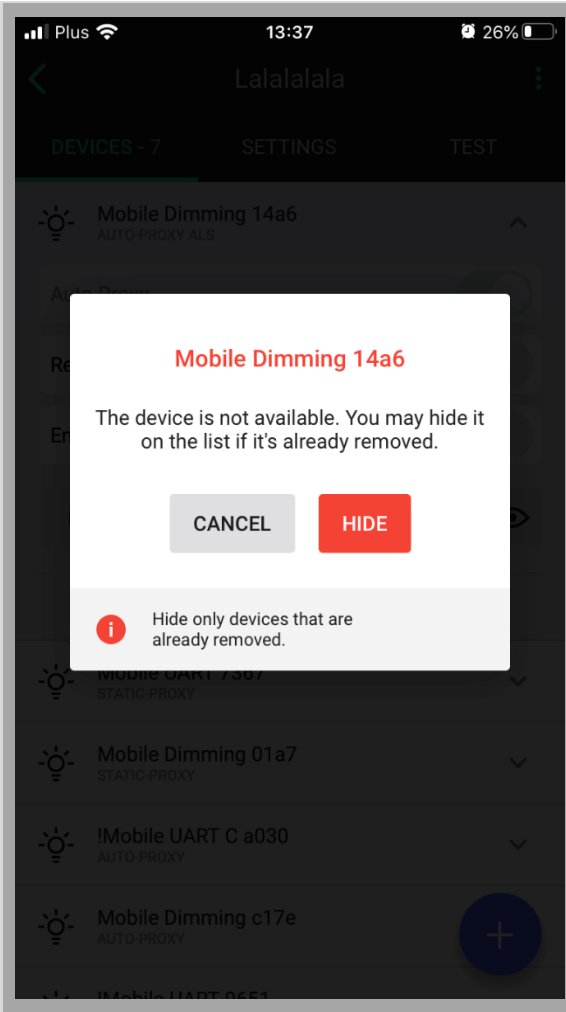


- When the user chooses to remove a device but the app cannot communicate with it, the removal process cannot be completed.
- In this case, the app will ask whether the device should be hidden so that it is no longer visible in the list of available devices and commissioning reports.
- Tap **“HIDE”** to remove the unresponsive device from the list.



**NOTE:** Make sure to hide only those devices that are broken or have been removed from the project manually (via physical uninstallation or hardware reset). If the app is unable to communicate with a device during the device removal operation, it might happen that the user hides a device that has not been reset and keeps operating within a mesh network (i.e. it keeps implementing specified control scenarios). In order to successfully remove such a device from the network, it should be restored (details below) and then removed.




Restoring hidden devices

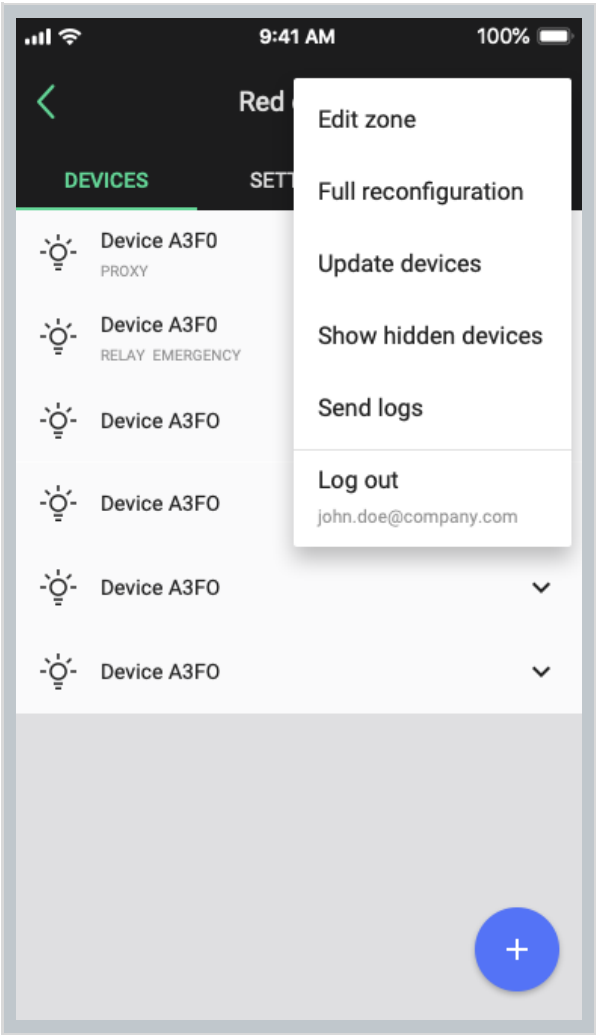

To display hidden devices:

- Open zone’s context menu
- Tap “Show hidden devices” button

**NOTE:** When there are no hidden devices, the menu item is not available.

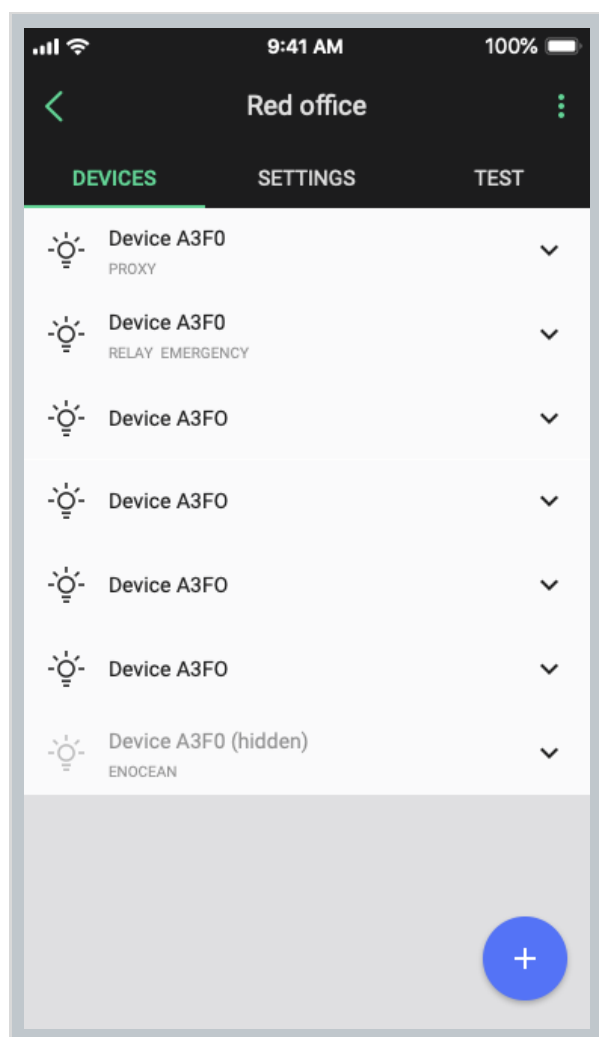

- Hidden devices are displayed on the list of devices in the zone and greyed out

## Removing devices without access to mesh

User wants to remove a device from the zone using the mobile app. Device is greyed out in the app as there is no access to mesh.

### Solution:

If this happens, user needs to connect to mesh by a proxy device. There are 2 workarounds to do that:

#### Workaround 1


1. Factory reset one of devices that is active in that zone and to which user can connect over mesh.
2. Then, re-add that device to the same zone. Make sure it is a "Proxy" device.
3. After that, user should access to mesh and be able to remove the devices intended for deletion from the zone.

## Workaround 2


1. Add any mesh device to that zone to have a proxy device present there. (e.g. it can be a mesh device from another zone)
2. Then remove the devices intended for deletion from that zone to recommission the whole zone before removing the dummy proxy device from p.1 if necessary (user should have at least one proxy device nearby to connect to the zone's mesh).

## EnOcean switch commissioning


Adding an energy harvesting EnOcean BLE switch to a zone allows it to control the lights in a zone. As an EnOcean BLE cannot communicate over the Bluetooth mesh protocol, you must select at least one of the devices already in the network to act as a gateway (or EnOcean adapter) for the switch.

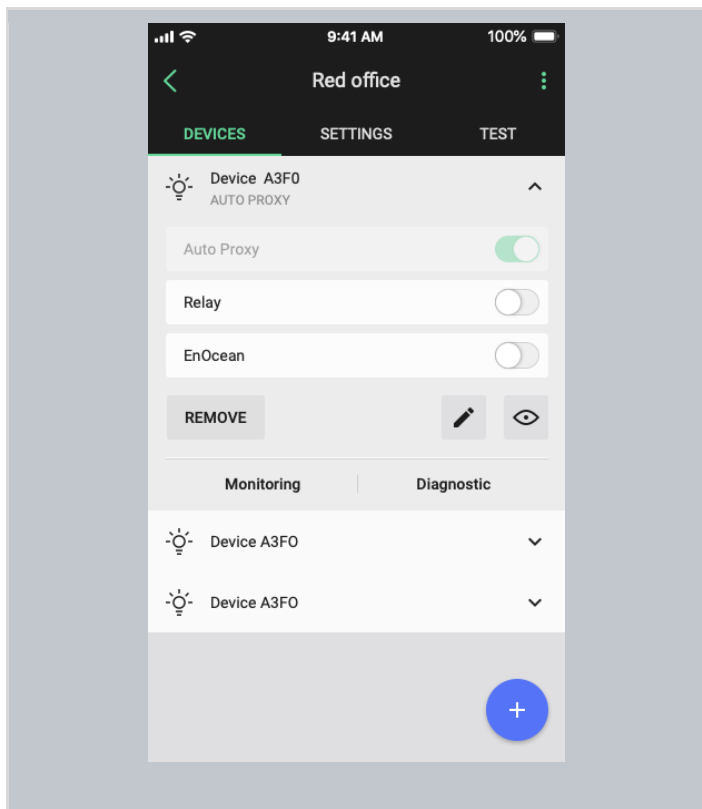

- Go to the **"DEVICES"** tab.
- Select the device you want to act as the gateway for the EnOcean switch.
- Tap **"EnOcean"** to enable it as an EnOcean adapter.

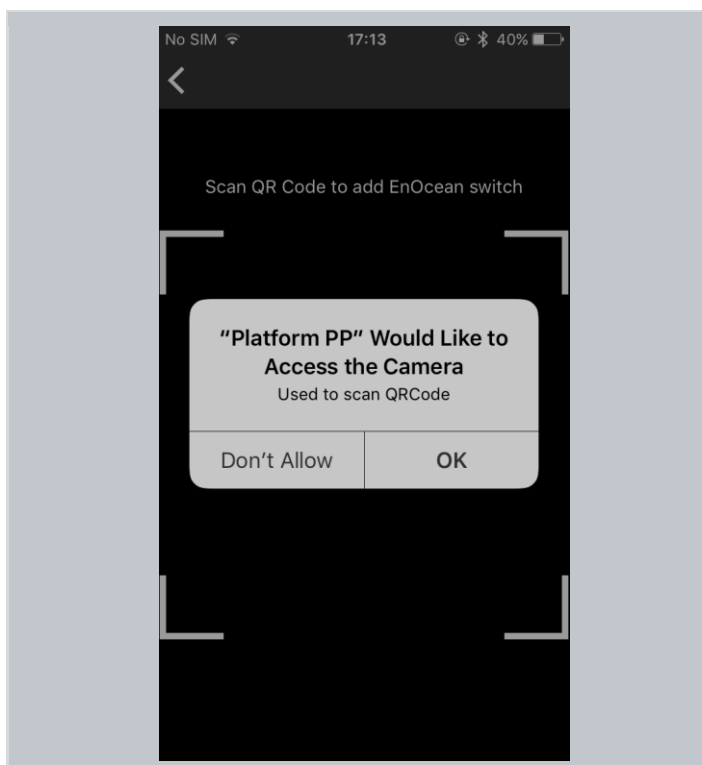

- The app will ask for permission to access the camera. Select **OK**.
- Point the camera at the QR code on the back of the EnOcean switch or on its packaging.
- The app will automatically read the QR code and configure the device appropriately.

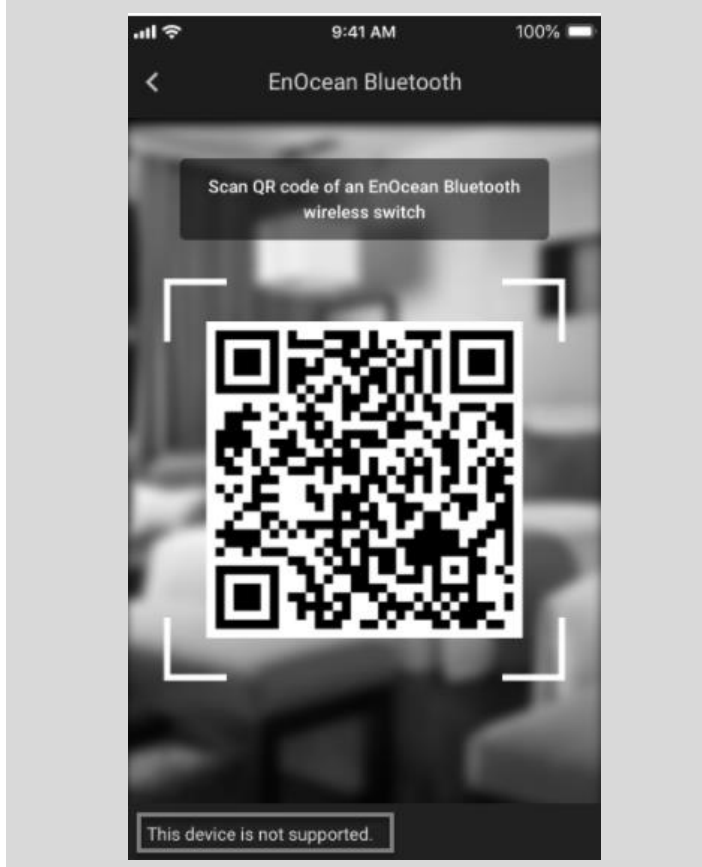

- **"This device is not supported"** on a snackbar.  
When the EnOcean device selected by the user is incompatible, user will see incompatibility snackbar when scanning such a device.



**NOTE:** The EnOcean switch can be removed from the zone at any time by disabling the EnOcean option for the device(s) acting as its gateway.



**NOTE:** Multiple zones can be controlled with a single EnOcean BLE switch by enabling the EnOcean adapter for one device in each zone. All such devices must be within the range of the EnOcean BLE switch that controls them.

## Using the EnOcean switch


EnOcean BLE switches are automatically configured as follows:

- Left rocker is used for manual control and dimming
  - Short press up - ON / AUTO resume
  - Short press down - OFF
  - Long press up - Dim Up
  - Long press down - Dim Down
- Right rocker is used to trigger scenes and control color temperature (if available) (see: [Scenes setup](#))
  - Short press up - Scene A
  - Short press down - Scene B
  - Long press up - Colder<sup>14</sup>
  - Long press down – Warmer

User can use two types of EnOcean presses (long & short presses) interchangeably. It means that the left rocker can be e.g. pressed first with a long press to turn the light ON and then with a long press to dim up the light.

---

<sup>14</sup> Color Temperature applies only to zones where compatible tunable white fixtures & appropriate version of the Fulham firmware have been added. Without these components, the right rocker color temperature adjustment (colder / warmer temperature buttons) will not work.

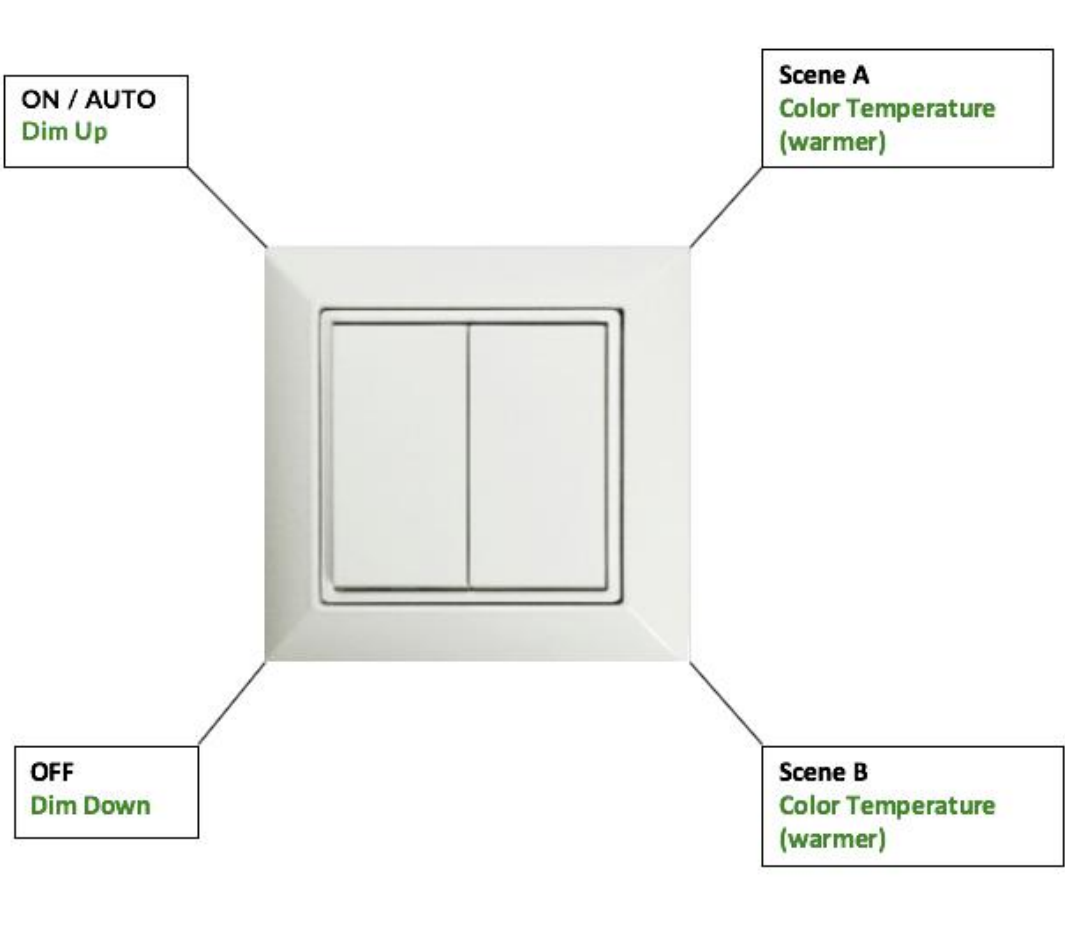

\* Short press actions - indicated in black.

\* Long press actions - indicated in green.

Example behavior of EnOcean switch in various scenarios

In some scenario settings, there is an additional **"Manual override timeout"** parameter (defined in minutes) that is set via Commissioning Web app. When user turns on one of the preset scenes from the EnOcean switch, after (x) minutes of detected vacancy in the space, the light will be switched to its default settings. For more information on specific scenarios please check the Scenario parameters for customization chapter.

Scenario type	EnOcean behavior
<b>Manual Control</b>  All luminaires are switched on and off manually with a wall switch.	<b>Characteristics:</b> <ul style="list-style-type: none"><li>• NO automatic control. User adjusts the lighting only by pressing the switch buttons.</li><li>• Manual ON / AUTO button<ul style="list-style-type: none"><li>- sets the light to the</li></ul></li></ul>


	<p>"Default light level" set in the profile settings.</p> <ul style="list-style-type: none"> <li>• Manual OFF - sets the light to 0%.</li> <li>• After changing lighting behavior (e.g. switching off, dimming, changing scene), it must be manually restored as there is no automatic behavior defined.</li> <li>• "Manual override timeout" parameter - not available in this scenario.</li> </ul>
<p><b>All types of Occupancy and Vacancy scenarios</b></p> <p>Occupancy: All luminaires are switched on when motion is detected and switched off when no motion is detected for a given time.</p> <p>Vacancy: All luminaires are switched on manually with a wall switch and switched off automatically when no motion is detected for a given time.</p>	<p><b>Characteristics:</b></p> <ul style="list-style-type: none"> <li>• Pressing ON / AUTO button sets the light to the Occupancy mode level and it lasts for a defined timeout (available in profile edition).</li> <li>• "Manual override timeout" parameter is available. <ul style="list-style-type: none"> <li>○ This parameter is triggered after pressing: OFF, Dimming Up/ Down, Scene A, Scene B on the EnOcean switch.</li> <li>○ The timer is resetted after detecting occupancy in the</li> </ul> </li> </ul>



	<p>room. Example: Manual override timeout is set to 10 minutes. User presses OFF button on the EnOcean switch and leaves the room.</p> <ul style="list-style-type: none"> <li>• CASE A: Occupancy in the room is not detected for 10 minutes. The lights are switched back to the default settings.</li> <li>• CASE B: Occupancy in the room is detected after 3 minutes. The timer is resetted and starts counting again from 10 minutes.</li> </ul>
<p><b>Multiple Scenes</b></p> <p>A set of 4 definable scenes with various control types to choose from. You can change the defined scene for all luminaires automatically or manually. You can also use the switch to manually dim or brighten all luminaires. Such a manual override lasts till the next scene event.</p>	<p><b>Characteristics:</b></p> <ul style="list-style-type: none"> <li>• 4 scenes triggered by short pressing the EnOcean switch.</li> <li>• Dimming available after long pressing the switch.</li> <li>• "Manual override timeout" parameter is not available.</li> <li>• More information about specific scenes recall available here.</li> </ul>


## EnOcean switch support for Multiple Scenes

Multiple Scenes scenario allows the user to define up to 4 scenes to recall. Users can change light control behavior from one automatic scenario to another e.g. with different levels to maintain. Scenes set in the Multiple Scenes scenario can be triggered by scheduling and by pressing the EnOcean wall switch. The below image shows an example setup for Multiple scenes scenario.

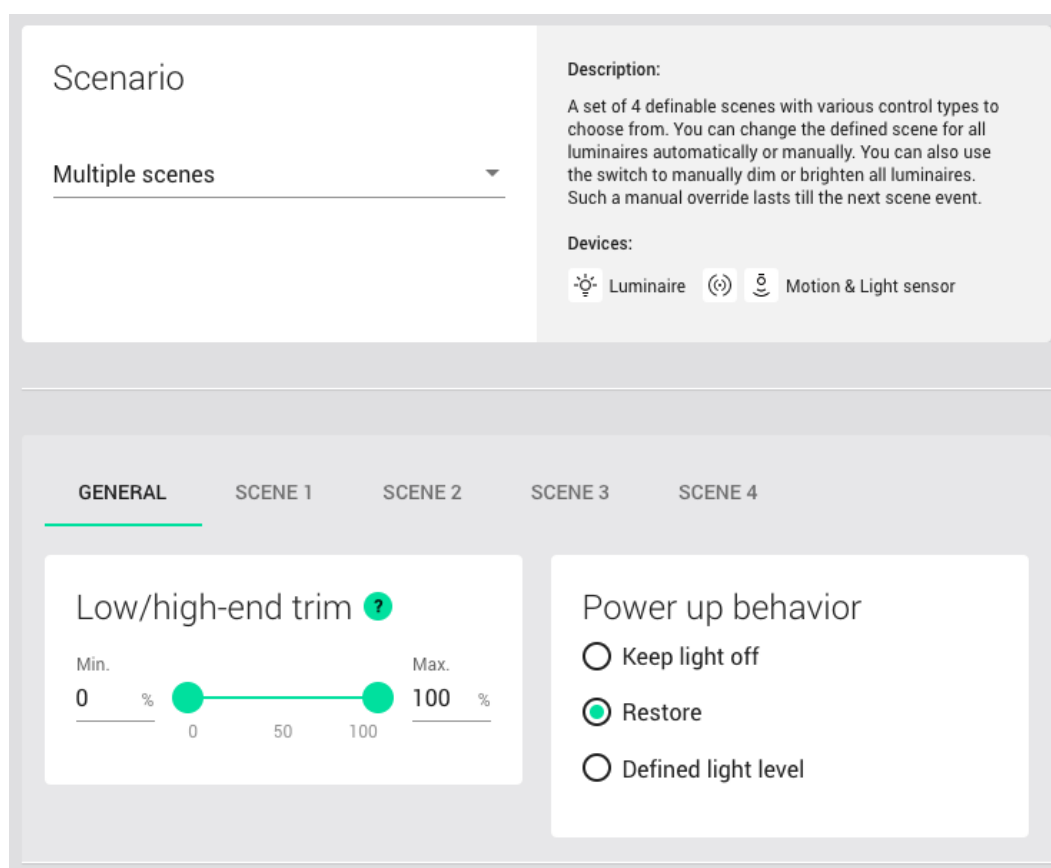

### Short press:

The configured scenes (see the image above from the Commissioning app) are triggered by pressing the EnOcean switch buttons. It might be helpful to imagine the N letter shape on the surface of the switch, where each button is a place which should be pressed for the scene recall. Check the below image to see how the EnOcean switch operates, where 1 = scene 1 , 2 = scene 2, 3 = scene 3, 4 = scene 4.

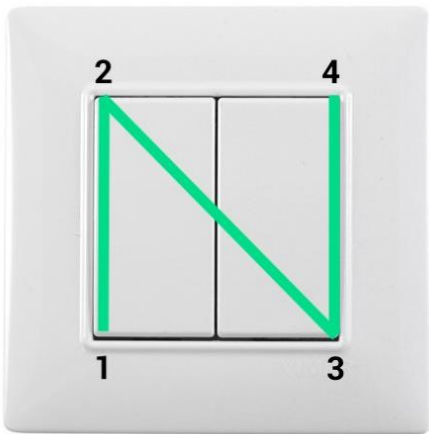

**N for EnOcean**

In case of long press, the switch behavior goes to: 1 = Dim Down, 2 = Dim Up, 3 = Color Temperature (Colder), 4 - Color temperature (Warmer).

**Supported EnOcean switch types:**


<b>Easyfit Single Rocker Wall Switch for BLE</b> (EWSSB)	<b>Easyfit Double Rocker Wall Switch for BLE</b> (EWSDB)



**Easyfit Single Rocker Pad for BLE**  
(ESRPB)



**Easyfit Double Rocker Pad for BLE**  
(EDRPB)

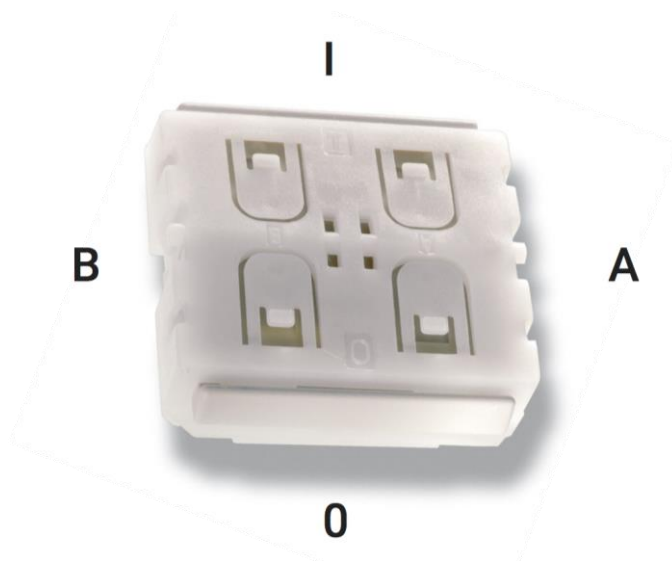

In order for switches to operate as described above, the EnOcean BLE Switch Module (PTM 215B) should be mounted so that the **"I"** label is above the **"O"** label.

## Resetting EnOcean switch

If the EnOcean switch has been reconfigured to use nonstandard channels, it might not work correctly with the Fulham firmware. In order to set the switches back to standard Bluetooth advertising channels, the switch needs to be reset to factory settings. The process has been documented in EnOcean ESRPB & EDRPB User Manual in chapter 5.4 Factory Reset. The procedure is as follows:

*In order to execute such factory reset, the rocker(s) and the switch housing have to be removed from PTM 215B so that all four PTM 215B module contacts and the energy bar are accessible.*


*After that, all four button contacts (A0, A1, B0 and B1) have to be pressed at the same time while the energy bow of the PTM 215B module is pressed down.*


More information and illustrated steps showing how to reset the switch are in the application note SN-203 EnOcean switch.


## 4. Commissioning with the mobile app

The Fulham mobile app supports some basic project management features such as creating projects, creating areas and creating and editing zones, allowing users to commission an installation **without having to first prepare a plan in the web app**.

### Create a project

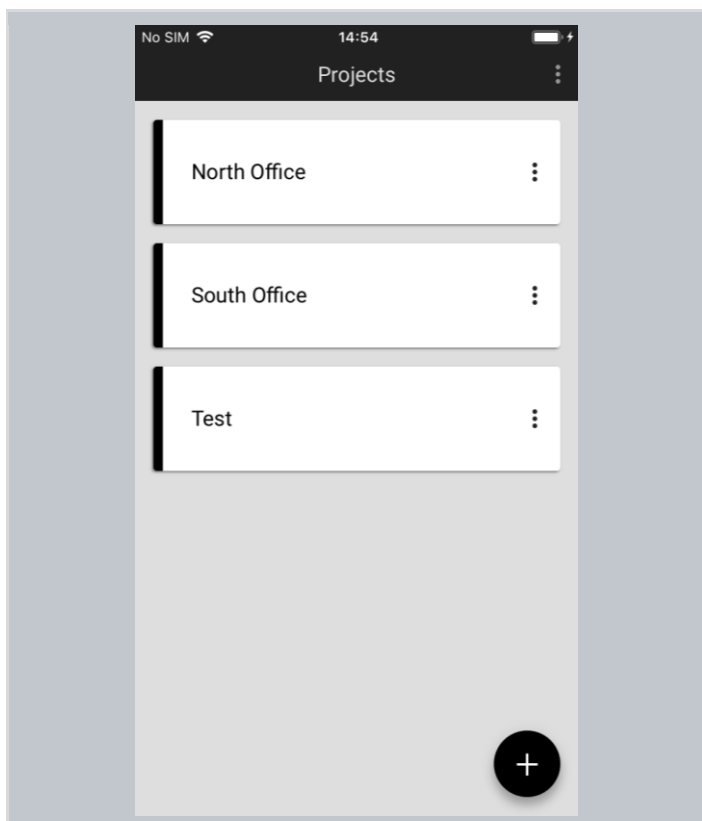



- Go to the projects list.
- Tap the  button.

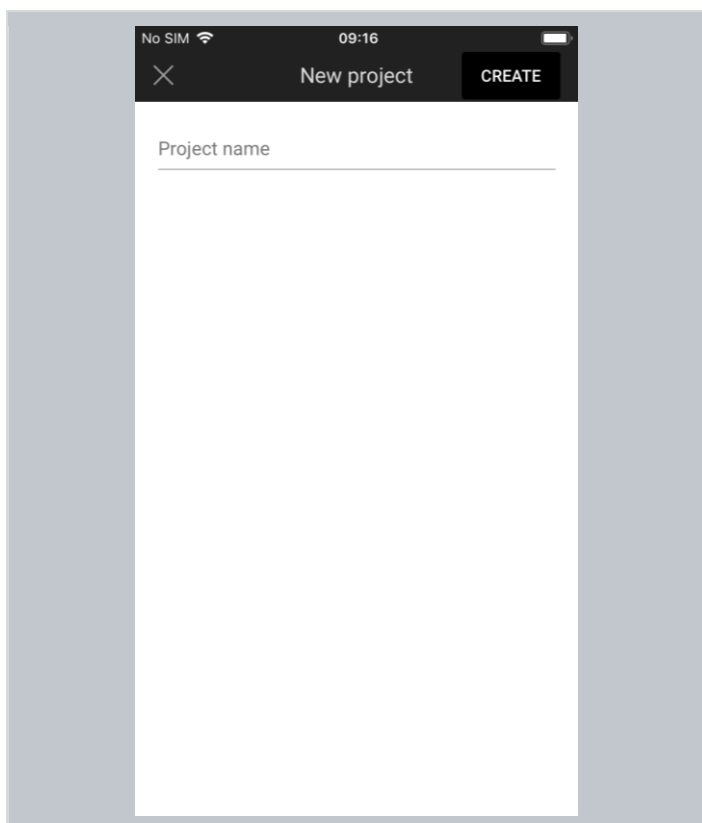


- Enter a project name and tap "**CREATE**".
- The project will be created and displayed on the projects list.
- Projects are sorted by the creation date, from the newest to the oldest

## Edit a project

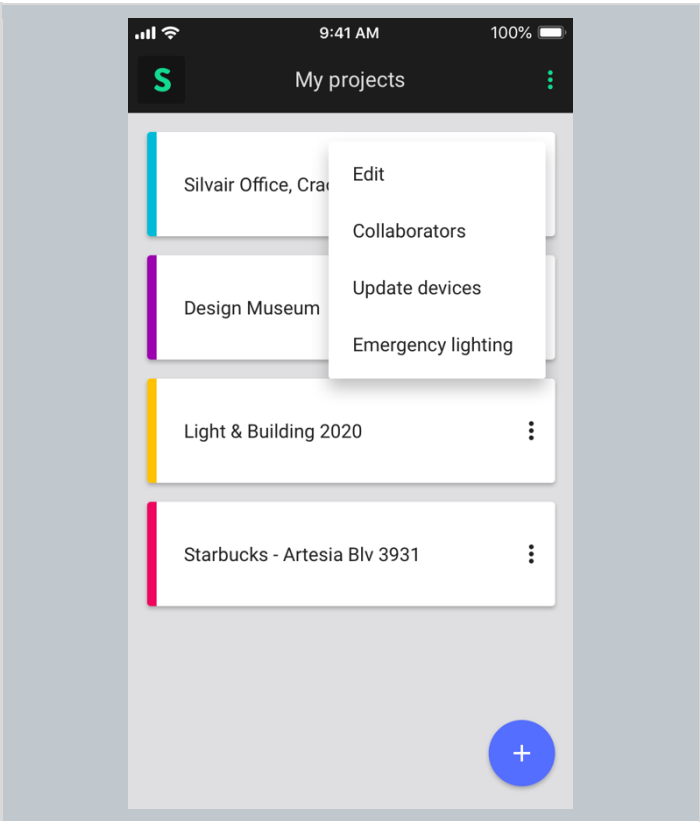

- Go to the projects list.
- From the menu,  select **“EDIT”**.




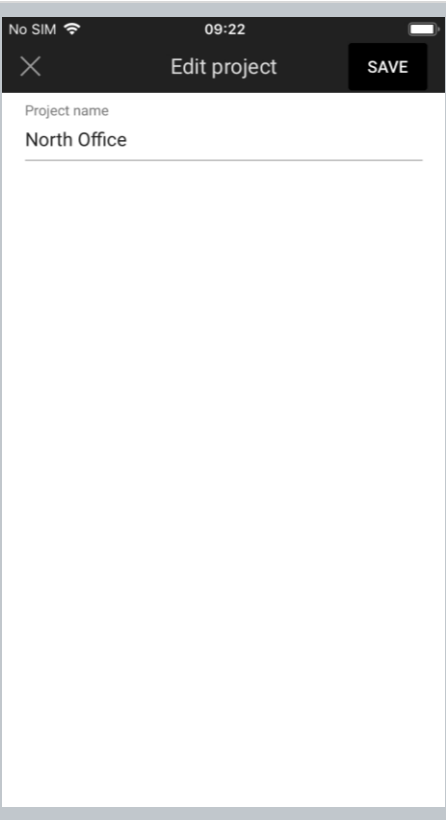


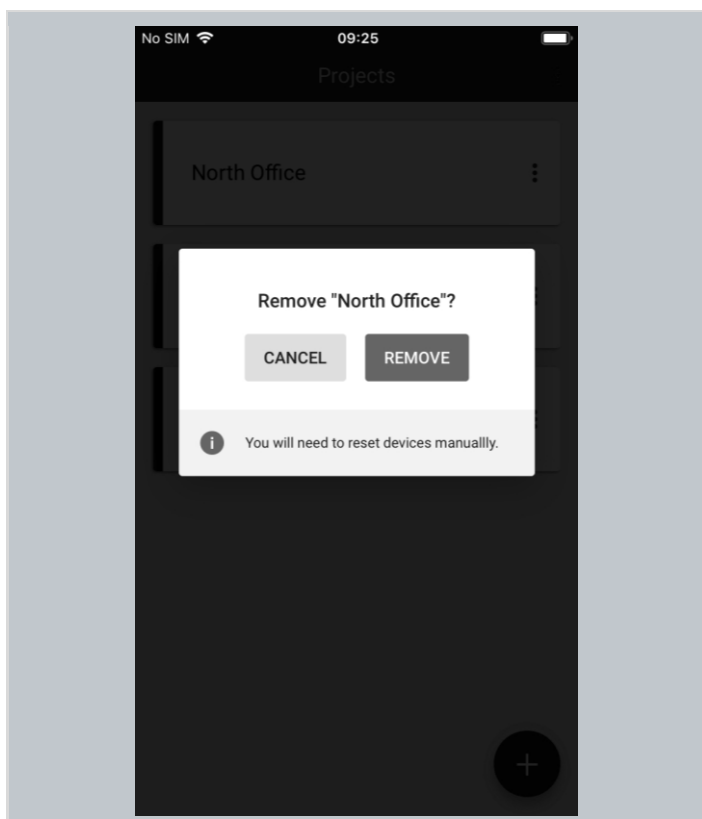
The screenshot shows a mobile application interface for editing a project. At the top, there is a status bar with 'No SIM', a Wi-Fi icon, the time '09:22', and a battery icon. Below this is a dark header bar with a close icon (X), the text 'Edit project', and a 'SAVE' button. The main content area has a label 'Project name' followed by a text input field containing 'North Office'.

- Change the project name and save it by tapping **"SAVE"**.


## Remove a project

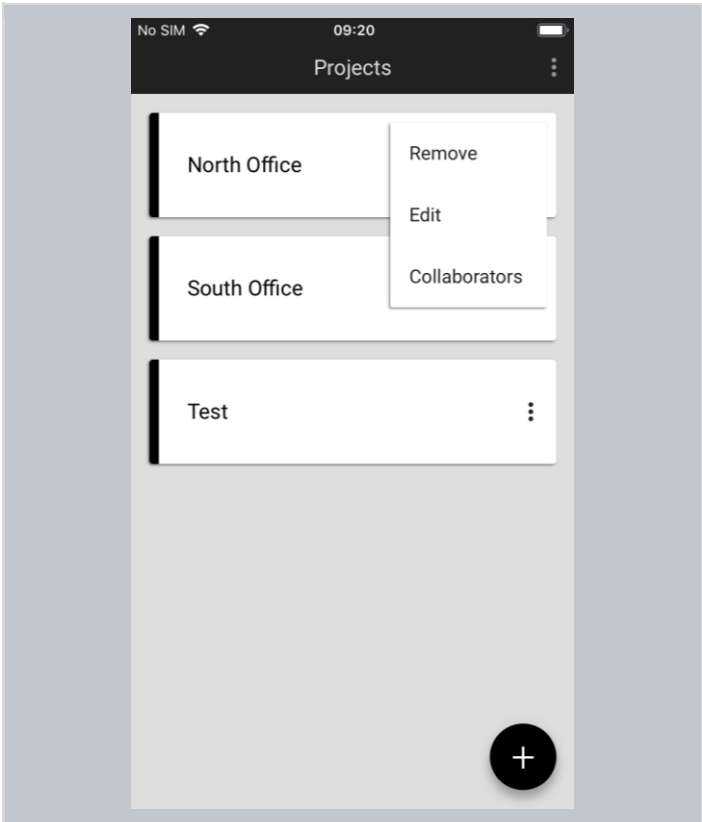

- Go to the projects list.
- From the menu , select **“REMOVE”**.




- In the confirmation popup, click **"REMOVE"**. To prevent accidental removal of the project, the button will be available after 3 seconds.
- The project will be removed and can no longer be accessed by any users collaborating on it.

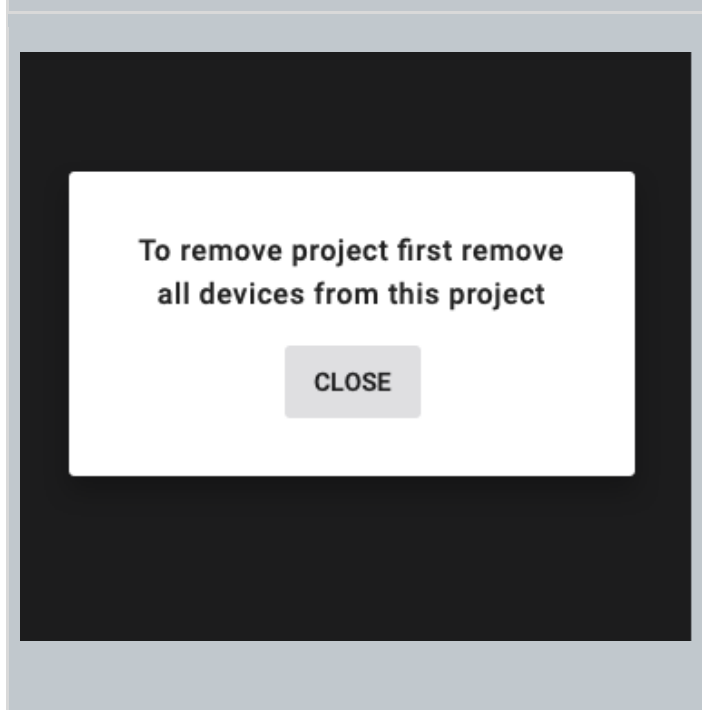


**Note:** You are not able to remove a project with active devices. Before doing it you need to remove all devices.  
For more information on how to do that, go to the section "Remove device".


Invite & manage project collaborators

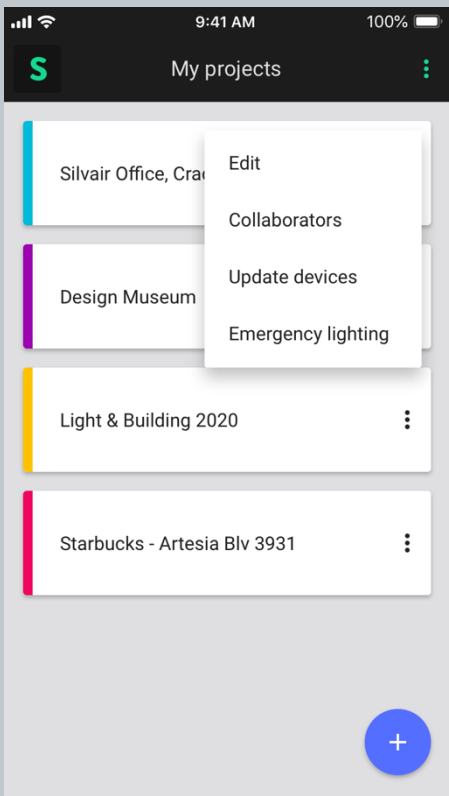


Multiple users can collaborate on a project by creating and editing the commissioning plan and, most importantly, in carrying out on-site commissioning thereby shortening the most critical part of the whole project.


Currently, there are 4 user roles supported in the commissioning apps: owner, manager end user and installer. To get more information about specific roles, click [here](#).

Click context menu icon  of the selected project and click on "**COLLABORATORS**".

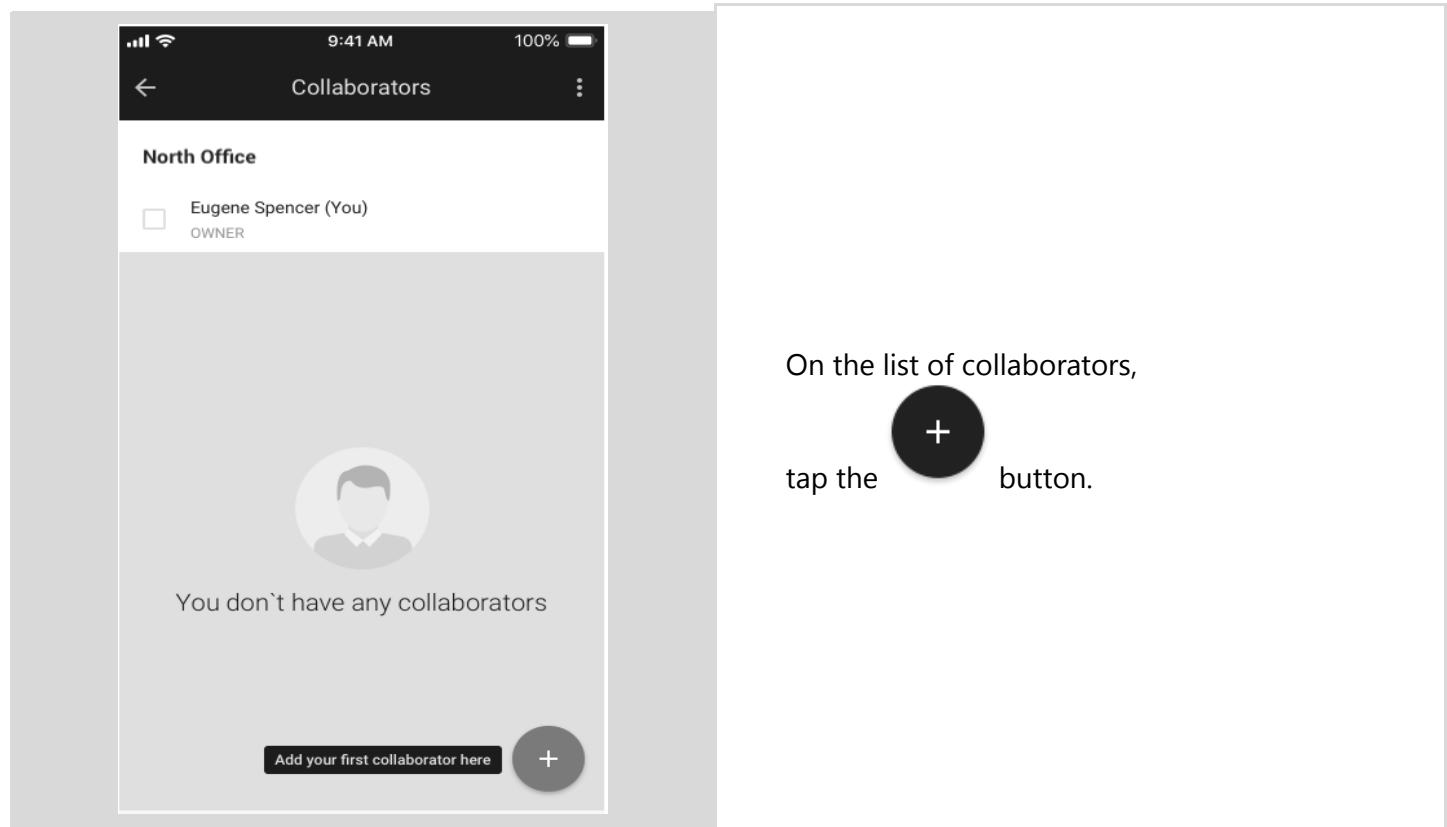

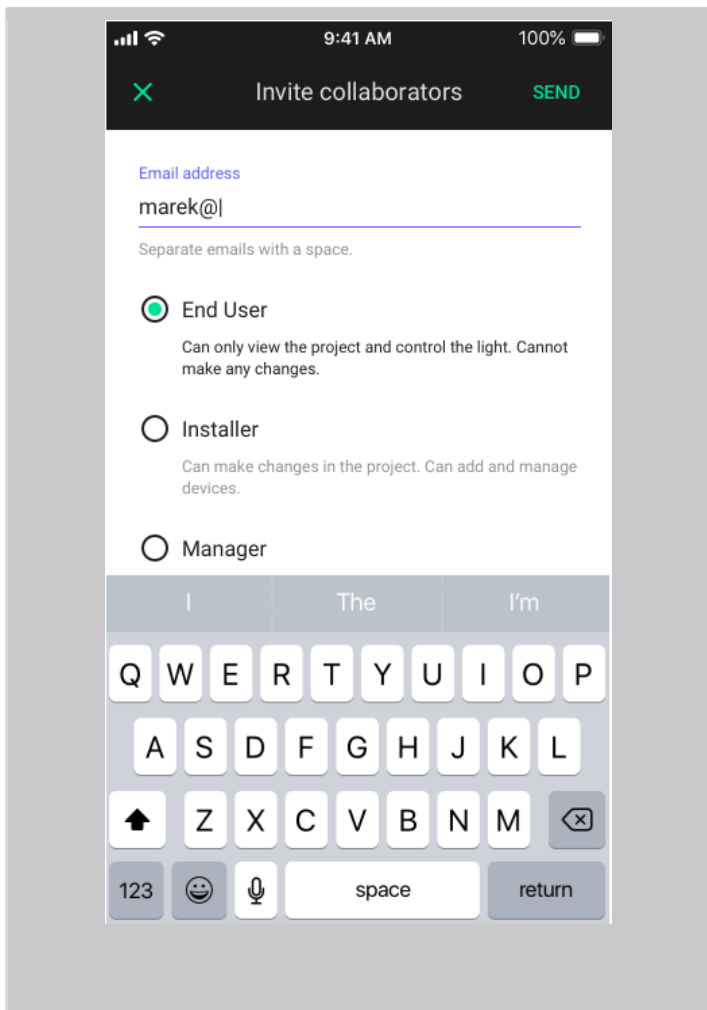

- Enter one or more email addresses to invite collaborators and share access to the project.
- Read more about user role permissions [here](#).
- Select the level of access for the user you're inviting by opening the dropdown list from "Invite as" tab.
  - End user is the default selection for a newly invited user. It can be changed by tapping installer, or manager below.
  - If you're an owner, or a manager of the project, you can select a new user to be: manager, installer or end user.
  - If you're an installer, or end user in the project, you do not have access to invite collaborators view at all.

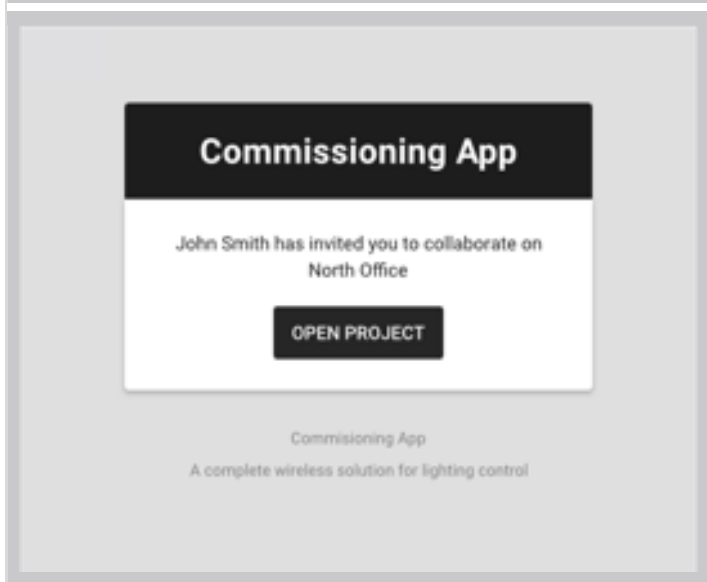

- All users invited to collaborate will receive an invitation email with a link to the shared project.
- Accessing the project requires the user to have a registered Fulham web app account. Anyone without an account will be labelled with "**Pending invitation**" on the list of collaborators.

☐ Eugene Spencer (You)  
OWNER

☐ Zoe Miller  
INSTALLER


☐ Mark Spinner  
INSTALLER

☐ mark.zukenberg@fulham.com  
INSTALLER (PENDING INVITATION)

Change role

Revoke access

## Change or transfer user role

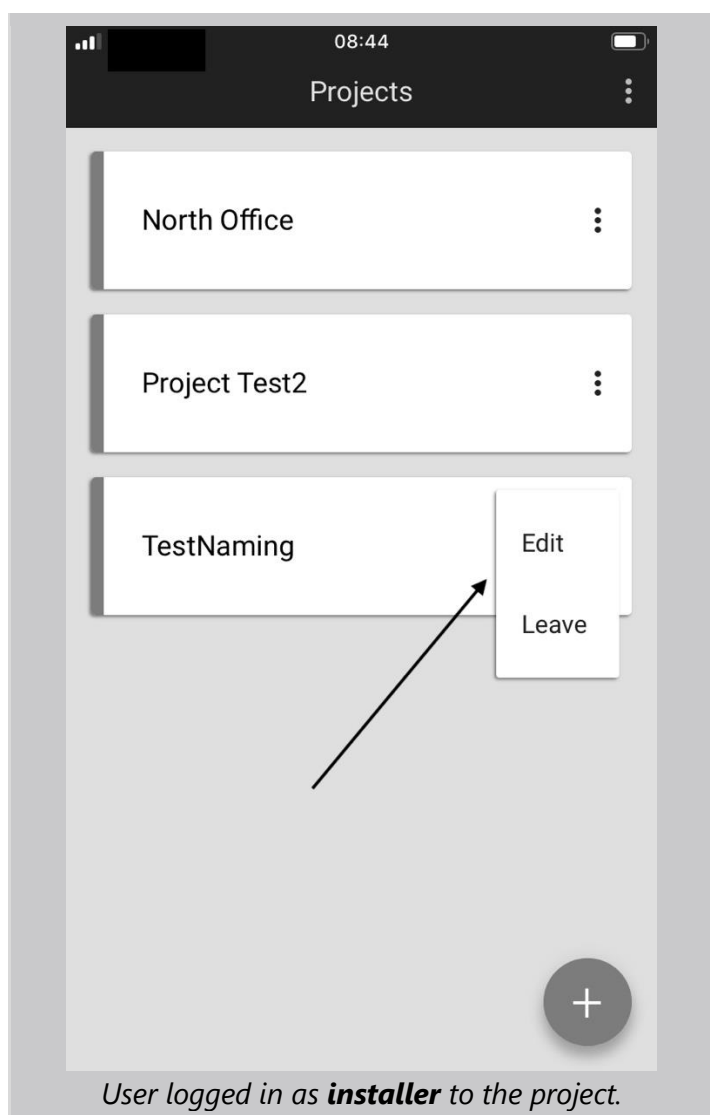

### Change user role:

The app allows to change the role of another project collaborator in the mobile app. This is possible only if there's more than one collaborator added to the project.


Changing roles is possible only for the following user roles:

- Owner
- Manager

### NOTE:

- Installer or end user do not have access to the collaborators view.
- When user is logged in as installer / end user, they can't even see the "Collaborators" button after pressing the project menu.
- They can only: edit project name or leave a project.



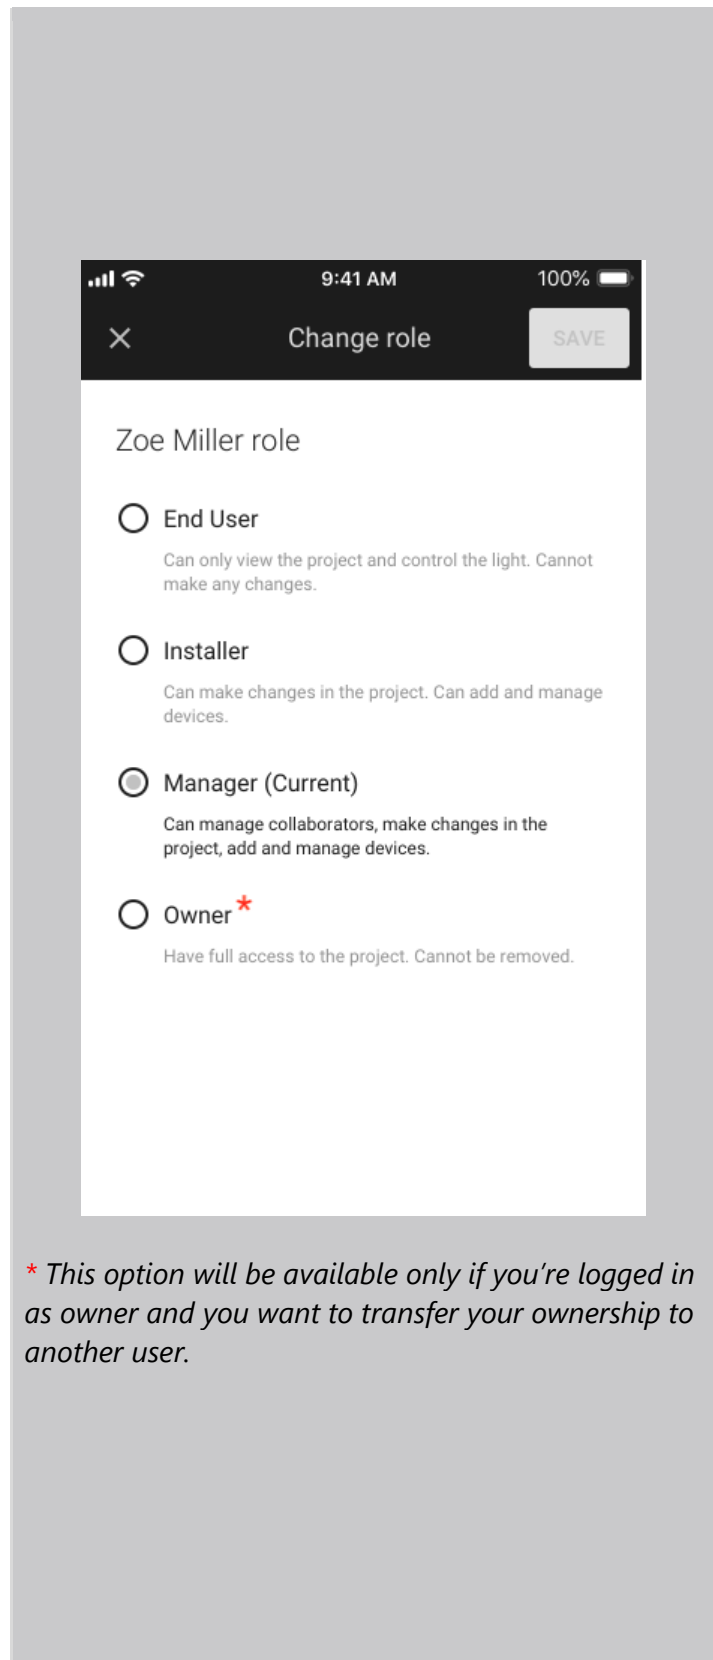


**Change user role:**


- To change the role (available only for owner / manager role), select the correct project on projects list and press "Collaborators" from the context menu



- Next, press the  button next to username and select "Change role".


**North Office**

- ☐ Eugene Spencer (You)  
OWNER
- ☐ Zoe Miller  
INSTALLER
- ☐ Mark Spinner  
INSTALLER

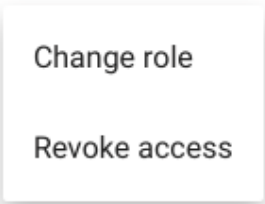

**Select the desired role:**

- Manager
  - Installer
  - Owner
  - End User
- 
- Confirm by pressing "Save". You'll see the confirmation: user role has changed.
  - It is also possible to change user roles in the web app.

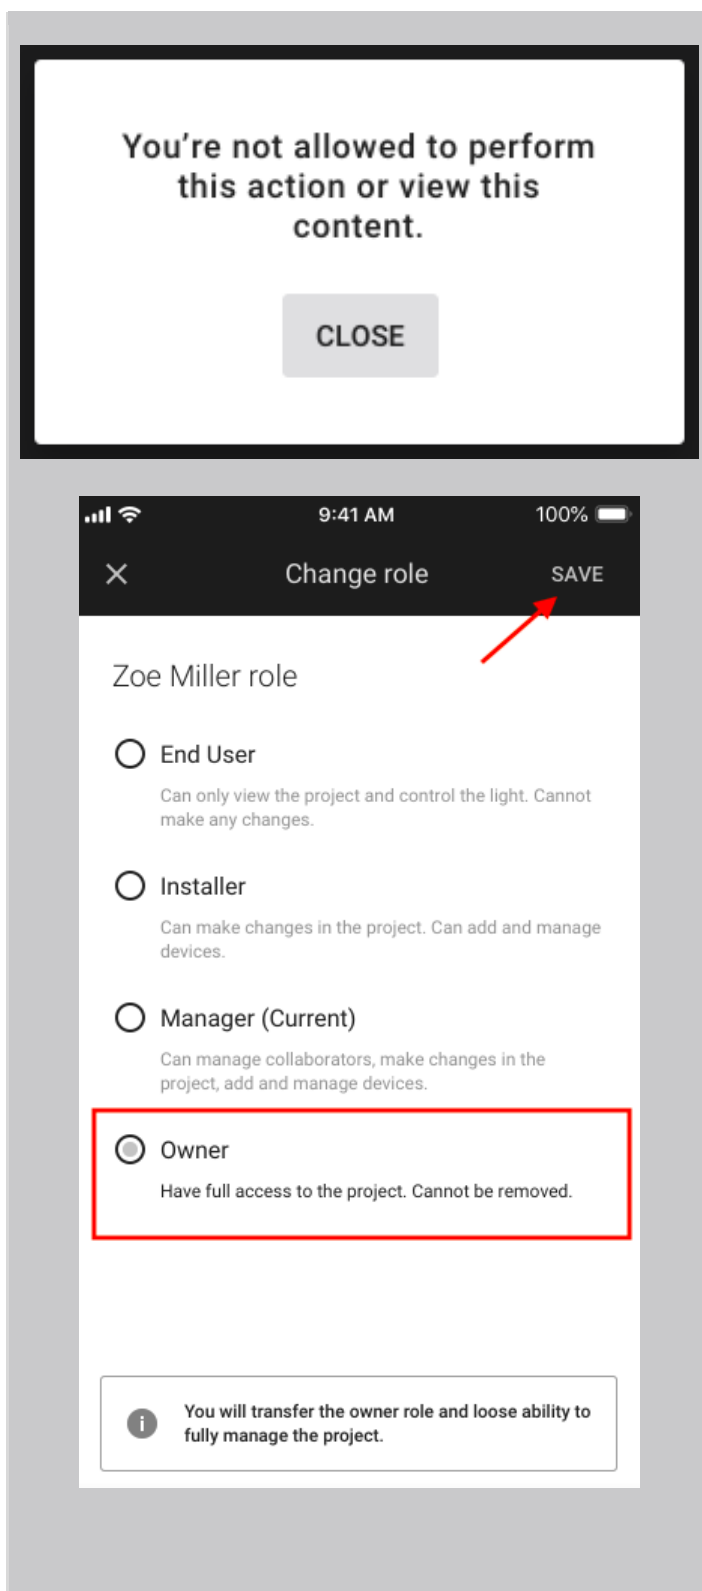




#### NOTE:

- If a collaborator's role was changed from manager / owner to an installer, or end user role, this user will no longer be able to see the collaborators view in the app.
- The alert on the left is shown to the user whose role has been changed to installer / end user immediately after changing their role.
- After closing the alert, they will no longer be able to see the collaborators list.


#### Transferring project ownership:


**NOTE:** This option is available only for "owner" users.

- If you're logged in as owner, you can transfer your project's ownership to another user.
- The new user who received the transfer will become a new owner. **The former owner of a project will no longer have access to the project.**
- To transfer the ownership:
  - Log into the mobile app as owner
  - Select the project
  - Click context menu icon  and select COLLABORATORS
  - Click again on the  button next to another username
  - Select "Change role"
  - Select "Owner" as a new role
  - Confirm by pressing SAVE button
  - You will see the below success message

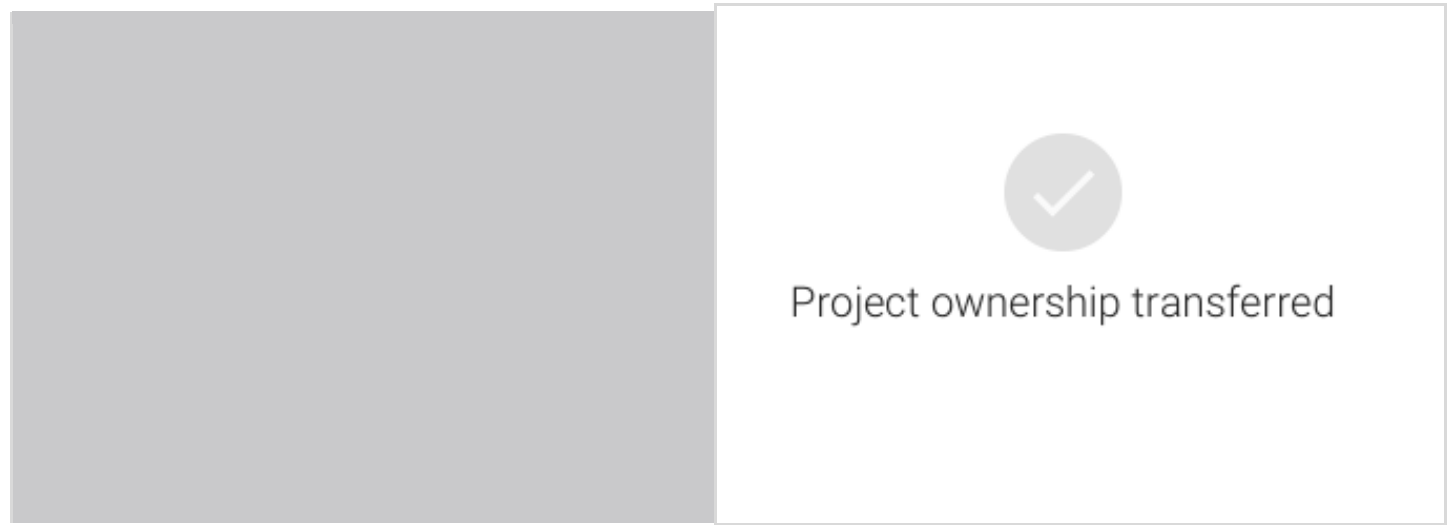

Revoke access to the project

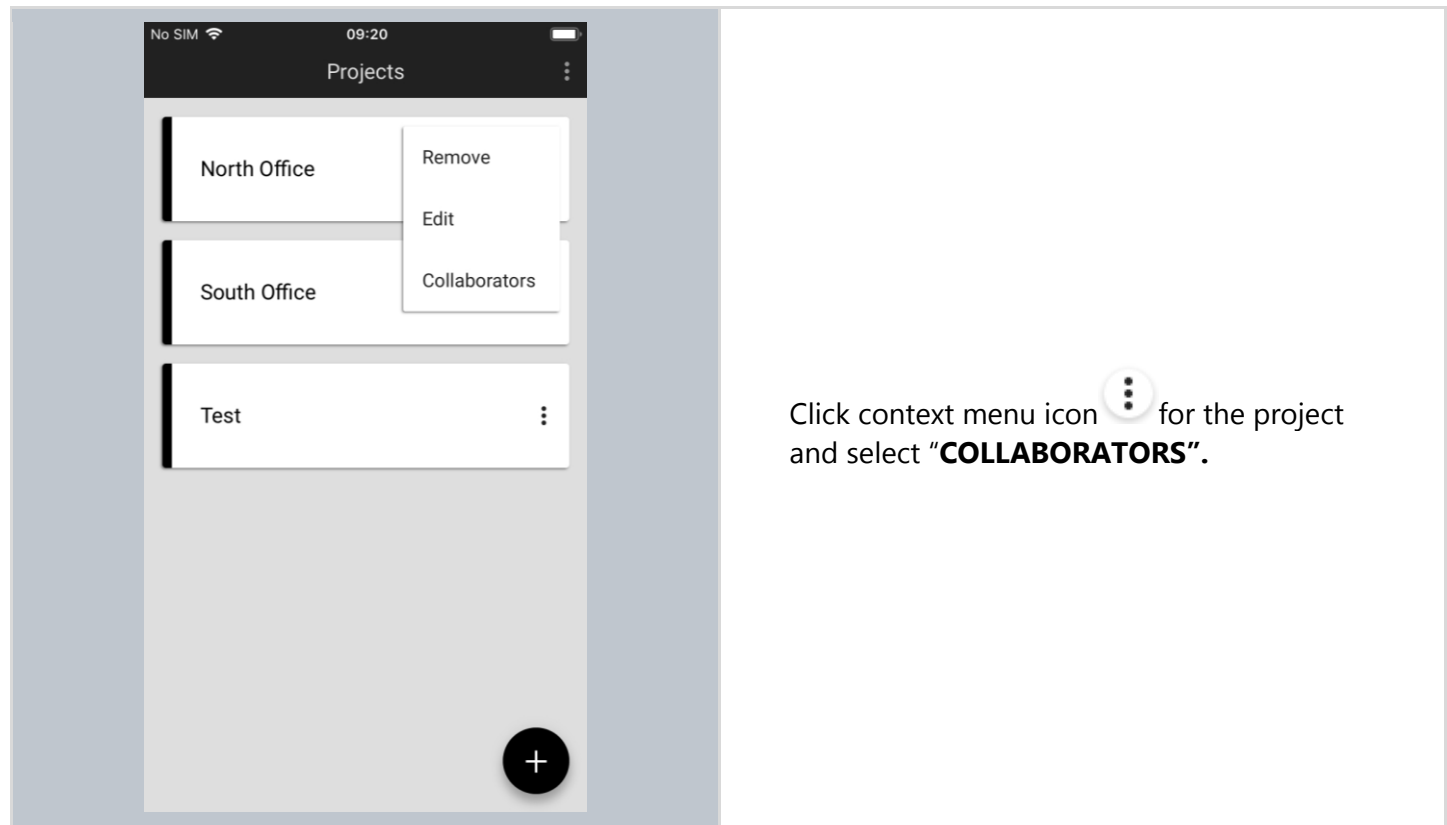

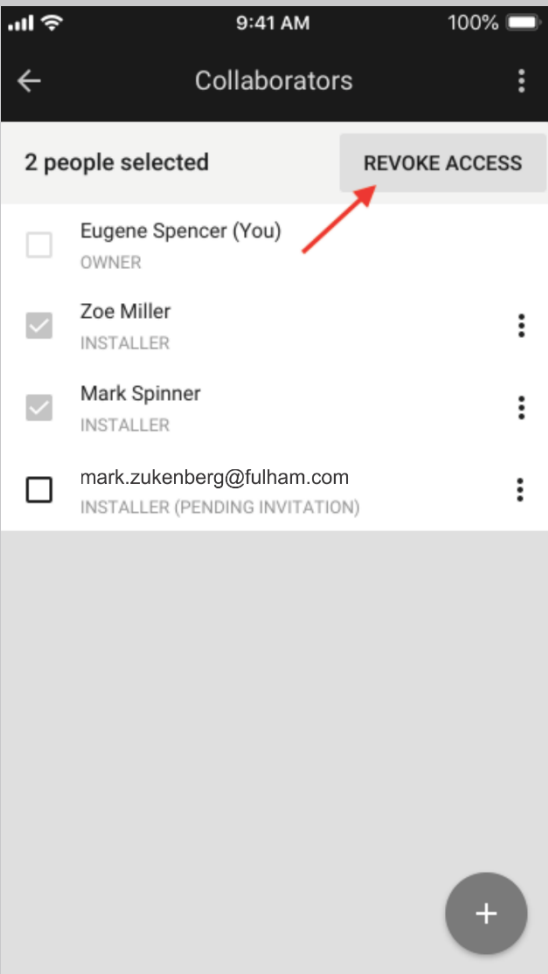

2 people selected


REVOKE ACCESS

- ☐ Eugene Spencer (You)  
OWNER
- ☒ Zoe Miller  
INSTALLER
- ☒ Mark Spinner  
INSTALLER
- ☐ mark.zukenberg@fulham.com  
INSTALLER (PENDING INVITATION)

+

Select one or more collaborators by clicking the checkbox.

Click **"REVOKE ACCESS"**.

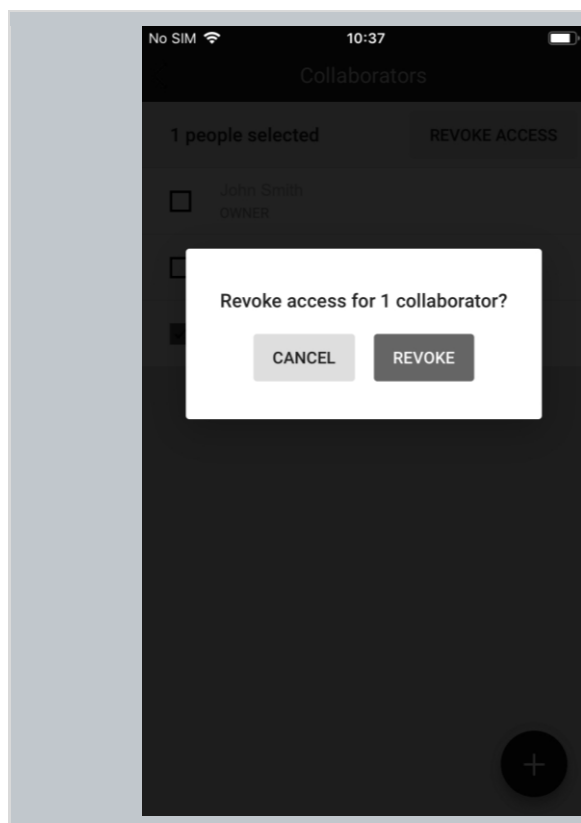


Confirm by clicking "**REVOKE**" on the popup window.




**NOTE:** Selected users will be removed from the project and will no longer have access to it from the web app and the mobile app.<sup>15</sup>


<sup>15</sup> Fulham prevents the last collaborator from being removed from the project as there must always be at least one user with access to the project. When the original owner is removed as a collaborator, ownership is automatically transferred to the next collaborator.

Create an area<sup>16</sup>

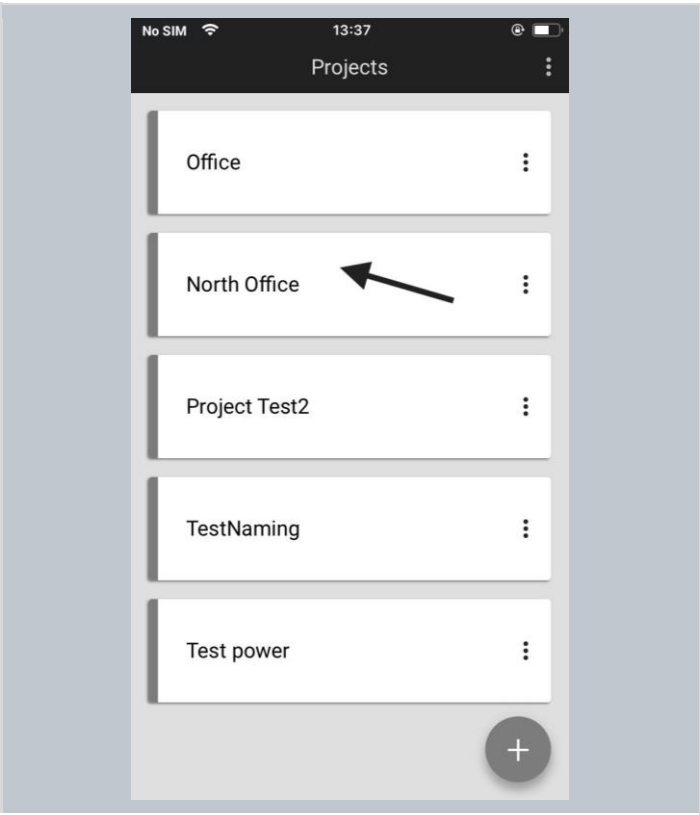


- Select the project from the list, tap it to open
- Tap the  button to add an area.

<sup>16</sup> Please note that currently it is not possible to upload a plan to a project using a mobile app - this can only be done via the [Fulham web app](http://www.fulham.com).

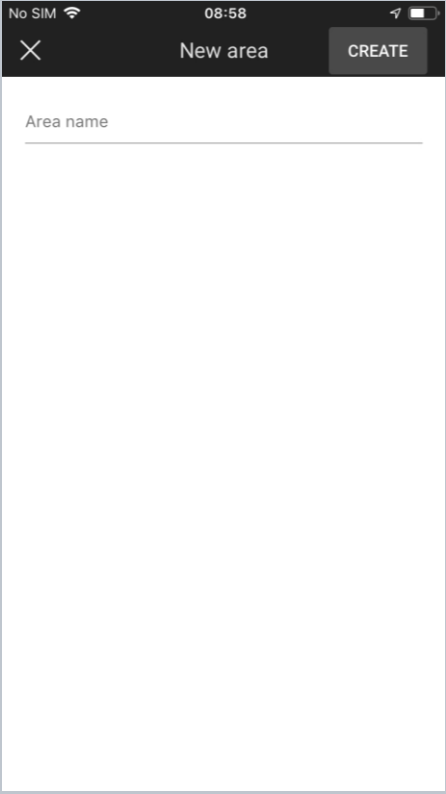


- Enter a name for the area and tap **"CREATE"**.
- An area will be created and displayed on the area list with an empty area plan image.

### Edit an area

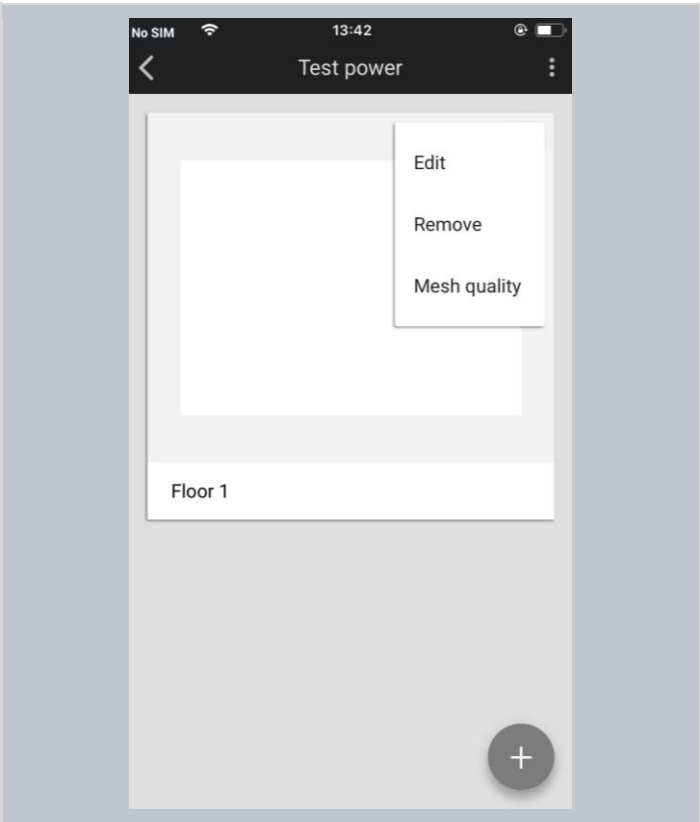


- Go to the area list.
- From the menu, choose “**EDIT**”.



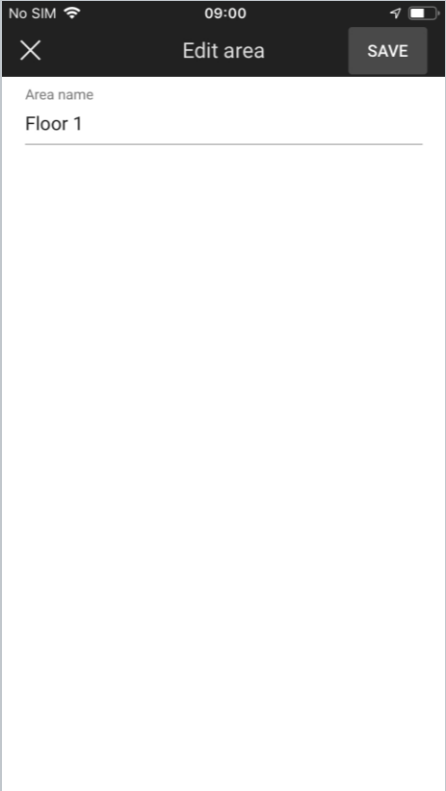


Change the area name and tap **"SAVE"**.

## Remove an area

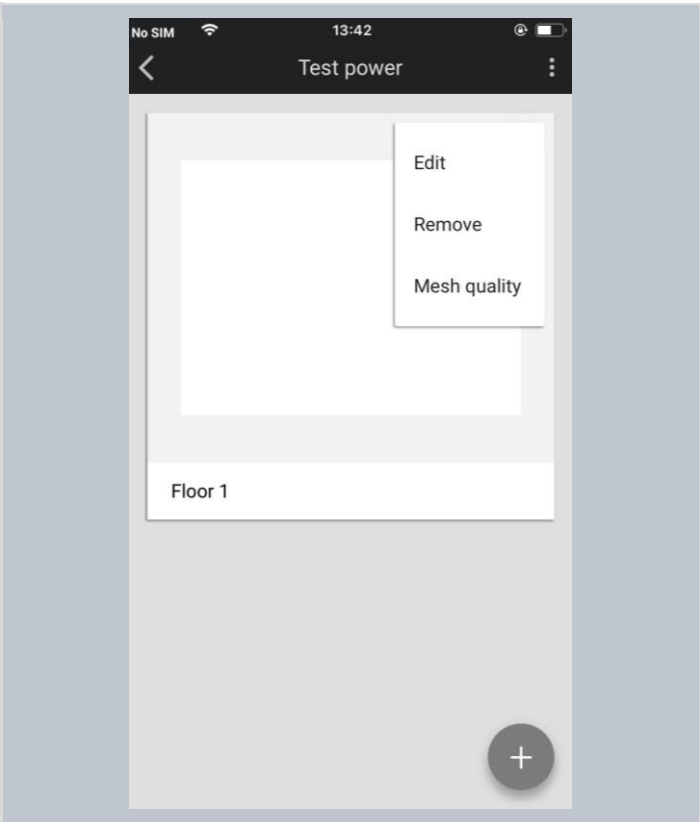

- Go to the project.
- From the menu, choose **“REMOVE”**.

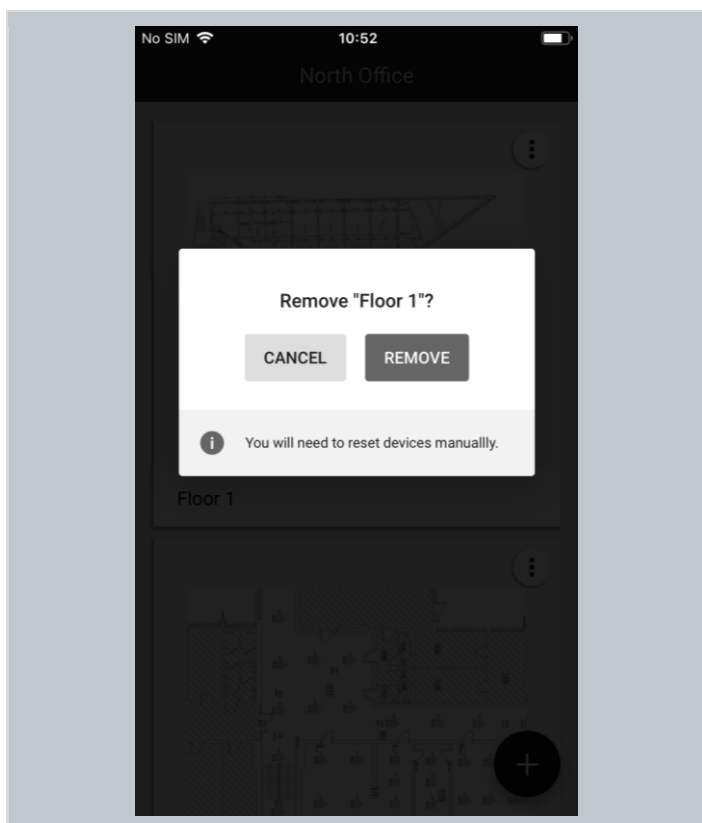


Confirm your decision by clicking **"REMOVE"** on the confirmation popup. In order to prevent accidental removal of the area, the button will be available after 3 seconds.

**NOTE:** You are not able to remove an area with active devices. Before doing it, you need to remove all devices.  
For more information on how to do that, go to the section "Remove device".




## Create a zone

The mobile app also allows users to create new zones on-the-fly.



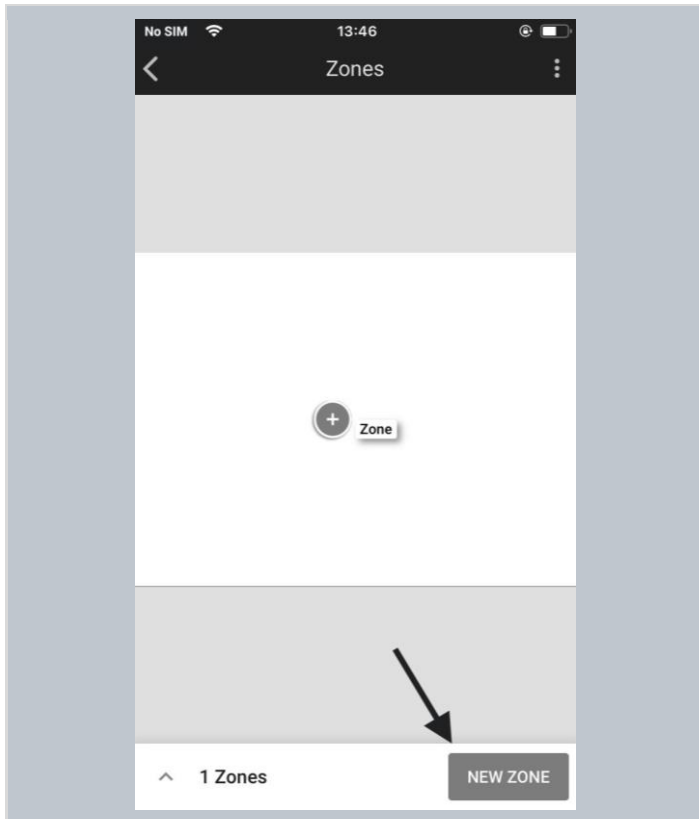


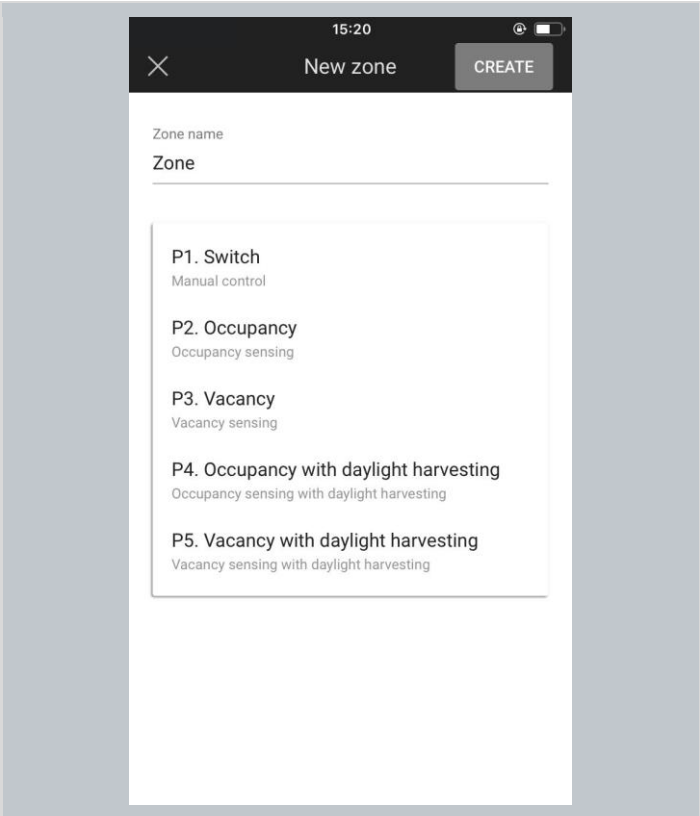

- Sign in into the mobile app.
- Navigate to the project and area where you want to create a new zone.
- Select "**NEW ZONE**".



- Enter a name for the zone and select one of the predefined profiles (see: [Profiles](#)).
- Tap **“CREATE”**.
- The new zone will be listed on the zones list.

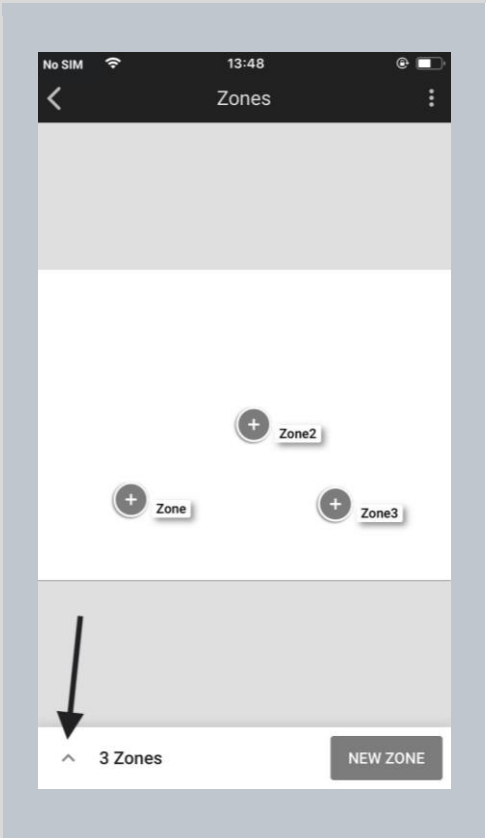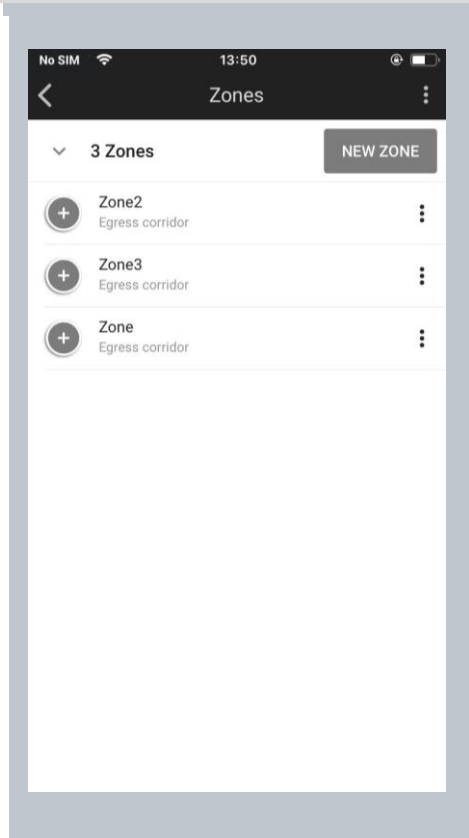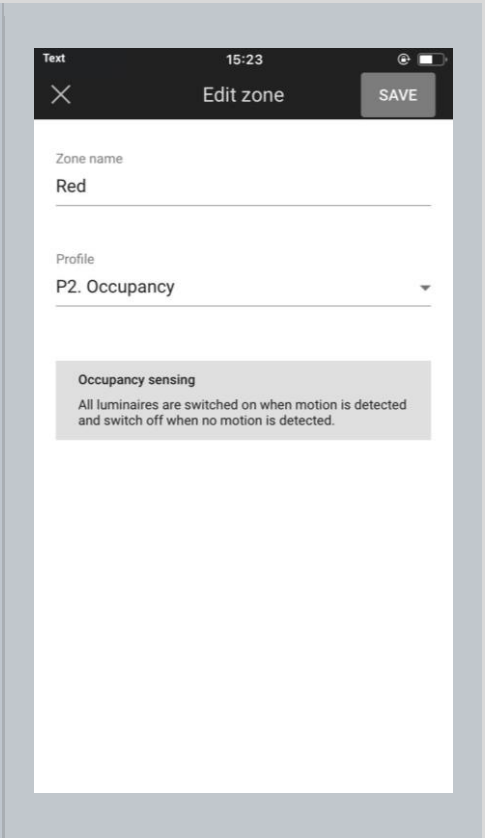Edit or remove zones

		
<p>Open the list view by tapping the element at the bottom of the screen with the number of zones, ("<b>3 Zones</b>" in this example).</p>	<ul style="list-style-type: none"><li>• Tap the  icon to display the context menu.</li><li>• From the menu, choose "EDIT" or "<b>REMOVE</b>".</li></ul>	<ul style="list-style-type: none"><li>• Editing the zone allows for changing its name or the assigned profile.</li></ul>

 **NOTE:** You are not able to remove a zone with active devices. Before doing it you need to remove all devices.


This is the last step of the ad hoc commissioning without using the Fulham web app.  
The next steps to make your lighting project work is [adding devices](#) to the newly created zones. Go back to chapter 3 Commissioning on-site to continue reading about [adding devices](#) and the following steps.

## 5. Gateway commissioning

The Fulham gateway is a mesh enabled product that enables mesh-devices to cloud communication. The feature set in current gateway offer is:

1. Scheduling
2. Energy & Occupancy monitoring (beta service)

Gateway can be added to the project with the Commissioning web app.

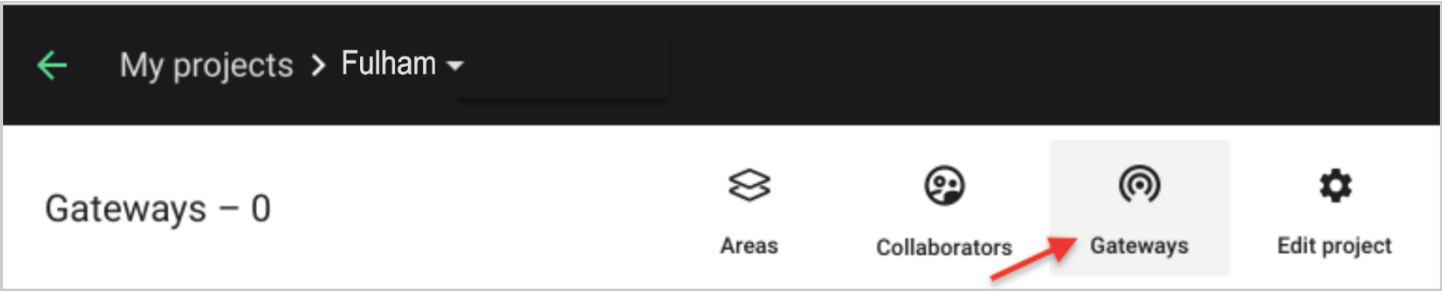

For more information about the Gateway, please go to the document: SGW-102 Gateway - set up and connection instructions.

## 6. Microgateway commissioning

### Required items

- Project version 202006+
- The Zone created using web or mobile app in the place where the microgateway is installed
- Remote gateway server needs to be installed and available by the microgateway in your network
- Network configuration needs to be provided by your network administrator



- Microgateway must be installed (connected to power) within the range of the mesh network



**HINT:** The microgateway doesn't need to be connected to the network via ethernet during adding and configuration. When it's done you may plug in the ethernet cable and the device will start working properly.

## Commissioning


### Adding microgateway to the project


The microgateway is a mesh enabled product that enables mesh to cloud communication and while being the regular mesh device first it needs to be added to the mesh network similarly to other devices.

Please follow the steps described in the first sections of the [3. Commissioning on-site](#) chapter of the user manual in order to add the microgateway devices to the network and appropriate zones.

### Providing IP configuration

When it's done there should be a microgateway available on the device list market with an error as the IP configuration is still required.

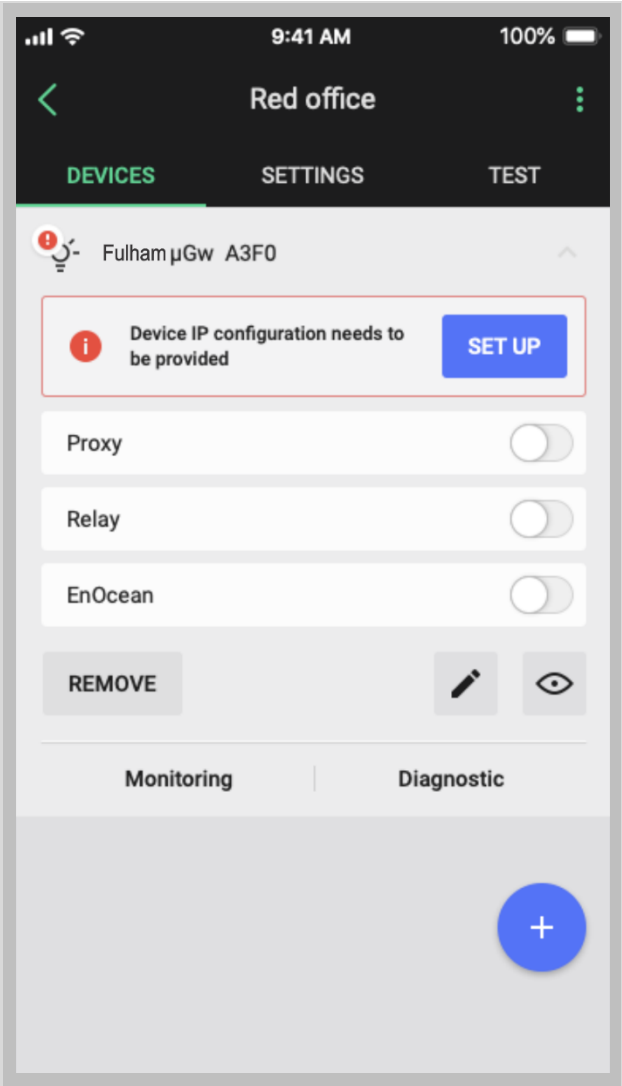

- Tap “**SET UP**” or edit device  button in the expandable device panel on the list of devices to configure the IP settings.

The screenshot shows the 'Edit device' screen of the Fulham eliteBlue Commissioning app. At the top, there is a status bar with signal strength, time (9:41 AM), and battery level (100%). Below the status bar, there is a header with a green 'X' button, the text 'Edit device', and a green 'SAVE' button. The main content area contains several fields: 'Device name' with the value 'Fulham µGw A3F0', 'Server address' with the placeholder 'Hostname or IP address', 'Port number' with the placeholder 'e.g. 34', 'IP Settings' with three radio button options: 'Automatic (DHCP)' (selected), 'Automatic (DHCP) with static DNS', and 'Manual', 'MTU size (optional)' with the placeholder 'At least 68, maximum 1500', and 'Reconnect interval (optional)' with the placeholder 'At least 100, maximum 65535 milliseconds'.

- Provide the appropriate configuration for remote gateway server, network IP settings and an additional parameter (see section Microgateway configuration parameters below for details).
- Press “**SAVE**”

### Microgateway configuration parameters

#### Server address and Port number

You must enter "Server address" and "Port number" - the address of the remote gateway server with which the microgateway communicates. The server address can be entered as a hostname (e.g gateway.fulham.com) lub IP address (e.g 192.168.0.1).

#### IP Settings

You can adjust the IP settings of the microgateway to your network by selecting the following options and providing related parameters:

- **Automatic (DHCP)** - automatic IP configuration via DHCP, no additional parameters required
- **Automatic (DHCP) with static DNS**
  - DNS server address required
- **Manual**
  - IP address of the microgateway on the network
  - Subnet mask
  - Default network gateway address

- DNS server address




**HINT:** Please contact the building network administrator to provide the appropriate configuration.

**Optional and advanced network settings available:**

- **MTU** - Maximum Transmission Unit
- **Reconnect interval**

## 7. Commissioning status & troubleshooting

### Check commissioning status

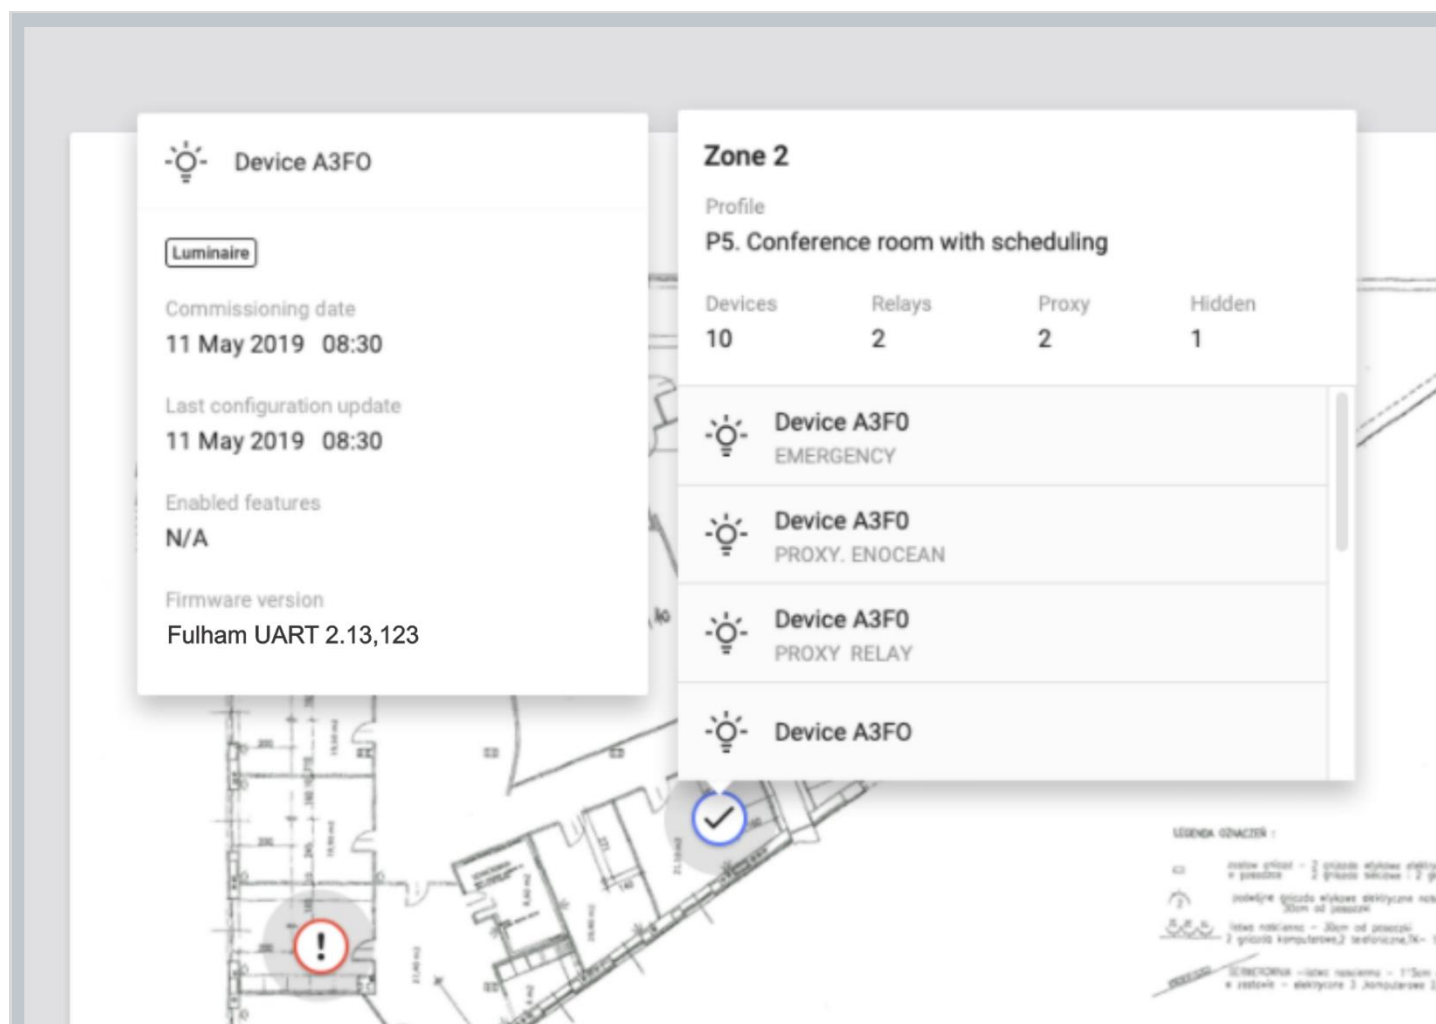

The status of commissioning can be checked at any time using the Fulham eliteBlue web application which displays the status of each zone (see: [Zones](#)), as well as a summary for each zone that contains:

- Name of the Profile assigned to the Zone
- Scenario that the profile is based on
- Alerts (when available) including errors and warnings in the zone if
- Devices - number of mesh devices added to the zone
- Relays - number of devices with the Relay feature enabled in the zone
- Proxy - number of devices with the Proxy function enabled in the zone

- List of devices with function label added to the zone:
  - PROXY - the device with mobile device proxy function enabled
  - RELAY - the device with relay function enabled
  - ENOCEAN - the device with EnOcean adapter function enabled
  - ALS - the light sensor device selected as leading sensor controlling the zone
  - Emergency - the device with emergency lighting function

**HINT:** Zone details can be opened with CMD + left click shortcut on Mac OS or CTRL + left click on other systems.

The screenshot displays the 'Zone 2' configuration window. On the left, a panel for 'Device A3F0' (Luminaire) shows commissioning details: date (11 May 2019 08:30), last configuration update (11 May 2019 08:30), enabled features (N/A), and firmware version (Fulham UART 2.13,123). The main area shows the 'Profile' as 'P5. Conference room with scheduling' and the 'Scenario' as 'Vacancy with daylight harvesting'. Below this is a table of device counts:

Devices	Relays	Proxy
10	2	0


At the bottom, a list of devices is shown, each with a light icon and a label:

- Device A3F0 EMERGENCY
- Device A3F0 PROXY. ENOCEAN
- Device A3F0 PROXY RELAY
- Device A3F0

### Device details

After clicking on the device's name the information about the device's details will be displayed. It contains:


- **Device function:**
  - Luminaire
  - Occupancy sensor
  - Light sensor
  - Emergency
- **Commissioning date** - the date when the device has been added to the zone
- **Last configuration update** - the date of the last device configuration
- **Enabled features** - The list of the features enabled in a device
  - N/A - none of the following features are enabled
  - Proxy
  - Relay
  - EnOcean
  - ALS
- **EnOcean key** - the key of the EnOcean bluetooth switch paired with the device
- **Firmware version** - the current firmware version in the device
- **Alerts** (see the section below)

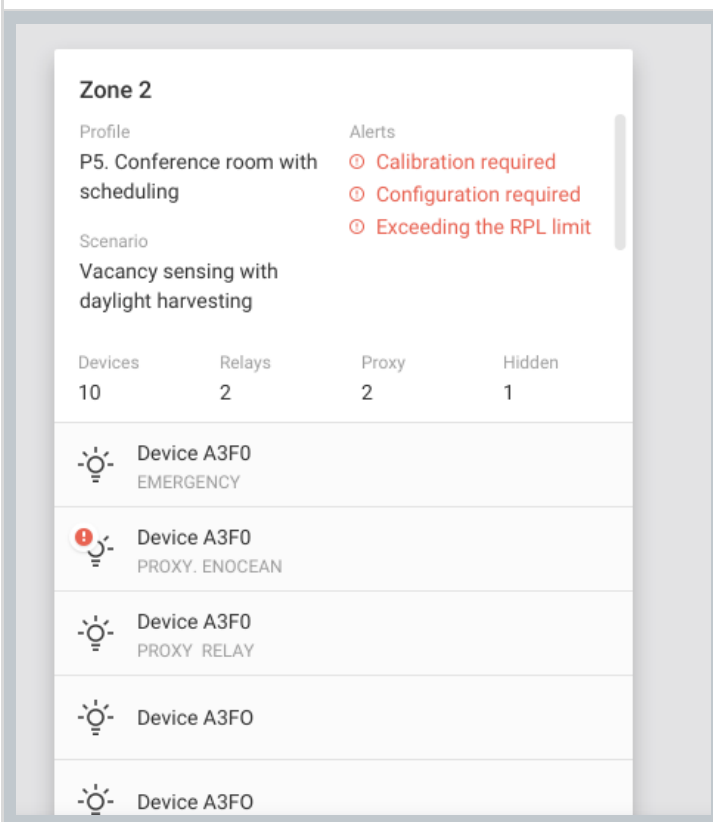

### Zone alerts

There might be displayed the list of alerts in red on the right side. It means that an action is required from the user's side.

You can find more details in [Commissioning alerts](#) section.

 Device A3F0

Luminaire

Light sensor

Occupancy sensor

Commissioning date  
11 May 2019 08:30

Last configuration update  
11 May 2019 08:30

Enabled features  
Proxy, Relay, EnOcean

EnOcean key  
0x0CFFDA03621100000236452CC0

Firmware version  
Fulham UART 2.13,123

Alerts

- ⓘ Some features are not supported by the device and may not work as expected.
- ⓘ Risk of exceeding the RPL limit. Please check User manual.

### Device alerts


Alerts are displayed in red at the bottom of the list. It means that an action is required from the user's side. You can find more details in [Commissioning alerts](#) section.

## Commissioning alerts: errors and warnings


### Zone alerts

Zones are represented on the area floorplan with a circular icon which changes color depending on its status. When the zone has been commissioned but requires attention or action due to the error or warning, it's displayed in a warning state (exclamation point) in the web and mobile app. See [Zones](#) section for more information.



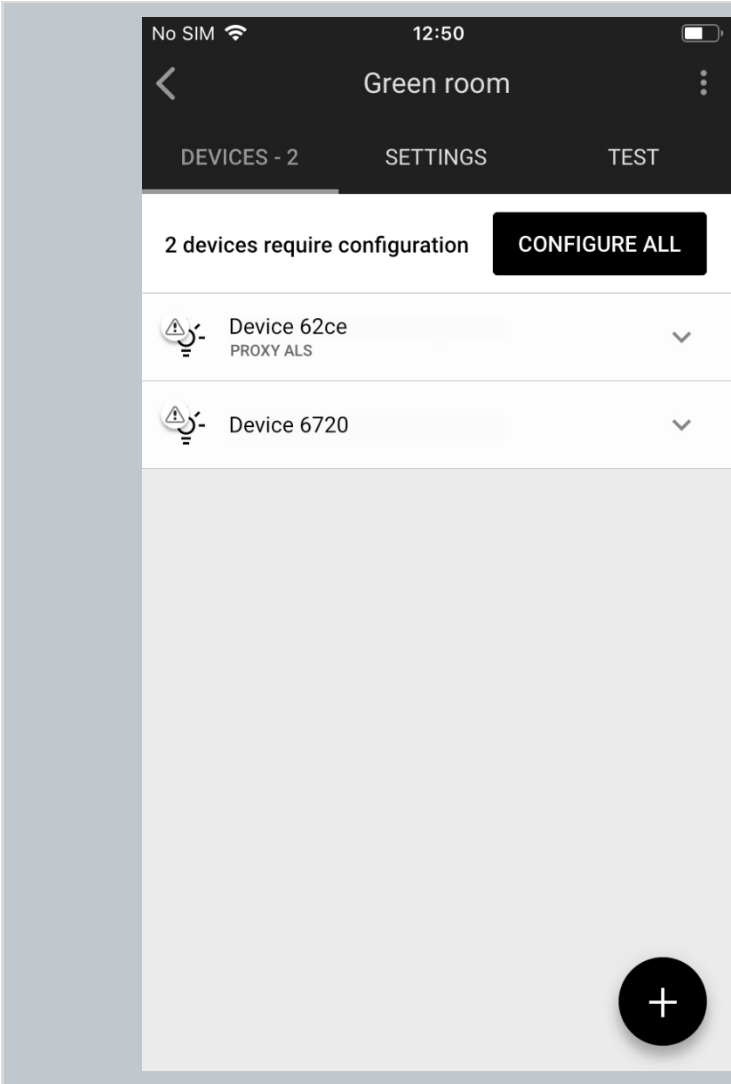

User can find the zone alerts at the top of the list of devices in the Devices list in the mobile app.

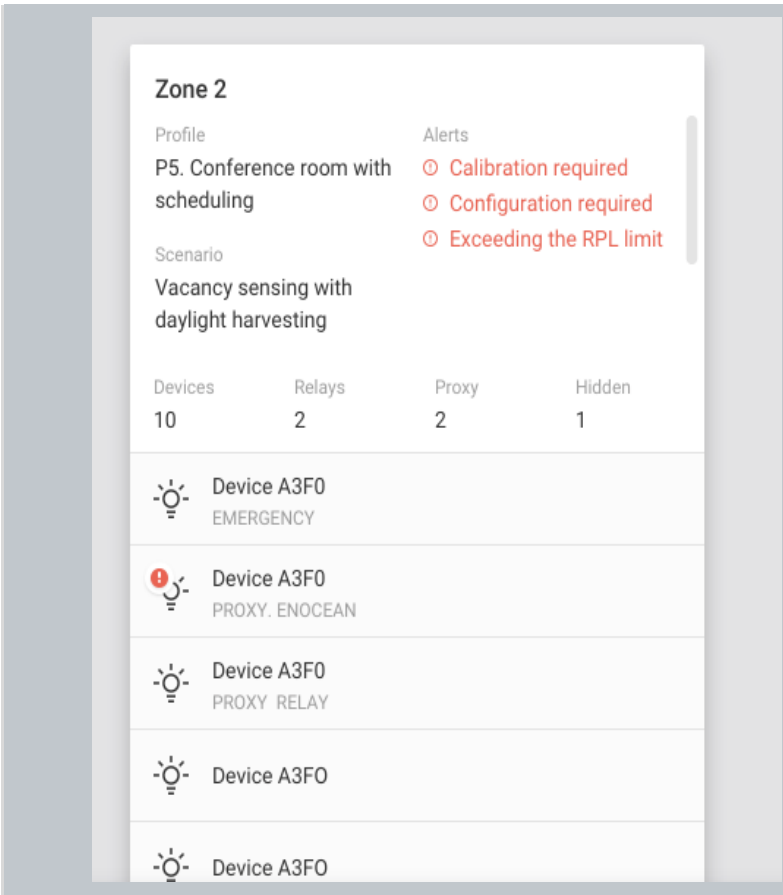


List of alerts is also displayed in the Zone details section in Fulham web application.

Please follow the information listed in the table below when zone alerts has been raised:


Alert	Possible causes	Solution
"Calibration required"	<ul style="list-style-type: none"> <li>The daylight control in the zone has not been calibrated yet or there is no light sensor selected to control the light in the zone (e.g. the previously selected light sensor has been removed from the zone).</li> </ul>	<p>If the zone has a Daylight harvesting scenario based profile selected follow <a href="#">Daylight harvesting calibration</a></p> <p>If the zone has a Photocell scenario based profile selected follow <a href="#">Photocell calibration</a></p>
"Configuration required"	<ul style="list-style-type: none"> <li>There has been a connection error (e.g. Internet problems)</li> <li>User has accidentally interrupted devices configuration (e.g. an iOS device powers off)</li> </ul>	<p>User has to configure the device manually using the mobile app, follow <a href="#">Configure all devices in a zone</a> to see how to do that.</p>

	<ul style="list-style-type: none"> <li>User made changes in zone's settings (e.g. changing profile, changing scenario settings, adding/editing zone linking).</li> </ul>	
<i>"Scenes configuration required"</i>	<ul style="list-style-type: none"> <li>Scenes in the zones were not configured correctly or scened configuration has been interrupted</li> <li>Additional device has been added to the zone</li> </ul>	User has to configure scenes, follow <a href="#">Scenes setup</a> to see how to do that.
<i>"Risk of exceeding the RPL limit"</i>	<p>The user may be affected by RPL (Replay Protection List) error when there is a risk that RPL limit may be exceeded. It might show up when:</p> <ul style="list-style-type: none"> <li>Adding device to the zone (a luminaire, a sensor or a switch)</li> <li>Configuring a device (due to changed scenario, or changed zone linking)</li> <li>Entering the project using the newly added mobile app</li> </ul>	User should contact our support at <a href="mailto:supportcontrolsupport@fulham.com">supportcontrolsupport@fulham.com</a> to get full assistance and recommendations suited to your project

## Device alerts

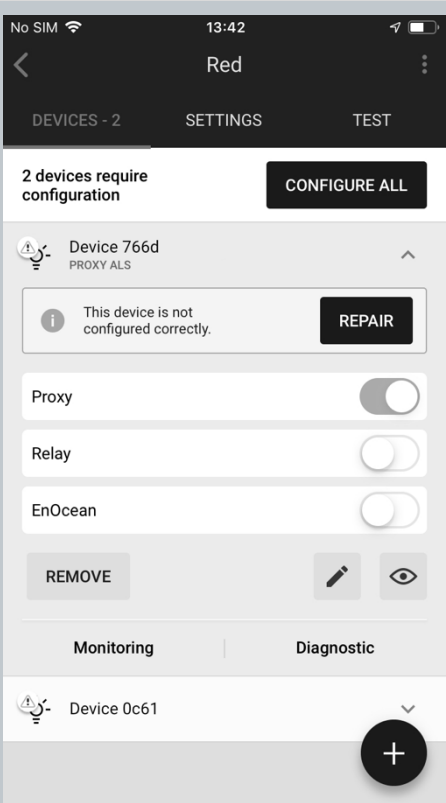

In some cases the device may encounter error or warning, e.g. when the device configuration process has been interrupted. The alert is then displayed in the app in the list of devices after the device element is expanded.

 Device A3FO

Luminaire

Light sensor

Occupancy sensor

Commissioning date  
11 May 2019 08:30

Last configuration update  
11 May 2019 08:30

Enabled features  
Proxy, Relay, EnOcean

EnOcean key  
0x0CFFDA03621100000236452CC0

Firmware version  
Fulham UART 2.13,123

Alerts

- ⓘ Some features are not supported by the device and may not work as expected.
- ⓘ Risk of exceeding the RPL limit. Please check User manual.

The user may find a list of alerts displayed in the device details section in Fulham web application.


Please follow the information listed in the table below when zone alerts has been raised:

Alert	Possible causes	Solution
<i>"Some features are not supported by the device and may not work as expected."</i>	The device may not fully support the features required by the control profile or the Fulham app and may not work as expected, e.g. some features have not been provided by the device manufacturer or the	Check if the device has the newest firmware installed. If not please consider updating the device firmware. Full information about OTA (Over-the-air) update and configuration details available in Knowledge base in Application Note "SN-208 Over-the-air Update in the Fulham mobile app".

	device firmware version is not up-to-date.	
<i>"Risk of exceeding the RPL limit. Please check User manual."</i>	<p>The user may be affected by RPL (Replay Protection List) error when there is a risk that RPL limit may be exceeded. It might show up when:</p> <ul style="list-style-type: none"> <li>• Adding device to the zone (a luminaire, a sensor or a switch)</li> <li>• Configuring a device (due to changed scenario, or changed zone linking)</li> <li>• Entering the project using the newly added mobile app</li> </ul>	User should contact our support at <a href="mailto:controlssupport@fulham.com">controlssupport@fulham.com</a> to get full assistance and recommendations suited to your project
<i>"This device is not configured correctly."</i>	The configuration of the device might have failed or was cancelled by the user.	The device configuration needs to be repaired, follow <a href="#">Repair device</a> to see how to do that.
<i>"The scenes on this device are not configured correctly."</i>	The configuration of the scenes might have failed.	User has to configure scenes, follow <a href="#">Scenes setup</a> to see how to do that.

## Send diagnostic report

In the event of any unexpected behavior when commissioning devices, you can send the application logs to Fulham for further analysis.

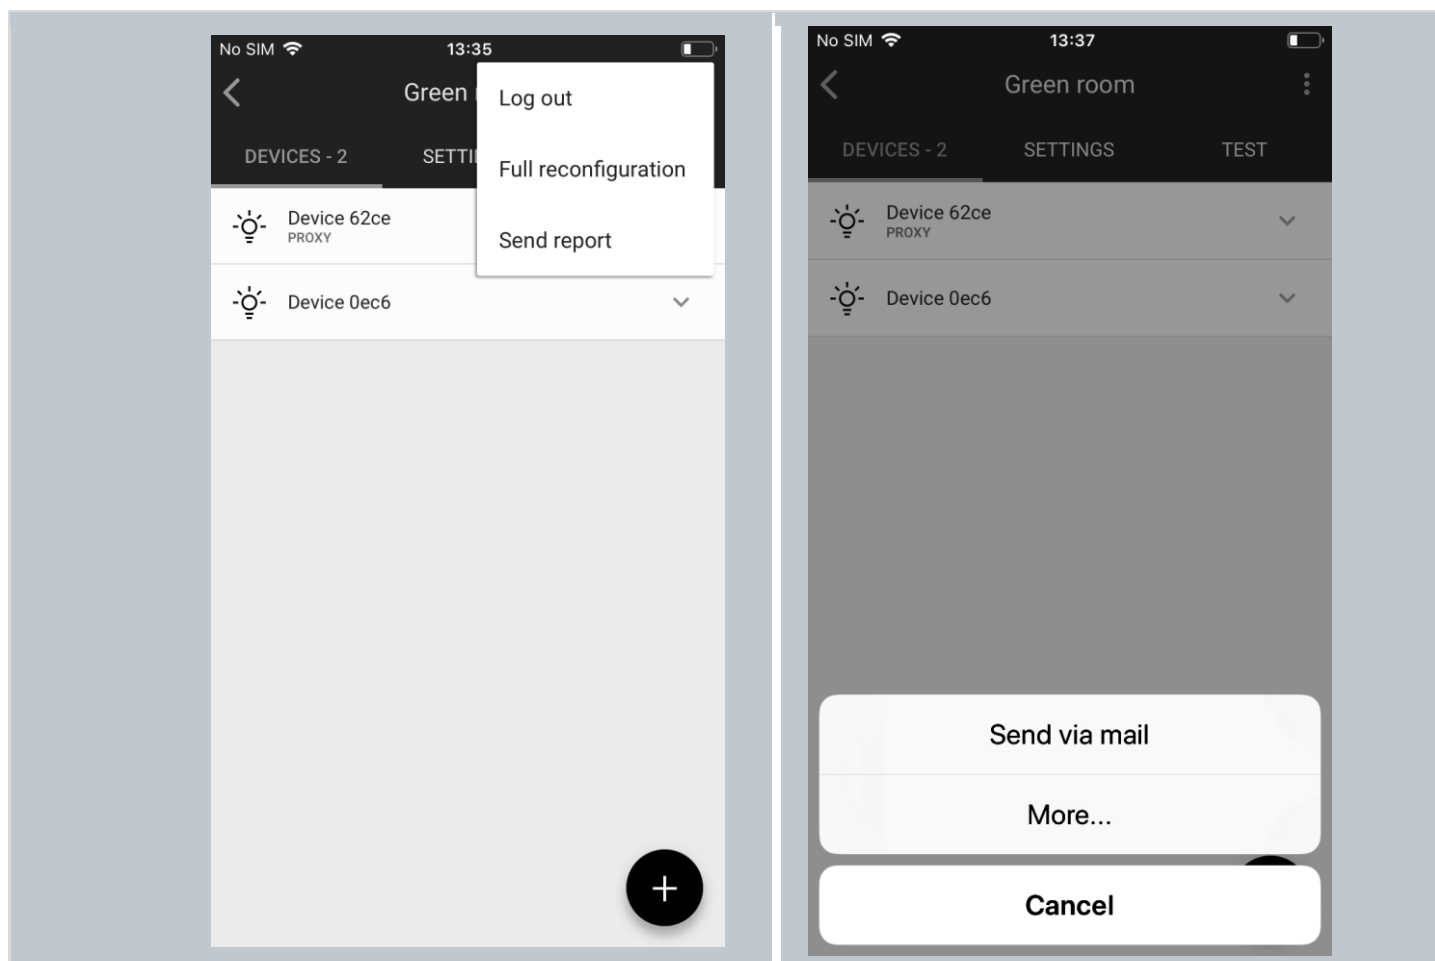

1. In the upper right corner, select **Send report** from the menu.
2. Choose how the logs will be sent (by email is the default).
3. Briefly describe the problem (optional, but it helps).
4. Send the report.

## Commissioning report

The report can be downloaded in the HTML format and includes key details of the current state of the project.

The report contains of 7 sections:

### Section 1.: Project summary

- Details

A list of important terms:

---

<b>Commissioned on</b>	<p>Date from - the date when the first device was added to the project (the device may still not be in the project)</p> <p>Date to - the date when the last device was added to the project (the device may still not be in the project)</p> <p><i>Example: 20 February 2020 - 23 March 2020</i></p>
<b>Last Update</b>	<p>The date of the last change in the project. Changes in the Area, Zones, Devices added to the project or configuration does not affect this date.</p> <p><i>Example: 11 May 2020 10:12</i></p>
<b>Mesh devices</b>	<p>The number of mesh devices added to the project</p>
<b>EnOcean switches</b>	<p>The number of EnOcean switches added to the project (number of unique EnOcean keys)</p>

- Mesh devices



A list of important terms:

---


<b>Luminaires</b>	Number of devices categorized as luminaire (controller)
<b>Occupancy sensors</b>	Number of devices categorized as Occupancy sensor (sensor model with the right property id)
<b>Light sensors</b>	Number of devices categorized as light sensor (sensor model with the right property id)
<b>Emergency devices</b>	Number of devices categorized as Emergency device (Emergency lighting model)
<b>EnOcean adapters</b>	Number of devices with the EnOcean feature enabled (EnOcean switch paired, key assigned)
<b>Proxies</b>	Number of devices with the Proxy feature enabled
<b>Relays</b>	Number of devices with the Relay feature enabled
<b>ALS</b>	Number of the light sensor devices selected as leading sensors controlling the zone

- List of areas with basic details about them

## Section 2.: Areas summary

- Floorplan image

## Area: First floor

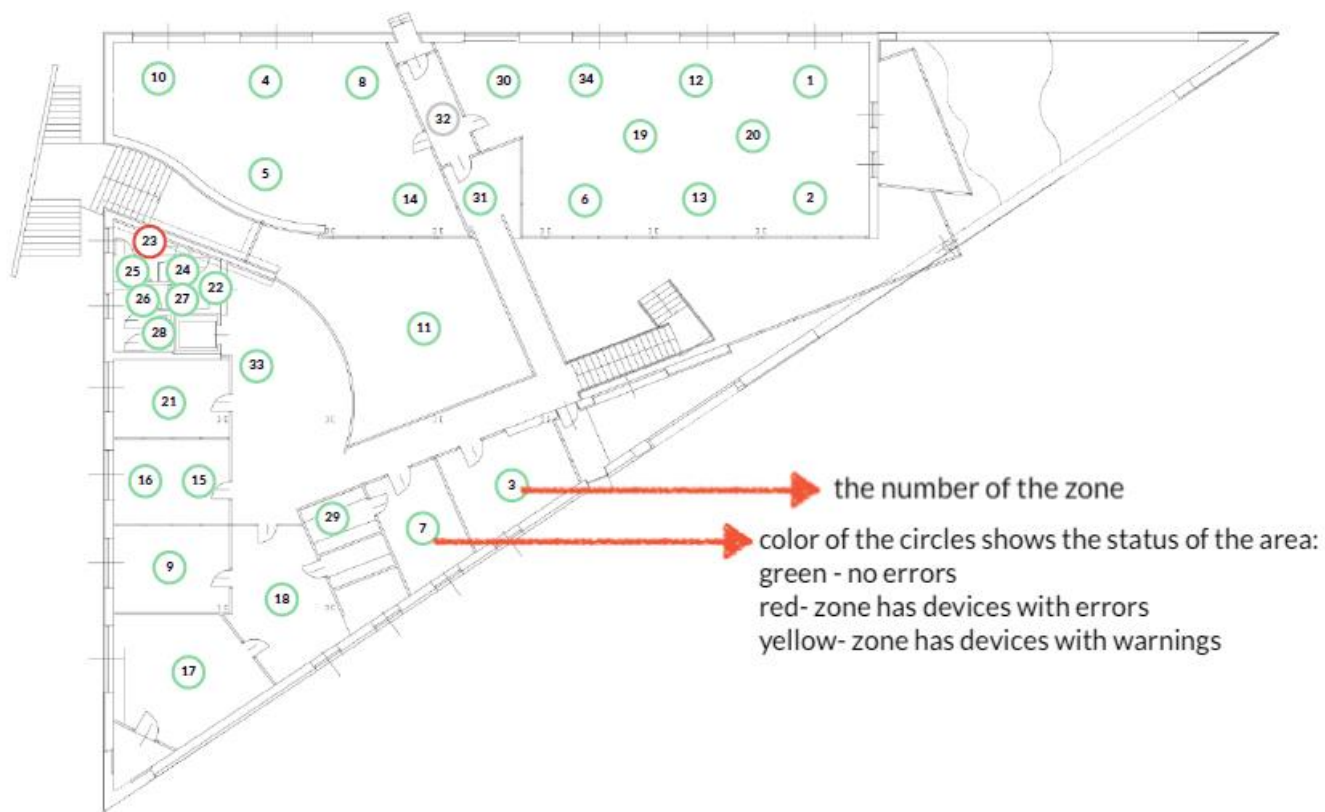

**HINT:** Press the circle with the zone number to move to the section with details of the selected zone.

- Details
- Summary of mesh devices in area
- List of zones with basic details

**NOTE:** Indexes of zones, profiles may vary (not be consistent) between the reports. E.g. if you download the report again after deleting one zone, the numbering of the other zones will change accordingly.

### Section 3: Zones summary

- Details
- Summary of mesh devices in zone
- List of devices with basic details
- EnOcean switches

### Section 4: Control profiles used in the project

A list of important terms:

---

<b>Scenario</b>	Name of the scenario used in the profile
<b>Devices</b>	Number of devices in the zones with the profile assigned
<b>Zones</b>	Number of the zones with the profile assigned
<b>Settings</b>	Array of parameters used in the scenario
<b>Scenes</b>	Scene A and B settings

### Section 5: Scheduling summary

### Section 6: Zone linking summary

A list of important terms:

---


Zone name	Name of the zone with zone linking settings
Controlled by switches in zones	List of zones from which switches control this Zone.
Controlled by occupancy sensors in zones	List of zones from which sensors control this Zone.

Section 7: List of collaborators in the project

Downloading the commissioning report

User can download the commissioning report using the web application.

- 1. Select the project for which you want to download the report.
- 2. Tap the **Report** button.

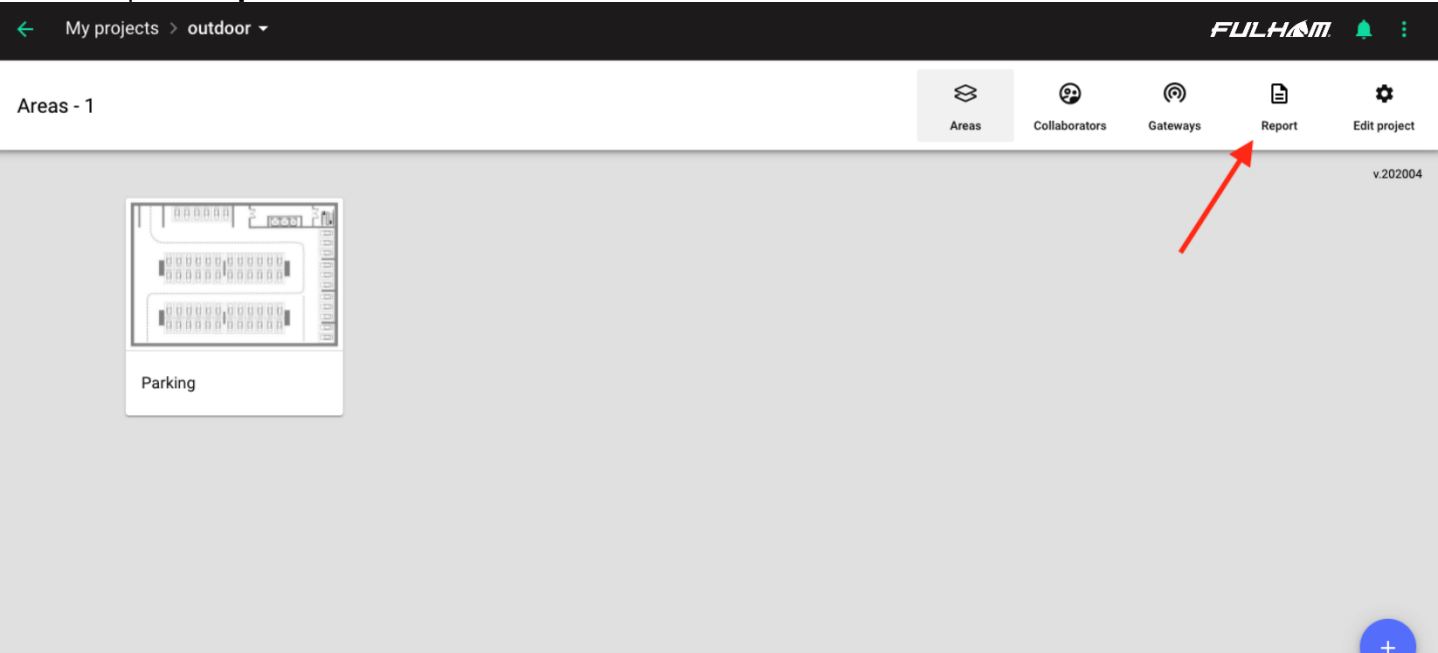

- 3. Confirm by pressing the **DOWNLOAD** button.
- 4. The report will download in HTML file format.

## 8. Document Revisions

Rev	Date	Editor	Changes
1.9	27.05.2021	LR	Added the <a href="#">Document revisions</a> section, updated the Mesh quality test information, updated the commissioning reports information, added zone linking tab, and made general updates of the document.

## Contact Information

Support:

For more information please visit:  
Video tutorials can be found at:

Our offices:

**North America**

12705 S. Van Ness Avenue  
Hawthorne, CA 90250  
Tel: +1 323.599.5000  
Fax: +1 323.754.9060

---

**[controlssupport@fulham.com](mailto:controlssupport@fulham.com)**

**[www.fulham.com](http://www.fulham.com)**

**[www.fulham.com/videos/eliteble/](http://www.fulham.com/videos/eliteble/)**