

WH41-UNV-L

Instant Start Fluorescent Ballast

- Solid State Electronic Ballast
- Instant Start
- Universal Voltage: 120-277VAC $\pm 10\%$, 50/60Hz
- cUL Listed, Class P, RoHS

General Specifications

Input Voltage	120-277VAC $\pm 10\%$, 50/60Hz
Power Factor	High Power Factor
THD	< 10% @ Full Power
EMI / RFI Compliance	FCC Part 18-A
Sound Rating	" A "
Ballast Type	Instant Start
Voltage Transients	ANSI C82.11 - 1993 / C62.41
Min. Operating Temp	0°C (32°F)
Max. Case Temp	70°C (158°F)
Approvals Class	cUL Listed, Class "P", 1 Outdoor, RoHS Compliant
Warranty	5 Years from the date of manufacture when properly installed

This Ballast Will Operate The Following Lamp Types:

Lamp Type	Lamps Operated
CFQ/4P	1 or 2
CFTR/4P	1 or 2
T5	1 or 2
T6SL	1
T8	1 or 2
CFT/4P	1
FT/4P	1
T9CR	1
T5CR	1
T5HO	1
T10	1
T12	1
T12SL	1

* Please contact Fulham customer services for particular lamp/ballast specifications.

Wiring Diagram

Wire Color	Length (Inches)
Black	18" ± 1 "
White	18" ± 1 "
Red	36" ± 1 "
Yellow	36" ± 1 "

Wiring configurations vary depending on the lamp type. Please refer to Fulham's Wiring Diagram Finder in the link below:


• <https://www.fulham.com/contact-us/wiring-diagrams/>

Product Image



NOTE : This ballast case must be grounded

Mechanical Data

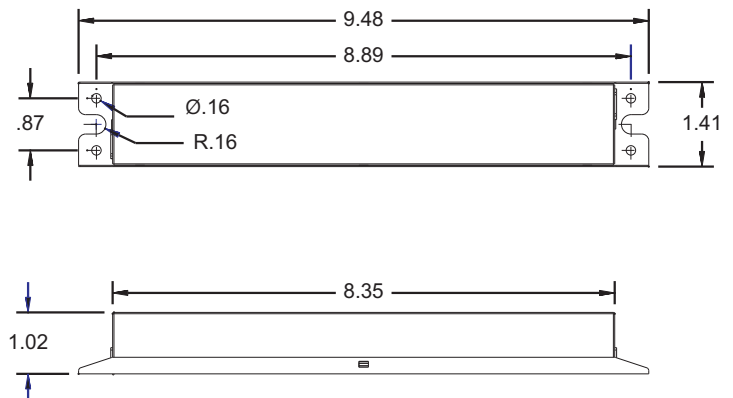

Where : L = Length, W = Width, H = Height