

# WH44-UNV-L

## Instant Start Fluorescent Ballast

- Solid State Electronic Ballast
- Instant Start
- Universal Voltage: 120-277VAC  $\pm 10\%$ , 50/60Hz
- cUL Listed, Class P, RoHS

## General Specifications

Input Voltage	120-277VAC $\pm 10\%$ , 50/60Hz
Power Factor	High Power Factor
THD	< 10% @ Full Power
EMI / RFI Compliance	FCC Part 18-A
Sound Rating	" A "
Ballast Type	Instant Start
Voltage Transients	ANSI C82.11 - 1993 / C62.41
Min. Operating Temp	0°C (32°F)
Max. Case Temp	70°C (158°F)
Approvals Class	cUL Listed, Class "P", 1 Outdoor, RoHS Compliant
Warranty	5 Years from the date of manufacture when properly installed

## This Ballast Will Operate The Following Lamp Types:

### Lamp Type

CFQ	T10
CFTR	T12
CFT	T12SL
FT	T12HO
T9CR	
T5CR	
T5	
T5HO	
T6SL	
T8	
T8SL	
T8HO	

\* Please contact Fulham customer services for particular lamp/ballast specifications.

## Wiring Diagram

Wire Color	Length (Inches)
Black	18" $\pm 1$ "
White	18" $\pm 1$ "
Red	36" $\pm 1$ "
Yellow	36" $\pm 1$ "

Wiring configurations vary depending on the lamp type. Please refer to Fulham's Wiring Diagram Finder in the link below:


• <https://www.fulham.com/contact-us/wiring-diagrams/>

## Product Image



NOTE : This ballast case must be grounded

## Mechanical Data

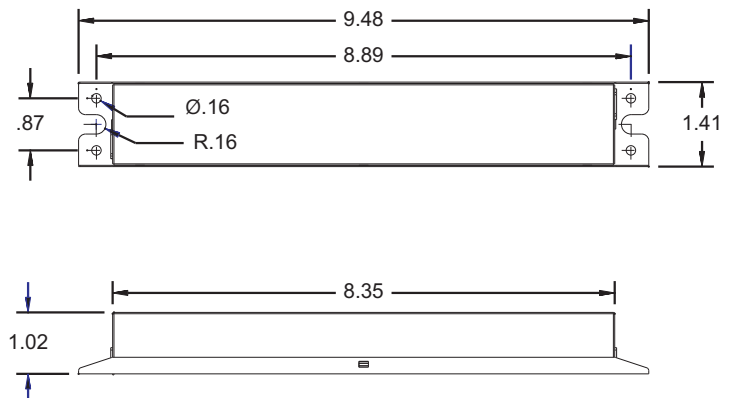

Where : L = Length, W = Width, H = Height