




Project	Type	Model #	
Remarks			

Description: Firehorse Emergency Ballast for use with or without AC ballast designed to add emergency lighting when main AC power is interrupted for minimum of 90 minutes at reduced illumination. The emergency ballast is not intended for general purpose lighting applications. Complies with minimum light output for emergency lighting equipment as per UL 924, supplement "SH". Consult with factory when using EM Ballast with low mercury lamps (TCP).


- This Ballast Will Operate Following Lamps.

 1 X F14T5, F21T5, F28T5, F24T5HO, F35T5, F39T5HO, F54T5HO, F17T8, F25T8, F32T8(28W), F32T8(32W), F40T8, F44T8HO, F51T8, F59T8, F86T8HO, F20T12, F25T12, F30T12, F30T12, F35T12, F30T12, F35T12, F30T12HO(110), F96T12HO(160), F96T12(215), FT18W, FT24W, FT36W, F140W, F150W, F15

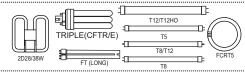

ELECTRICAL DATA

BALLAST TYPE / OUTPUT TYPE	EMERGENCY			
INPUT VOLTAGE	120V OR 277V ± 10%, 60 Hz			
AC INPUT POWER RATING	3.7W @ 120V / 4W @ 277V			
AC INPUT CURRENT RATING	270mA @ 120V / 250mA @ 277V			
BATTERY TYPE	MAINTENANCE FREE - HIGH TEMPERATURE RECHARGEABLE SEALED NI-CAD			
BATTERY VOLTAGE	14.4Vdc			
BATTERY CHARGING CURRENT	230mA			
BATTERY RATING	57.6Wh			
BATTERYCAPACITY	4.0Ah			
TEMPERATURE RATING (AMBIENT)	0°C TO 50°C (32°F TO 122°F)			
MAX INITIAL LIGHT OUTPUT	3000 LUMENS			
MINIMUM ILLUMINATION TIME	90 MINUTES			
RECHARGE TIME	24 HOURS			
TEST SWITCH TYPE	ILLUMINATED TEST SWITCH PILOT LIGHT W/ REMOTE PLATE			
CHARGING INDICATOR LIGHT TYPE	LED			
CASE PROFILE	16.4"L X 5.6"W X 1.75"H X 15.1 MOUNTING CENTER			
CASE WEIGHT	8.2 lbs			
CASE TYPE	VANDAL RESISTANT- SEALED			
CASE CONTRUCTION	PAINTED STEEL RED FINISH			
WIRE CONNECTION	SINGLE 2' FLEX CONDUIT W/ HIP/STD - LEADS ONE END			
APPROVAL CLASS	ULS EISTED FOR DAMP LOCATION - FACTORY OR FIELD INSTALLATION			
CODE COMPLIANCE	MEETS OR EXCEEDS UL924 - N.E.C AND NFPA 101 LIFE SAFETY CODE EMERGENCY OPERATING REQUIREMENT			
AC COMPATIBILITY	ELECTRONIC FLUORESCENT - STANDARD AND DIMMING			
LAMP COMPATIBILITY	FLUORESCENT SINGLE / BI-PIN / 4-PIN WITHOUT INTEGRAL STARTER			
FIXTURE COMPATIBILITY	INDOOR SWITCHED AND UN-SWITCHED TYPE			
END OF LIFE (EOL) COMPATIBILITY	YES (TIME DELAY CIRCUIT)			
WARRANTY	5 YEARS			

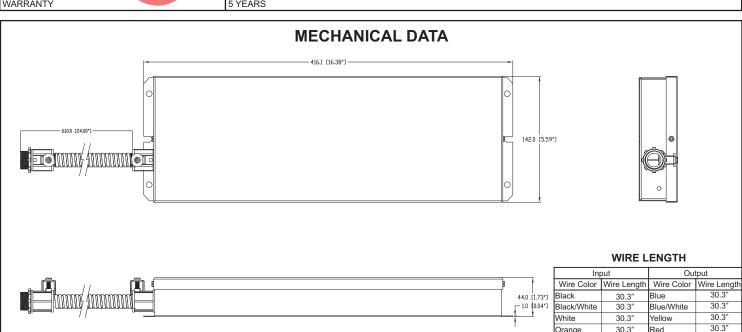

30.3

30.3

30.3

Orange

White

Red

Violet

Red/White

30.3

30.3

30.3"





APPLICATION

The FireHorse emergency ballast can be used to add emergency lighting with or without an AC ballast and with most fluorescent luminaires without affecting normal luminaire operation. The emergency ballast is designed for factory or field installation and can be mounted on top, inside, or remote from the luminaire.

If used in an emergency-only luminaire, no AC ballast is required. The FireHorse emergency ballast is not suitable for use in air handling heated air outlets, outdoor, wet, or hazardous locations. The emergency ballast should not be installed near gas or electric heaters. The FireHorse emergency ballast is rated for Indoor Dry/Damp locations, including luminaires rated for UL wet locations.

FUL HAND WATER TO THE PROPERTY OF THE PROPERT



Hardware kit and instruction sheets are included with EM Ballast

OPERATION

The FireHorse emergency ballast is designed to immediately switch to the emergency mode when the primary AC power is interrupted, illuminating one or two lamps at a reduced lumen output for a minimum of 90 minutes. Upon restoration of primary AC power; the FireHorse emergency ballast immediately returns to a battery charging mode. The LED indicator light source when illuminated indicates battery is in charge mode when AC power is applied. It is recommended and by code required to test the emergency ballast every 30 days to ensure that the ballast is functioning as evidenced by reduced illumination of one or two lamps when pushing the test switch. It is also recommended a 90 minute discharge test is performed one time every 12 months. Battery requires 24 hours to fully re-charge.

INSTALLATION

The FireHorse emergency ballast may be used with either a switched or un-switched luminaire. If a switched luminaire is used, an un-switched hot lead must be connected to the emergency ballast to ensure the ballast remains in an uninterrupted charge condition while primary AC power source is active. Reference Installation Instructions for appropriate wiring or contact Fulham Customer Service.

The FireHorse emergency ballast must be fed from the same branch circuit as the AC ballast. Installation is not recommended with luminaires where the ambient temperature may fall below 0° C for extended periods as this may affect the operation of the emergency ballast.

REMOTE MOUNTING

The FireHorse emergency ballast may be remote-installed up to half the distance the AC ballast manufacturer recommends for remote mounting the AC ballast from the lamp, or up to 50 feet, whichever is less distance. The remote test switch plate may be mounted within 50 feet of the luminaire and is subject to NEC and applicable local electrical code.

UL and CODE COMPLIANCE

The FireHorse emergency ballast has been tested by Underwriters Laboratories in accordance with the standards contained in UL924, "Emergency Lighting and Power Equipment", and is UL approved for factory or field installations. Emergency illumination time meets or exceeds the National Electrical Code (NEC), Life Safety Code (NFPA-LSC) and UL 90 minute requirements. This product does not meet CEC Title 20 Code of Regulations.

BATTERY

The FireHorse emergency ballast contains a uniquely constructed, high-temperature rechargeable nickel cadmium battery. The battery is sealed within the ballast housing and is not replaceable. The battery must be recycled or disposed of properly and in compliance with federal, state and local regulations.

EMERGENCY ILLUMINATION

Illumination output varies with number of lamps, either 1 or 2 lamps, and lamp wattage requirement. The FireHorse model FH6-DUAL-3000L is designed to produce1800-3000 initial emergency lumen output; if model works with 2 lamps the total initial lumen is distributed between the 2 illuminated lamps. Refer to Table 1 for average lumen output for selected lamps.

SPECIFICATION

Emergency lighting shall be provided by using a FireHorse emergency ballast with a standard fluorescent luminaire equipped with or without an AC ballast. The emergency ballast shall be capable of operating one or two fluorescent lamps as referenced in Table 1. The emergency ballast shall conform to specifications contained in Electrical Data Table and comply with standards set forth by the current NEC. The emergency ballast shall be UL approved for installation on top, inside, or remote from the luminaire.

NOTE: USE OF LOW MERCURY "GREEN" LAMPS

A growing number of fluorescent lamp manufacturers have reduced the level of mercury content in their products. While this is helpful to the environment, the lower mercury content makes the lamp more difficult to start in emergency mode, particularly in a compact fluorescent cold-start emergency-only application without an AC ballast. Please contact Fulham Customer Service for further assistance if needed.

WARRANTY

Fulham Co., Inc. extends limited warranty only to the original purchaser or to the first user for the period of $\underline{5}$ years from the date of manufacture as indicated by the date code stamped on each product and when properly installed and under normal conditions of use. For additional warranty guide line, please refer to our Complete Product Catalog (www.fulham.com) OR call Customer Service at 1-323-779-2980. Due to a program of continuous improvement, Fulham Co., Inc. reserves the right to make any variation in design or construction to the equipment described.

	TABLE 1 LUMEN OUTPUT CHART						
ł	INITIAL INITIAL					DDOWAL.	
١	WITHOUT INTEGRAL	WATTS	LUMEN OUTPUT	BROWN CONNECTOR	LUMEN OUTPUT	BROWN CONNECTOR	
	STARTER		1 LAMP	LAMP	2-LAMPS	2-LAMPS	
Ī	F14T5	14W	1150	CLOSED	1200	OPEN	
[F21T5	21W	1650	CLOSED	1750	OPEN	
[F28T5	28W	2250	OPEN	2400	OPEN	
I	F24T5HO	24W	2700	CLOSED	2800	OPEN	
I	F35T5	35W	1750	CLOSED	1850	OPEN	
I	F39T5HO	39W	2650	CLOSED	2750	OPEN	
I	F54T5HO	54W	2900	OPEN	3000	OPEN	
1	F17T8	17W	1150	CLOSED	1200	OPEN	
Į	F25T8	25W	1650	CLOSED	1800	OPEN	
	F32T8	28W	1700	CLOSED	1800	OPEN	
Į	F32T8	32W	2850	CLOSED	2900	OPEN	
1	F40T8	40W	2900	CLOSED	2950	OPEN	
Į	F44T8HO	44W	2900	OPEN	Х	Х	
ĺ	F51T8	51W	3000	OPEN	Х	Х	
ĺ	F59T8	59W	3000	OPEN	Х	Х	
ĺ	F86T8HO	86W	2950	OPEN	Х	Х	
Í	F20T12	20W	900	CLOSED	950	OPEN	
1	F25T12	25W	1100	CLOSED	1200	OPEN	
ĺ	F30T12	30W	1550	CLOSED	1600	OPEN	
	F34T12	34W	1700	CLOSED	1800	OPEN	
Į	F40T12	40W	2250	CLOSED	2400	OPEN	
Į	F75T12	75W	2950	OPEN	Х	Х	
Į	F85T12	85W	3000	OPEN	Х	Х	
Į	F96T12HO	95W	3000	OPEN	Х	Х	
Į	F96T12HO	110W	3000	OPEN	Х	Х	
Į	F96T12HO	160W	3000	OPEN	Х	Х	
Į	F96T12HO	215W	3000	OPEN	Х	Х	
Į	FT 18W	18W	1100	CLOSED	1200	OPEN	
Į	FT 24W	24W	1350	CLOSED	1400	OPEN	
Į	FT 36W	36W	1650	CLOSED	1800	OPEN	
Į	FT 40W	40W	1750	CLOSED	1850	OPEN	
Į	FT 50W	50W	2200	CLOSED	2300	OPEN	
Į	FT 55W	55W	2450	CLOSED	X	Х	
Į	FT 80W	80W	2750	OPEN	Х	Х	
ļ	CFTR 32W	32W	1575	CLOSED	1700	OPEN	
Į	CFTR 42W	42W	1750	OPEN	1850	OPEN	
Į	CFTR 57W	57W	2350	OPEN	Х	Х	
ļ	CFQ 13W	13W	825	CLOSED	900	OPEN	
ļ	CFQ 18W	18W	925	CLOSED	1000	OPEN	
ļ	CFQ 21W	21W	1025	CLOSED	1000	OPEN	
ļ	CFQ 26W	26W	1250	CLOSED	1300	OPEN	
ŀ	2D 10W	10W	575	CLOSED	650	OPEN	
ŀ	2D 16W	16W	775	CLOSED	900	OPEN	
ŀ	2D 21W	21W	1050	CLOSED	1200	OPEN	
ŀ	2D 28W 2D 38W	28W 38W	1450	CLOSED	1550	OPEN	
ł			1650	CLOSED	1800	OPEN	
ł	2D 55W CRT5	55W 22W	2350 1400	CLOSED	2500 1550	OPEN OPEN	
ł	CRT5	40W	1650	CLOSED	1800	OPEN	
ł	CRT5	55W	2250	OPEN	2400	OPEN	
ł	CRT9	20W			800		
ŀ	CRT9	32W	750 1100	CLOSED		OPEN	
ŀ	CTR9	32VV 40W	1450	CLOSED	1250	OPEN OPEN	
ł	FBT8	32W	1100		1600 1200	OPEN	
ł	FBT12	34W	1025	CLOSED CLOSED	1100	OPEN	
ł	FBT12	40W	975	CLOSED	1050	OPEN	
ı	Partial list of lamps operated - contact Fulham Customer Service when						

Partial list of lamps operated - contact Fulham Customer Service when referencing alternative lamps - lumen ratings may vary with lamp specifications, light loss, lamp and luminaire maintenance and other utilization factors.

NOTE: WIRING DIAGRAMS SHOWN ON SEPARATE SHEET

"X" INDICATES LAMP COMBINATION NOT COMPATIBLE







EMERGENCY BALLAST AND AC BALLAST MUST BE FED FROM THE SAME BRANCH CIRCUIT. TYPICAL SCHEMATICS ONLY. MAY BE USED WITH OTHER BALLASTS. CONSULT THE FACTORY FOR OTHER WIRING DIAGRAMS

WIRING DIAGRAMS FOR ONE LAMP EMERGENCY OPERATION


1. ONE (1) LAMP RAPID START BALLAST

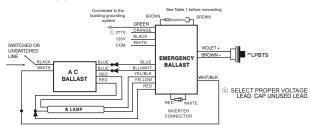


2. TWO (2) LAMP RAPID START BALLAST

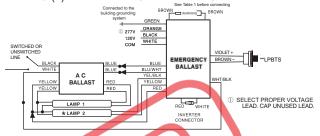


3. THREE (3) LAMP RAPID START BALLAST

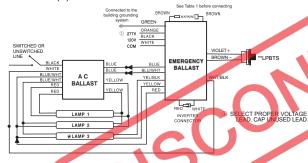


4. FOUR (4) LAMP RAPID START BALLAST

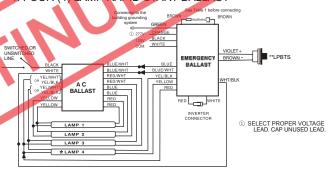


5. ONE (1) LAMP INSTANT START BALLAST

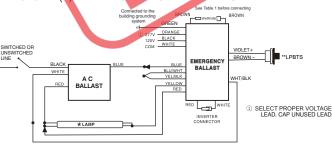


6. TWO (2) LAMP INSTANT START BALLAST

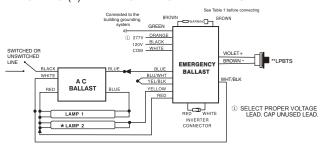

7. THREE (3) LAMP INSTANT START BALLAST

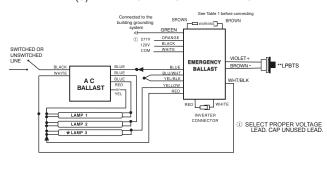

8. FOUR (4) LAMP INSTANT START BALLAST

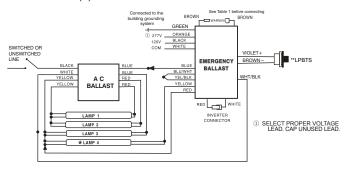

*AC / EMERGENCY

**LIGHTED PUSH BUTTON TEST SWITCH (LPBTS)

USE PROPER CAPS TO TAP UNUSED LEADS





EMERGENCY BALLAST AND AC BALLAST MUST BE FED FROM THE SAME BRANCH CIRCUIT.


TYPICAL SCHEMATICS ONLY. MAY BE USED WITH OTHER BALLASTS. CONSULT THE FACTORY FOR OTHER WIRING DIAGRAMS

WIRING DIAGRAMS FOR ONE LAMP EMERGENCY OPERATION


9. ONE (1) 4-PIN COMPACT LAMP RAPID START BALLAST

BROWN GREEN EMERGENC' BALLAST BLU/WHT YEL/BLK A C BALLAST RED WHITE INVERTER CONNECTOR SELECT PROPER VOLTAGE LEAD. CAP UNUSED LEAD.


10. TWO (2) 4-PIN COMPACT LAMP RAPID START BALLAST

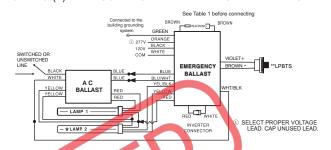

11. ONE (1) LAMP CIRCLINE RAPID START BALLAST

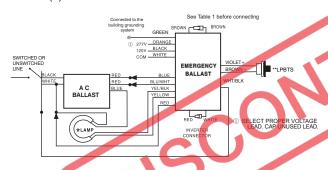


12. TWO (2) LAMP CIRCLINE RAPID START BALLAST

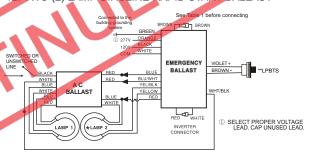


WIRING DIAGRAMS FOR TWO LAMP EMERGENCY OPERATION

TWO-LAMP EMERGENCY OPERATION IS NOT POSSIBLE WITH ALL BALLASTS. CONSULT THE FACTORY FOR ANY BALLAST OTHER THAN THOSE SHOWN.


1. TWO (2) LAMP RAPID START BALLAST

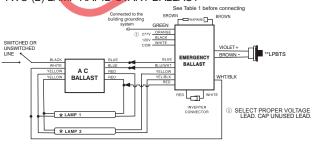


2. TWO (2) LAMP INSTANT START BALLAST

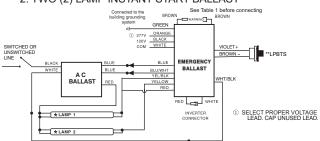

3. THREE (3) LAMP RAPID START BALLAST

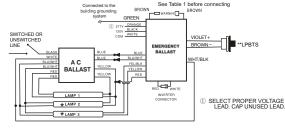

4. THREE (3) LAMP INSTANT START BALLAST

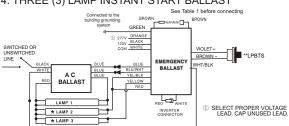

*AC / EMERGENCY

**LIGHTED PUSH BUTTON TEST SWITCH (LPBTS)

USE PROPER CAPS TO TAP UNUSED LEADS






EMERGENCY BALLAST AND AC BALLAST MUST BE FED FROM THE SAME BRANCH CIRCUIT. TYPICAL SCHEMATICS ONLY. MAY BE USED WITH OTHER BALLASTS. CONSULT THE FACTORY FOR OTHER WIRING DIAGRAMS

WIRING DIAGRAMS FOR TWO LAMP EMERGENCY OPERATION

TWO-LAMP EMERGENCY OPERATION IS NOT POSSIBLE WITH ALL BALLASTS. CONSULT THE FACTORY FOR ANY BALLAST OTHER THAN THOSE SHOWN.

5. FOUR (4) LAMP RAPID START BALLAST

6. FOUR (4) LAMP INSTANT START BALLAST

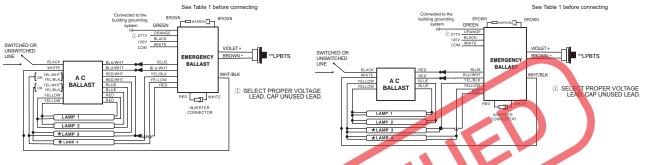


WIRING DIAGRAMS FOR EMERGENCY ONLY LUMINAIRES


1. ONE (1) LAMP WITHOUT AC BALLAST

See Table 1 before connecting See Table 1 before connecting SHOWN GREEN 1 277V ORANGE 120V BLACK COM WHITE CAP BLUE CAP BLUE CAP BLUE CAP BLUE VELOW RED WHITE NUMBER CAP SEECT PROPER VOLTAGE LEAD. CAP UNUSED LEAD. NUMBER CORRECTOR


2. TWO (2) LAMP WITHOUT AC BALLAST

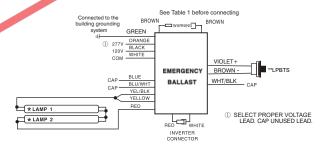

3. ONE (1) 4-PIN COMPACT LAMP WITHOUT AC BALLAST

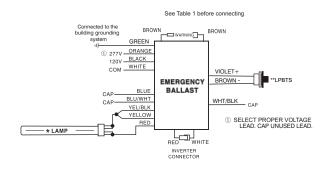

4. TWO (2) 4-PIN COMPACT LAMPS WITHOUT AC BALLAST

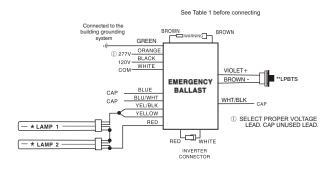

NOTE: GREEN WIRE MUST BE GROUNDED USE PROPER CAPS TO TAP UNUSED LEADS

*LIGHTED PUSH BUTTON TEST SWITCH (LPBTS)