



FHSCP-UNV3-16W-L-SD-AP



RoHS
COMPLIANT



Emergency LED Driver

- Universal Voltage: 100-347VAC, 50/60Hz
- Output Voltage Range: 15-55V $\overline{\text{---}}$
- Output Current: 1066mA Max
- Output Wattage: 16W
- Output Type: LED Class 2
- Number of Output Channels: 1 Channel
- Dry and Damp

General Specifications

Input Voltage / Frequency	100-347VAC , 50/60Hz
Input Current	0.1 A
Input Power	6 W
Maintain Power	<0.85W
Input Power Pass-Through Rating (AC Driver Line)	5A
Max Output Rating (LED+ LED- Terminal)	3A Max
	55V Max
Output Power	Typical 16W
Output Current Rated	1.066A Max
Output Voltage Range	15 - 55V $\overline{\text{---}}$
Number of Output Channels	1 Channel
Test Switch	Bi-Color
Input Surge Protection	3KV/6KV Ring wave, 1KV/2KV Combine surge
Protections	Output Open Protection
	Output Overload Protection
	Output Short Circuit Protection
	Over Temperature Protection
RFI/EMI	FCC Part15A
Ambient Operating Temperature Rang	0°C To 55°C (32°F To 131°F)
Tc	65°C (149°F)
Sound Rating	A
Battery Type	Lithium-ion
Battery Voltage	11.1V
Pack Capacity	5000mAh
Battery Rating	55.5Wh
Battery Count	3 Cells
Battery Recharge Time	24 Hours
Battery Discharge Time	1.5 Hours Min.
IP Rating	IP20
Test Switch Remote Mounting Distance	20' (6m) Max.
Service Life	50,000 hours
Warranty	5 Years From the date of manufacture when properly installed
Safety Standard	UL 924, UL 1310, CSA C22.2 No.141



FHSCP-UNV3-16W-L-SD-AP




RoHS
COMPLIANT



Mechanical Data

Overall Dimensions	
Length	9.45" (240mm)
Width	2.05" (52mm)
Height	1.34" (34mm)

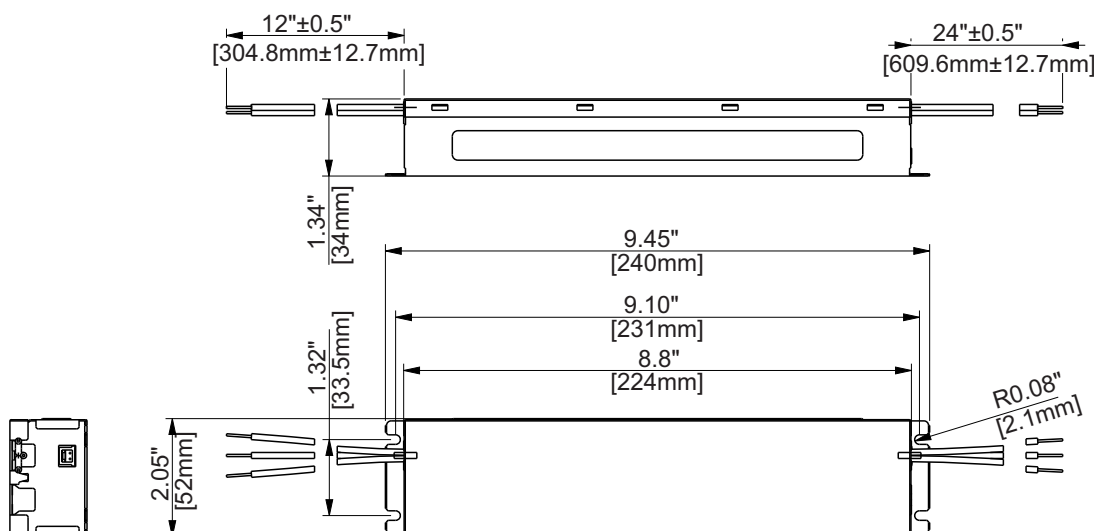

Tolerance=0.02"



FHSCP-UNV3-16W-L-SD-AP



RoHS
COMPLIANT



Accessories


Test switch wire

Recommended to be used in the luminaire





Optional Accessories

Bi-Color Wet Location Test Switch: FHS-TSTWL-BC

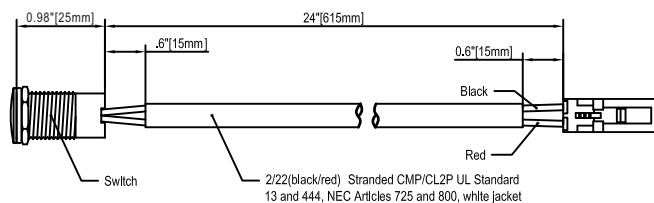

Overall Switch Dimension

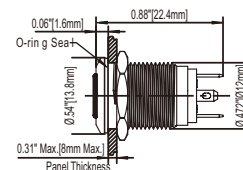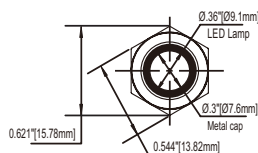

Mounting hole: $\phi 0.472'' - 0.492''$
[$\phi 12\text{mm} - 12.5\text{mm}$]



FHSCP-UNV3-16W-L-SD-AP



RoHS
COMPLIANT



Accessories


Optional Accessories

Wall Plate: FHSWLPWH




Wall plate and screw color:
white with black lettering

Wall Plate: FHSWLPPWH(Pure White Wall Plate)

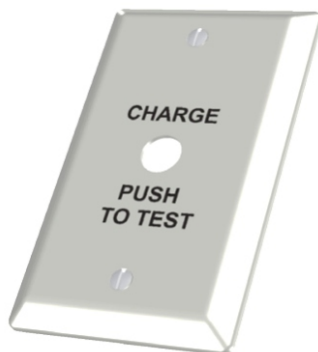

Wall plate and screw color:
Pure white with black lettering

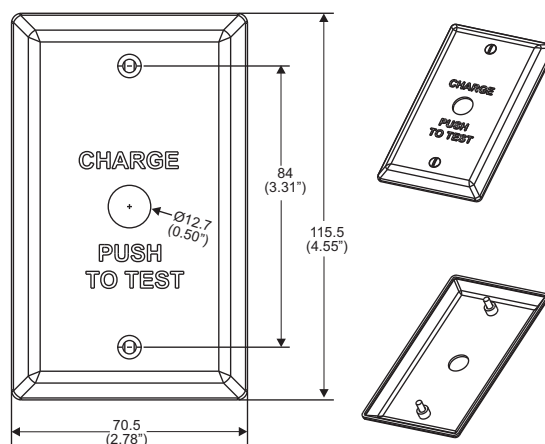

1. "Charge push to Test" plate
2. (2) 6-32 x 1/2" LG mounting screws




FHSCP-UNV-16W-L-SD-AP




RoHS
COMPLIANT



Wiring Diagram

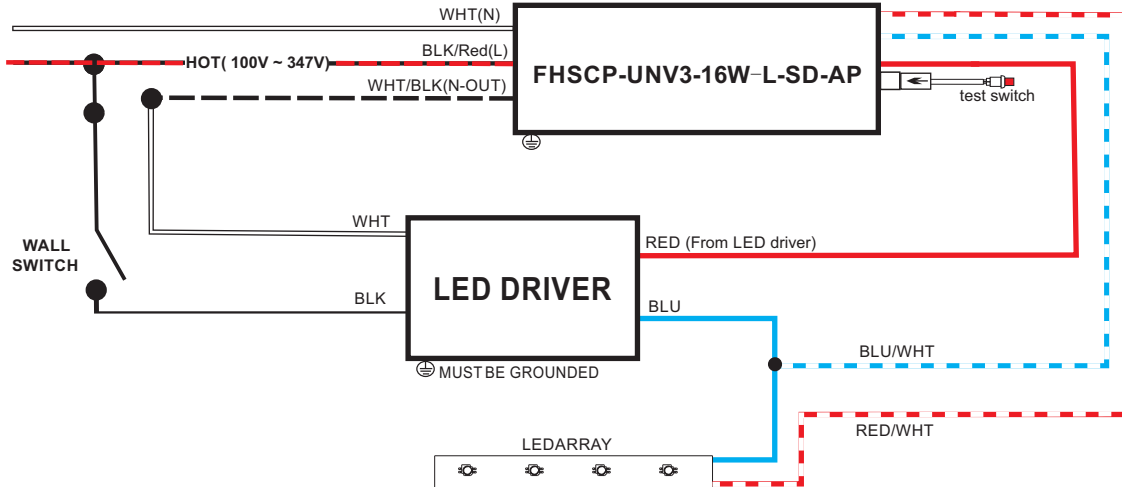

Wiring Diagram (Emergency Only)

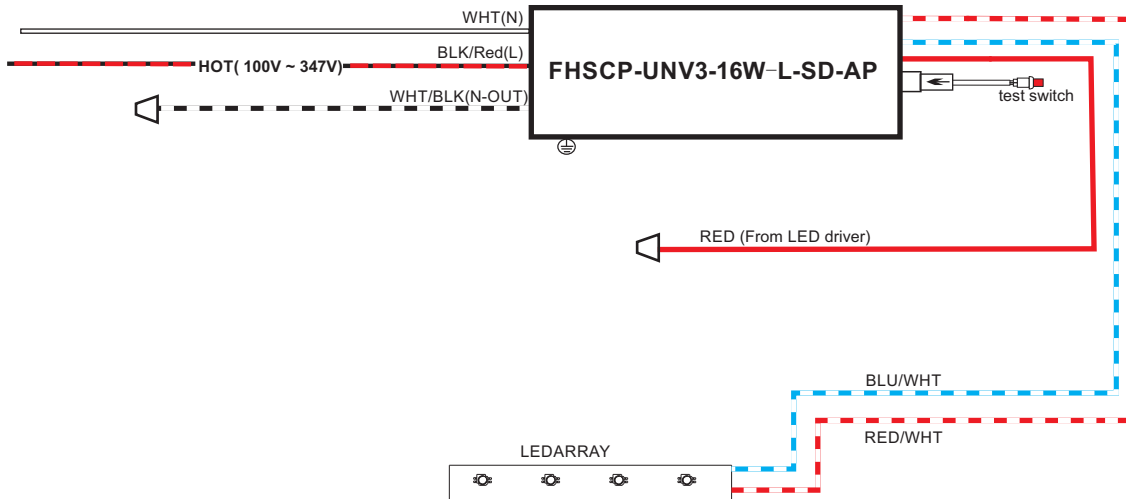



FHSCP-UNV3-16W-L-SD-AP



RoHS
COMPLIANT



SELF-DIAGNOSTIC INSTRUCTIONS / OPERATION:

If the self-diagnostic feature is enabled:

The emergency LED driver will conduct a self-check for sixty(60) seconds every thirty(30) days; and a ninety(90) minutes self-check every 12 months. After every self-check the LED indicator light will indicate a status signal. Check indicator status chart below to diagnose the status signal.

If the self-diagnostic feature is disabled:

User must conduct a manual test every thirty (30) days to ensure the emergency LED light source illuminates as intended. A full discharge test shall be conducted once a year; the LED light source shall illuminate for a minimum of ninety (90) minutes.

***Self-Diagnostic feature is factory enabled**

TEST SWITCH INDICATOR STATUS:

LED Indicators Status	EM Driver Status / Mode
● Solid Green	System OK/AC OK.
● Slow Flashing Red, 4s on / 1s off	Battery PACK not found.(Including Self-test/self-diagnostic)
● Flashing Red, 1s on / 1s off	Battery PACK fault. (Including Self-test/self-diagnostic)
● Flashing Green, 1s on / 1s off	Self-diagnose process ongoing.
● Slow Flashing Green, 0.1s on / 3s off	Normal working in EM mode. (Including Self-test/self-diagnostic)
● Flashing Red, 4s on/4s off	No load or output over voltage protection triggered , Check LED connection
● Solid Red	Over current protection. (Including Self-test/self-diagnostic)
● Flashing Green, 2s on/0.5s off	Self-diagnose enabled
● Flashing Green, 0.5s on/2s off	Self-diagnose disabled
● Flashing Red, 0.5s on/3s off	Self-diagnose process current fault or Battery voltage <87.5%.

TEST SWITCH OPERATIONS

EM Test:

Press and hold the test button (>1s) to enter EM mode in normal AC powered.

Manual Self-Diagnostic:

After charging twelve (12) hours at least, quickly press the test button three(3) times to force the controller to enter Self-Diagnostic cycle.

Query Self-Diagnostic Status:

Fast click 2 times within 2s to query the Self-Diagnostic Enabled/Disabled status. The indicator would blink for current status for 3 cycles. 2.s ON/0.5s OFF stands for Enabled. 0.5s ON/2sOFF stands for Disabled.

Cancel reporting error:

In standby, press and hold the button for about 5s to cancel the error indication.

Turn Off EM Output:

Press and hold the test switch for 5 seconds during EM output condition to turn off EM output. This is useful for production environment to turn off the EM output once a luminaire has completed functionality testing.



FHSCP-UNV3-16W-L-SD-AP



RoHS
COMPLIANT



Guidelines

Grounding

- Driver must be grounded by means of the Driver case.

Overload Protection

- If the maximum output power is exceeded, the LED driver switches off automatically, after elimination of the overload the normal operation is restored automatically.

LED Load

- Fulham's Hotspot Constant Power Emergency LED drivers are designed to drive passive LED's, COB's and LED assemblies. Proper function is not guaranteed when (LED) loads with active components are used.

Mounting and cooling

- Above an output power of 16W, the driver need to be mounted on a heat conductive surface of at least 100cm². Always test if the surface is sufficient enough before installing the LED driver.

Short Circuit Protection

- In case of a short circuit the LED driver switches to protection mode. After removal of the short-circuit the LED driver will Latch ,need restart AC Power.

No Load Operation

- In no-load operation the output voltage will not exceed the specific open circuit output voltage.

Hot Swapping

- This driver does not support the hot swapping of the LED's.

Remote Mounting

- up to 50ft with 18AWG wire. Contact Fulham for higher remote distance.

Warranty

- Reference Fulham's limited Warranty: <https://cdn.fulham.com/PDFs/Limited-Warranty.pdf>



FHSCP-UNV3-16W-L-SD-AP



Part Number Matrix


<u>FHS</u>	<u>CP</u>	<u>UNV3</u>	<u>16W</u>	<u>L</u>	<u>SD</u>	<u>AP</u>
LED Driver	Driver Type	Input Voltage	Max Output Power	Case Type	Special Features	Special Features
FHS = FireHorse HotSpot Driver	CP = Constant Power	UNV3 = 100V-347V	16W = 16 Watts	L = Long Case	SD = Self Diagnostic	AP = Asia Pacific

Product Image: FHSCP-UNV3-16W-L-SD-AP



Packaging

Master Carton

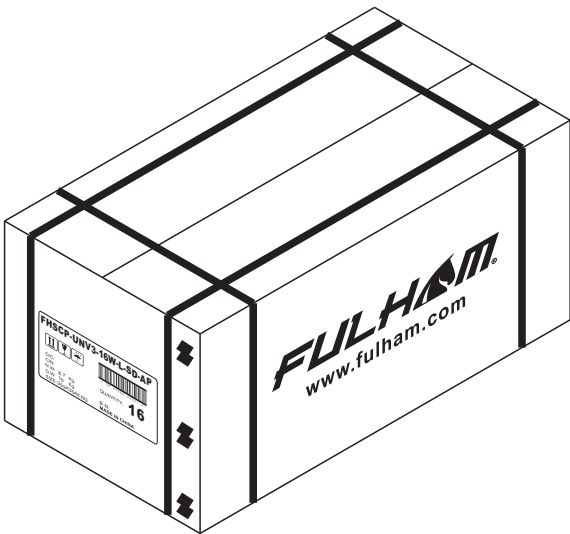

OUTER DIMENSION		
L	W	H
14.13"(359mm)	13.98"(354mm)	7.60"(193mm)
Net Weight	Gross Weight	QUANTITY
19.18lbs. (8.7kg.)	22.05lbs. (10kg)	16pcs.